

RUSKIN USER GUIDE

RBR*virtuoso*σ³


RBR*duo*σ³

RBR*concerto*σ³

RBR*maestro*σ³

RBR*brevio*σ³

RBR*quartz*σ³

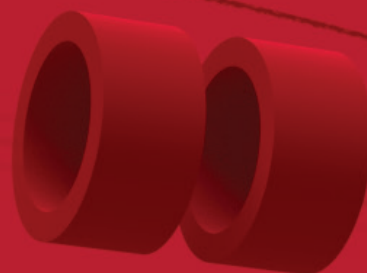

rbr-global.com

1 Table of Contents

1	Table of Contents	2
2	Ruskin	6
3	Revision history	7
4	Warranty statement	9
5	Introduction	10
6	Installation	11
6.1	Install Ruskin on a PC.....	11
6.2	Install Ruskin on a Mac	11
6.3	Update Ruskin	12
6.4	Uninstall Ruskin	13
7	Provide your feedback.....	14
8	Quick start	16
8.1	Deploy an instrument	16
8.2	Batteries	17
8.3	Using a simulated logger	18
8.4	View information about a logger.....	18
8.5	Recover an instrument and download data	19
8.6	Data format	19
8.7	Ruskin Mobile	21
8.7.1	Connecting over Wi-Fi to a mobile device	21
8.7.2	Instrument Tab.....	23
	Real-time Data.....	24
	Geotagging	24
	Channels.....	25
8.7.3	Starting or Stopping a Deployment	25
	Clock Sync	26
8.7.4	Accessing Datasets.....	27
	Uploading and Sharing Datasets.....	28
	Dropbox	28
8.7.5	Charting.....	29

8.7.6	Location & Tracking	32
8.7.7	Using the Tracking Feature.....	33
8.7.8	GPX Files	33
9	Configure a logger	35
9.1	Schedule a logger.....	39
9.1.1	Autonomy engine.....	41
	When to replace the batteries	41
	Predicting battery life	42
9.2	Stop logging	42
9.3	Averaging.....	42
9.4	Bursting	44
9.5	Directional	45
9.6	Tides and waves	47
9.6.1	Tides	47
9.6.2	Waves.....	48
9.6.3	wave deployment planning.....	50
	wave logger positioning.....	51
9.7	Gate conditions	53
9.7.1	Twist activation.....	53
9.8	Fetching and streaming data	54
9.9	Mobile settings	55
9.10	Autoranging and fixed gain	55
9.11	Voltage channel parameters	56
9.12	Valve control.....	56
9.13	Derived channel parameters	57
9.14	Deployment.....	58
9.15	Automatic tasks.....	58
9.15.1	Auto-download	59
9.15.2	Auto-stop	59
9.15.3	Auto-deploy.....	60
10	Download	61
10.1	Download data from the logger	61
10.2	File naming convention	61

11	Calibration tab	62
12	Update firmware	63
12.1	Manually adding a firmware image to Ruskin	65
13	Datasets	66
13.1	Open a stored dataset	66
13.2	Analysis	66
13.2.1	Analysis tab	66
	Cursor tab	66
	Calibration tab	68
13.3	Overview	68
13.4	Channels	69
13.4.1	Information tab	69
13.4.2	Calibration tab	70
13.4.3	Parameters tab	70
13.5	File info	71
13.6	Plot view	72
13.6.1	Thumbnail view	73
13.6.2	Live data	73
13.6.3	Plot Tools	73
	Dataset toolbar	73
	Live plot toolbar	74
	Tools for datasets and live data	74
	Tools for live data	78
13.6.4	Shortcuts / Controls	78
13.7	Exporting datasets	79
14	User calibration	80
14.1	N-Point calibration	80
14.2	Oxyguard DO calibration	80
14.3	Rinko optode calibration	82
14.4	Turbidity calibration	84
14.4.1	Two-point calibration	85
14.4.2	One-point calibration	87
14.5	Idronaut pH calibration	90


14.6 RBRcoda T.ODO - User calibration	91
14.6.1 Collecting a calibration file.....	92
14.6.2 Performing a calibration.....	92
14.6.3 Creating a calibration region.....	93
14.6.4 Plateau creation.....	94
Automatic	94
Manual	95
14.6.5 Plateau deletion	96
14.6.6 Reference data entry.....	97
Automatic	97
Manual	98
Saving coefficients	99
15 Preferences.....	100
15.1 Specify location for data files	100
15.2 Specify location for realtime data files	100
15.3 Specify location for log files	100
15.4 Specify Language selection	101
15.5 Using advanced sampling controls.....	101
15.6 Using advanced calibration controls	101
15.7 Derived channel preferences.....	102
15.7.1 Add depth as a derived channel	103
15.7.2 Add dissolved oxygen as a derived channel	103
15.7.3 Calculate derived channels when sensors are missing.....	103
15.8 Specifying plotting preferences	104
15.8.1 Channel visibility tab	104
15.8.2 Channel colours tab.....	105

2 Ruskin

Ruskin is the RBR software that manages your RBR loggers to provide all the data necessary to do your work. Ruskin provides a graphical user interface that makes using the loggers easy. You can use Ruskin to do the following:

- Configure, schedule, and enable multiple loggers.
- Download data after logging.
- View data sets graphically.
- Export data in various formats.
- Change the calibration coefficients for your logger.

Ruskin can be used on PC and Mac.

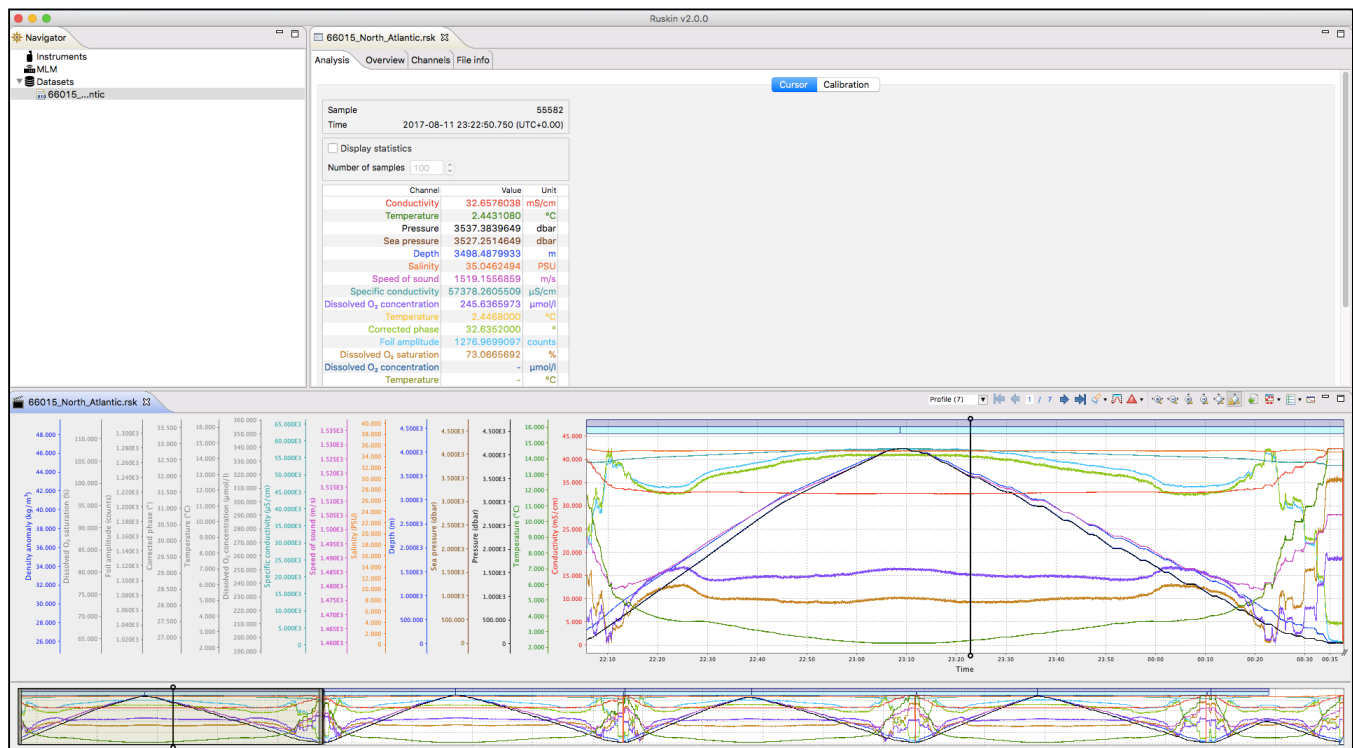

3 Revision history

Revision No.	Release Date	Notes
1.0	7-Oct-2011	Original
2.0	15-Oct-2012	Adding RBRvirtuoso and RBRconcerto, and new features
2.1	28-Jan-2013	Adding thresholding and AMT pH calibration, editing autoranging, thumbnail view, parameters tab, file export, event button, and calibration
3	26-Jun-2013	Initial controlled release, new part #, no other changes
4	22-Jul-2013	Ruskin v1.8.3 additions
5	02-Sep-2014	Migrated to new editing system, updated for Ruskin v1.8.20
6	22-Dec-2014	Added auxiliary controls
7	12-Jan-2015	Added bursting controls
B	12-Sept-2017	Final revision for standard loggers
C	02-Feb-2018	Logger 3 features
D	12-Dec-2018	Updated installation details, screenshots, added auto-deploy features

Revision No.	Release Date	Notes
E	13-Mar-2019	Updated plotting information, firmware upgrades, and screenshots
F	06-Jun-2019	Added directional sampling, updated introduction, updated images
G	04-May-2020	RBRquartz ³ BPR zero features, RBRcoda T.ODO customer calibration, updated images, and removal of Logger hardware
H	18-Aug-2020	Updated firmware upgrade procedure, added annotation collapsing/expanding, and GPS plotting



4 Warranty statement

All data loggers manufactured by RBR are warranted against defects in workmanship or original parts and materials for one year. Third party sensors (not manufactured by RBR) are limited to the warranty provided by the original manufacturer.

Units suffering from such defects will be repaired or replaced at the discretion of RBR, provided that the problem has appeared during normal use of the instrument for the purpose intended by us. The liability of extends only to the replacement cost of the instrument. The customer will bear all costs of shipment to us for repair; all other costs, including return shipment, will be borne by RBR.

This warranty does not cover consumables or normal wear and tear, nor does it cover damage caused by negligent use or mishandling. Attempted modification or repair of any unit without the prior consent of RBR will immediately void any warranty in force.

Users are expected to maintain a regular program of calibration.

We reserve the right to grant or refuse warranty repairs at our discretion if we consider that there are reasonable grounds for doing so.

5 Introduction

This document introduces you to Ruskin and helps you to use it effectively from the start. It is written specifically for the RBR*virtuoso*³, RBR*duo*³, RBR*concerto*³, RBR*quartz*³, and RBR*maestro*³ loggers.

You can access the Ruskin User Guide on the USB data stick provided when you purchase a logger, from the Help menu in Ruskin, and on the RBR web site, at www.rbr-global.com.

Release notes are automatically displayed each time you install an updated version of Ruskin. The most recent release notes are also available from the Help menu in Ruskin. For information about operating and maintaining your data logger, see the Logger Hardware section. It helps explain how to change the battery and change desiccant, including other useful information, such as inspecting and replacing O-rings.

6 Installation

6.1 Install Ruskin on a PC


You can install Ruskin on a PC that runs the Windows 7, 8, 8.1, or 10 operating system.

The minimum requirements for Ruskin are:


- OS = Windows 7
- Processor speed = 1.4GHz
- RAM required = 2GB
- Display resolution = 1024x768 recommended
- HDD space for installation = 500MB

Steps

1. Connect the data stick included with your instrument to a USB port.
2. Navigate to the folder Ruskin Installation and double click on the file `RuskinSetup.exe`.
3. Follow the installation wizard. By default, Ruskin will be installed to `C:\RBR`.
4. The logger uses a USB interface to communicate with Ruskin.
At the end of the installation, a prompt will appear asking, "Would you like to install the logger driver at this time?"
5. Click **Yes** to install the drivers.

 You may need to run the setup application as an administrator to install the driver correctly.

A shortcut to Ruskin appears on the desktop and in a **Start** menu folder called Ruskin.

 Please note that the most recent version of Ruskin can be found at <https://rbr-global.com/products/software>


6.2 Install Ruskin on a Mac

You can install Ruskin on a Mac running OS X 10.12 (Sierra) or later.

Steps

1. Connect the data stick included with your instrument to a USB port.
2. Navigate to the folder OSX and double click on the file `Ruskin.dmg`.
3. When the disk image window opens, drag the Ruskin icon into the applications directory and wait for the copy to complete.
4. To open Ruskin for the first time navigate to your applications directory, locate Ruskin, right click on the icon, and select **Open**.

5. The dialogue box shown below will prompt you to authorize the opening of Ruskin.

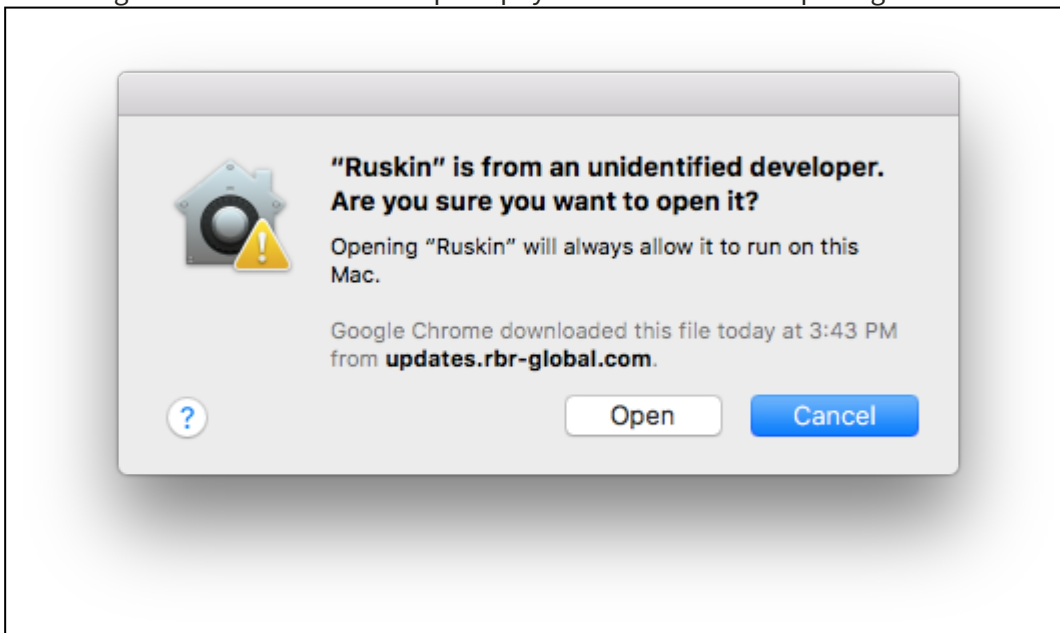

⚠ It may be required that you navigate to **System Preferences > Security & privacy** to allow apps downloaded from “**Anywhere**” to complete the installation.

i Although you can specify a different folder for the working directory for the software, we recommend that you use the default **Applications** folder.

An application named Ruskin appears in the **Applications** folder.

You may want to drag the Ruskin.app application to the **Dock**.

6.3 Update Ruskin

To take advantage of new features and bug fixes, ensure that you are using the most recent version of Ruskin.

It is not necessary to uninstall an older version of Ruskin before installing a newer version. The installation program deletes the older files before installing the newer ones. It does not delete any Ruskin data files or log files.

The most recent version of Ruskin is always available on the RBR website (www.rbr-global.com). However, if you already have an older version of Ruskin installed, Ruskin automatically notifies you that a newer version is available when you start Ruskin. You can check to see if a new version is available from within Ruskin navigating to the menu **Help > Check for updates**. If you have a broadband connection, we recommend that you follow the installation instructions that appear on your computer. Otherwise, request a USB stick from RBR.

⚠ If you do not have a broadband connection and/or are unable to install the Ruskin updates, update notifications are available via email. To receive these notifications, send an email to: support@rbr-global.com subject: "Ruskin update request".

6.4 Uninstall Ruskin

If you no longer need to manage RBR instruments from your computer, you can uninstall Ruskin.



Removing Ruskin will not delete your data files or your diagnostic logs.

It is not necessary to uninstall an older version of Ruskin before installing a newer version. The installation program deletes the older files before installing the newer ones. For more information, see [Update Ruskin](#).

Windows 7, 8, 8.1, or 10

Go to **Start > Control Panel > Programs**, and under **Programs and Features**, click **Uninstall a program**. In the list, locate **Ruskin** – click **Ruskin** to highlight it, and then click **Uninstall**.

OS X 10.5 or later

Move the Ruskin application from **Applications** to the **Trash**.

7 Provide your feedback

You can get in touch with RBR in several different ways:

- Send us an email. For a technical question, write to support@rbr-global.com. For general inquiries, use info@rbr-global.com.
- Send us a bug report from within Ruskin itself. Use the **Help** menu > **Comment on Ruskin**. This allows you to include the diagnostic logs, and any other files (RSK datasets, screenshots) that will help us reproduce the problem and help you as quickly as possible.

Steps

1. From the **Help** menu, click **Comment on Ruskin**.
The Feedback to RBR dialog box appears.
2. Enter your identification information, for example, email address and name, and then summarize your comments.
3. Provide a detailed description and add any attachments, if required.
4. Click **Submit** to submit the report.

Feedback to RBR

Report bug or enhancement

☒ General user

Name: Customer

Email address: Customer@email.com

☐ RBR employee

Summary:

Instrument type - problem statement

Description:

1. Serial number

2. Overview of the problem

3. Deployment details

4. Initial tests

For RSK / Ruskin issues

5. Steps to reproduce the issue

Attachments: Include any datafiles (RSK or HEX) and or photos of the issue

Attachments:

Attach...

Cancel

Submit

8 Quick start


8.1 Deploy an instrument

Before you begin using your RBR loggers, you may want to experiment with the simulated loggers that are included in Ruskin. For instructions on simulating a logger, see [Using a simulated logger](#).

When you are ready to use your own RBR loggers, we recommend that you follow the following steps to ensure that you measure exactly what you want on the first attempt.

Steps

- To establish communication between the logger and a computer, remove the battery end cap and locate the USB-C connector, just below the battery cover, or on the underside of the battery end cap for the RBRquartz³ BPR|zero. The supplied interface cable is plugged into this connector. The USB-C connector can be inserted with either side facing up.
- The logger should appear in the **Navigators** view after a few seconds.
- If you are using the logger for the first time, you can use either the default preferences or specify your preferences to apply to all your loggers. For more information, see [Preferences](#). You can change these preferences at any time.
- Click the logger that you want to use. Ensure that it contains the sensors you expect to find on the logger by viewing the **Information** tab in the **Properties** view on the right side of the Ruskin window. For more information, see [View information about a logger](#).

If you want to see live data sampled every few seconds but not saved, select the fetching () button in the toolbar located above the **Plot** view. The **Plot** view is located at the bottom of the Ruskin window.

- Click the **Configuration** tab to specify streaming.



You must specify your preferences regarding these features before you enable the schedule. For more information, see [Configure a logger](#).

- If you want to view or modify calibration coefficients, click the **Calibration** tab. For more information, see [Calibration tab](#).
- Click the **Configuration** tab > **Sampling** section to schedule the logger to take samples when and as often as you want within the limits of your logger. For more information, see [Schedule a logger](#).

Ruskin prevents you from enabling a schedule that exceeds the memory capacity of the logger. Ruskin also shows the estimated battery usage required to use your logger as scheduled. You should seriously consider this information before you enable the schedule.

- On the **Configuration** tab, click **Enable** to take samples according to the schedule that you specified. If you enabled streaming data, you will see the data appear immediately once the logger is enabled in the **Plot** view toolbar.


- If you want to download data, click the **Download** button from the **Configuration** tab to download all the data saved since your schedule was enabled. For more information, see [Download](#). The focus changes to the new dataset in the **Navigator** view, and the static data appears in the **Plot** view. You can now export the downloaded data to a file in Excel or text. You can also save the image as a PDF or PNG file for viewing outside Ruskin.


8.2 Batteries


RBR dataloggers can use most chemistries of AA battery.

We estimate the deployment time based on a capacity calculated from the nominal voltage and milliamp hours (mAh)

Name	Chemistry	Model	Voltage (V)	mAh
Lithium thionyl chloride	LiSOCL ₂	Tadiran TL-4903S	3.7	2400
Lithium	Li-FeS ₂	Energizer L91AA	1.5	3500
Alkaline	Zn-MnO ₂	Rayovac AL-AA	1.5	2500
Li-ion	LiNiMnCo	BatterySpace LC14500	3.6	750
NiMH	NiMH	Duracell DX1500B4N	1.2	2400

 Lithium thionyl chloride batteries are only recommended for T, D, T.D, and C.T.D instruments. Sensors with high in rush current will not work correctly on this type of battery.

 The different chemistries affect the deployment time, so ensure you have selected the appropriate battery chemistry in the power section of the **configuration** tab when using the [autonomy engine](#) to get the most accurate deployment estimate.

 Mixing batteries of different chemistries, brands, and age will reduce performance and potentially damage the instrument. Batteries that are not matched properly can become overheated, causing them to leak and potentially explode.

8.3 Using a simulated logger

Ruskin can simulate most logger types that RBR produces. We recommend that you experiment with your type of simulated logger before enabling a schedule for your actual RBR logger. This practice helps you become more familiar with how an RBR data logger interacts with Ruskin and how to configure the settings and features within Ruskin.

Configuring a simulated logger

1. From the **Instruments** menu, click **Simulate instrument**.
The **Configure Simulated Instrument** dialog box appears.
2. Click on the tab that correlates to your logger's family type.
For example, if simulating an RBR*virtuoso*³, you would select the **Standard Instruments** tab.
3. Select from the information provided within the logger's tab.
4. Click **OK**.
The simulated logger appears under **Instruments** in the **Navigator** view.
5. Go to the **Navigator** view and click the new simulated logger to see the general information and configuration settings in the **Properties** window.

You can now work with this logger the same way as you work with a real RBR logger, including: configuring, calibrating, and fetching data. Currently simulated instruments cannot be enabled or downloaded. For more information, see [Deploy an instrument](#).

Multiple loggers, both real and simulated, can be listed in your **Navigator** window.



If you want to remove a simulated logger, in the **Navigator** window, right-click the logger and click **Disconnect from instrument**. You can also use the **Instruments** menu.

8.4 View information about a logger

You can view static information about a logger at any time as follows:


In the **Navigator** view, click the appropriate logger.

The **Information** tab in the **Properties** window on the right side of Ruskin identifies the logger. Its general information such as model, serial number, generation, firmware version, battery status, and the channels.

Configuration	Information	Calibration	Parameters																																																												
Logger details Model: RBRmaestro ³ Generation: Late 2017 Serial: 907011 Firmware: 1.099 Link: USB		Channels <table border="1"> <thead> <tr> <th>#</th> <th>Parameter</th> <th>Units</th> <th>Sensor</th> <th>Ranging</th> </tr> </thead> <tbody> <tr><td>1</td><td>Conductivity</td><td>mS/cm</td><td>Marine</td><td>None</td></tr> <tr><td>2</td><td>Temperature</td><td>°C</td><td>Marine</td><td>None</td></tr> <tr><td>3</td><td>Pressure</td><td>dbar</td><td>RBR</td><td>None</td></tr> <tr><td>4</td><td>Temperature</td><td>°C</td><td>RBRcoda T.ODO</td><td>None</td></tr> <tr><td>5</td><td>Dissolved O₂ concentration</td><td>µmol/l</td><td>RBRcoda T.ODO</td><td>None</td></tr> <tr><td>6</td><td>Voltage</td><td>V</td><td>0v to +5v</td><td>None</td></tr> <tr><td>7</td><td>Turbidity</td><td>NTU</td><td>Seapoint</td><td>Auto</td></tr> <tr><td>8</td><td>Sea pressure</td><td>dbar</td><td>derived</td><td>None</td></tr> <tr><td>9</td><td>Depth</td><td>m</td><td>derived</td><td>None</td></tr> <tr><td>10</td><td>Salinity</td><td>PSU</td><td>derived</td><td>None</td></tr> <tr><td>11</td><td>Specific conductivity</td><td>uS/cm</td><td>derived</td><td>None</td></tr> </tbody> </table>		#	Parameter	Units	Sensor	Ranging	1	Conductivity	mS/cm	Marine	None	2	Temperature	°C	Marine	None	3	Pressure	dbar	RBR	None	4	Temperature	°C	RBRcoda T.ODO	None	5	Dissolved O ₂ concentration	µmol/l	RBRcoda T.ODO	None	6	Voltage	V	0v to +5v	None	7	Turbidity	NTU	Seapoint	Auto	8	Sea pressure	dbar	derived	None	9	Depth	m	derived	None	10	Salinity	PSU	derived	None	11	Specific conductivity	uS/cm	derived	None
#	Parameter	Units	Sensor	Ranging																																																											
1	Conductivity	mS/cm	Marine	None																																																											
2	Temperature	°C	Marine	None																																																											
3	Pressure	dbar	RBR	None																																																											
4	Temperature	°C	RBRcoda T.ODO	None																																																											
5	Dissolved O ₂ concentration	µmol/l	RBRcoda T.ODO	None																																																											
6	Voltage	V	0v to +5v	None																																																											
7	Turbidity	NTU	Seapoint	Auto																																																											
8	Sea pressure	dbar	derived	None																																																											
9	Depth	m	derived	None																																																											
10	Salinity	PSU	derived	None																																																											
11	Specific conductivity	uS/cm	derived	None																																																											
Power Source: USB Internal: 12.0V External: 0.0V																																																															

8.5 Recover an instrument and download data

When the deployment is complete recover your instrument and follow these steps to download your data.

 Flooded loggers may be under pressure and opening a logger may be dangerous - take precautions when opening a logger

Steps

1. Start Ruskin.
2. Carefully open the battery end cap of the logger.
3. Insert the USB-C connector into the logger and connect the cable to your computer.
4. The logger appears in the navigator window and then navigate to the **Configuration** tab and select **Download...** (see [Download](#)).
5. Save the file to a preferred location.
6. Evaluate your data (see [Analysis](#)).

8.6 Data format

Data can either be streamed from an instrument (requires a deployment to be enabled) or it can be fetched from the instrument.

Realtime data can be formatted in a limited number of formats as described below. Each format is listed alongside and an example output for an RBRconcerto³ C.T.D:

Output format option	Instrument setting	Example data
Standard resolution	caltext01	2018-12-10 13:06:38.000, 0.0005, 22.9536, 10.1149

Output format option	Instrument setting	Example data
Standard resolution (units)	caltext02	2018-12-10 13:06:38.000, 0.0005 mS/cm, 22.9536C, 10.1149 dbar
Highest resolution (RBRquartz)	caltext03	2018-12-10 13:06:38.000, 0.000525642944, 22.939636, 10.1149120
Engineering	caltext04	2018-12-10 13:06:38.000, 525.642944e-006, 22.9396360e+000, 10.1149120e+000

The output format can be changed in Ruskin from the instrument's **Configuration** tab. There is a drop down menu item called **format** in the **Options** section.

The screenshot shows a software interface with a title bar 'Options'. Below it, there are two dropdown menus. The first is labeled 'Realtime:' and has 'None' selected. The second is labeled 'Format:' and has 'Standard resolution' selected. Both dropdowns have blue arrows indicating they are interactive.

- **Standard resolution**
 - All data values are shown to 4 decimal places
- **Standard resolution (units)**
 - All data values are shown to 4 decimal places
 - Following the value, and separated from it by a space, is a short string representing the units of measurement.
- **Highest resolution (RBRquartz)**
 - All values are shown with enough significant digits ensuring no loss of resolution.
- **Engineering**
 - All values are shown in 'engineering-notation' floating point (same as scientific notation except that the exponents are constrained to be multiples of three) with enough significant digits ensuring no loss of resolution.

The values following the timestamp are all the enabled channels. To identify which channels are enabled and their order in the string you can use the command **outputformat channellist**.

Example:

```
>> outputformat channellist
<< outputformat channellist = conductivity(mS/cm)|temperature(C)|pressure(dbar)
```


8.7 Ruskin Mobile



8.7.1 Connecting over Wi-Fi to a mobile device


Install the Ruskin App on your mobile device by going to the Apple App store or Google Play.


Steps

1. Twist ON/Off on the logger end cap to activate the Wi-Fi.
You may need to Twist the logger either to the ON position or OFF position to activate the Wi-Fi, but remember to twist to the OFF position to pause the logger.

✓ The twist activation is intended to start sampling or pause sampling, however twisting ON or OFF also enables the Wi-Fi module to transmit. This is the method to activate the Wi-Fi if it is not active.

2. The Android app will automatically scan Wi-Fi networks for any instruments. On iOS you must connect to the instrument in your Wi-Fi settings. There is a convenience button on the landing page as shown below. The logger should appear automatically under "Choose a network..." The name appears as the RBR serial number of the logger. Tap it to connect to the instrument. Please allow your iPhone to connect before you exit the Settings screen, i.e. that a blue check mark appears to the left of the Wi-Fi network.

 The Wi-Fi is disabled after 60 seconds of inactivity. Twist the logger ON or OFF to activate the Wi-Fi.

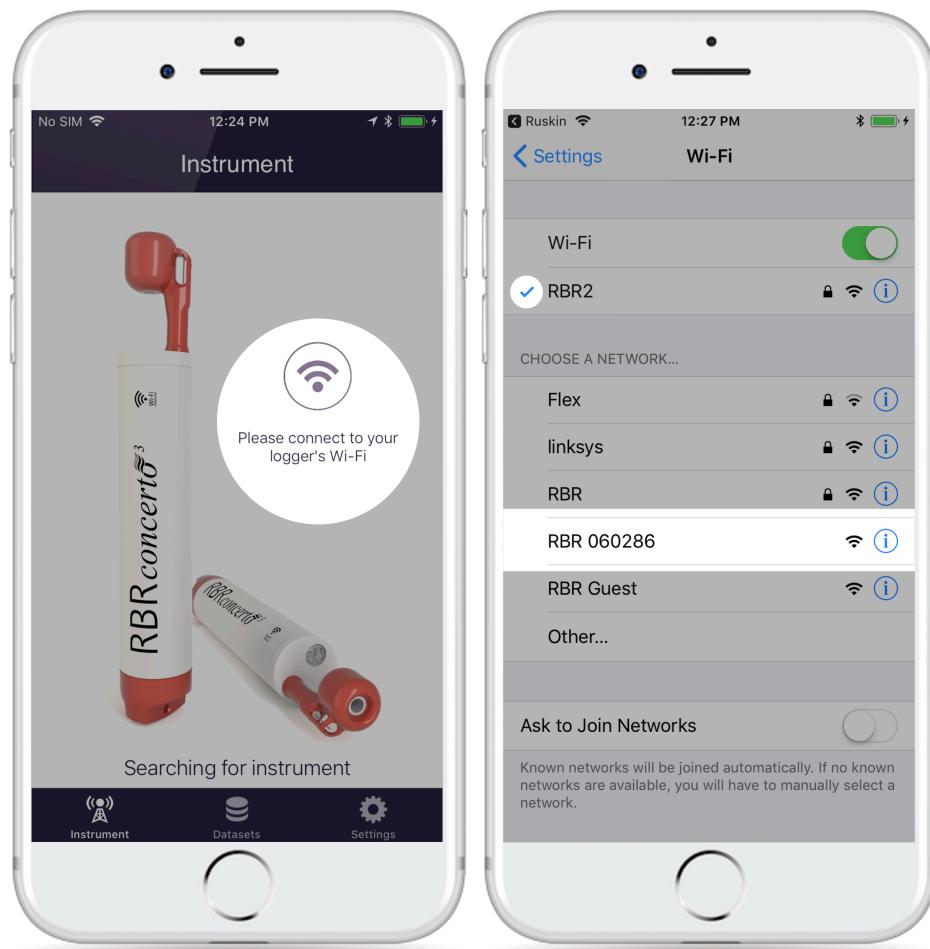

3. Exit Settings to return to the Home screen.
4. From the Home screen, tap the Ruskin App (the App will automatically search for the logger and connect to it).




After connecting to the logger, you are automatically in the **Instrument** view of the app. The different views you can go to are **Instrument**, **Datasets** and **Settings**, located at the bottom of the screen. Tap **Datasets** to view a list of local datasets, and (optionally) remote datasets you have stored in your Dropbox account. This is also how you can share/upload and view your data, described in more detail later.

8.7.2 Instrument Tab


When connected to an instrument, the top of the Instrument tab shows the status of the logger indicating whether it is currently logging samples, how many samples the instrument has taken, and what the sampling rate is set to. The sampling rate can only be changed when the deployment has been stopped as shown below - note that the rightmost frequency indicator has become a picker.

The logging state (ON/OFF) in the example below, controlled by twisting the instrument end cap to an ON or OFF position, should not be confused with starting/stopping a deployment, controlled using the red START / STOP button in the lower right corner of the Instrument tab. This is described in more detail later.

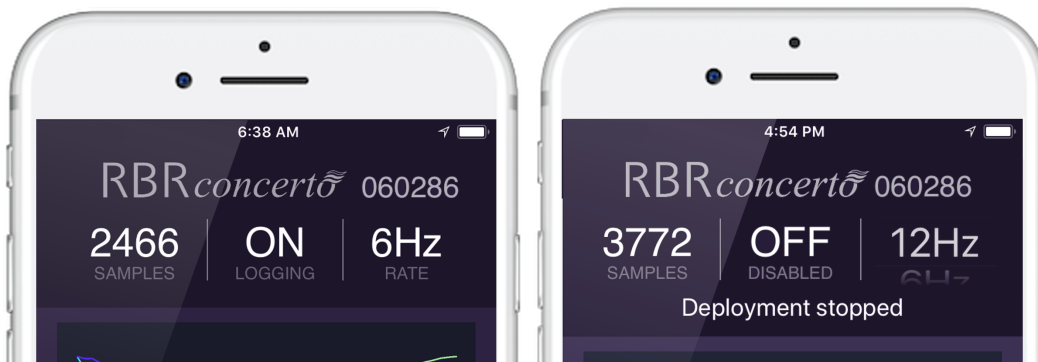

Real-time Data


A sparkline chart shows the last 50 readings for each of the measured channels (or the last 150 readings when using a tablet). These are typically out-of-water samples and serve to provide real-time feedback from the instrument. To view charts of the full deployment, tap the light blue "VIEW" button beneath the sparkline.

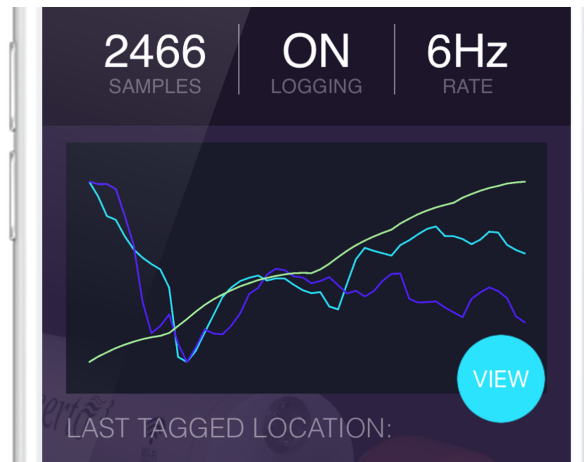

Geotagging

Your logger does not have a GPS - location information for the logger is gathered using your phone/tablet's location capabilities.


The "LAST TAGGED LOCATION" in the center of the Instrument tab, indicates when the last GPS coordinates were added to the dataset. Whenever the mobile app connects to an instrument, it automatically logs the location in the dataset. The location is taken at the time of connection, so should a download take several minutes and the boat be moving, the initial location is captured. Should a more accurate location fix be attained within the first minute after connection, those coordinates are used instead.

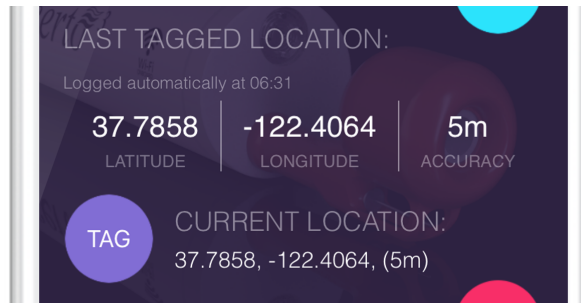

As the app uses GPS, a clear view of the sky will allow a more accurate waypoint, rather than downloading inside a ship cabin for example. To conserve the battery life of your phone, GPS tracking only occurs when the Ruskin app is open or when you are recording a track of your location (described in more detail later). It can take a few moments after opening the app to get an accurate location fix - when GPS is working well, an accuracy of around 5 metres can be expected.

A GPS waypoint fix can also be manually added at any time by tapping on the purple "TAG" button. The last tagged location will be updated to indicate the coordinates and accuracy of the manual waypoint. Both types of waypoints described (manual tags and those taken automatically on download) can be seen plotted on a map in the Locations tab.

Channels

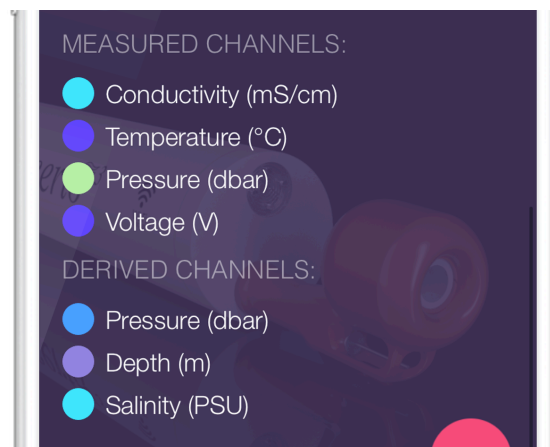

Scrolling to the bottom of the Instrument tab reveals the instrument's Measured and Derived Channel lists along with their units of measurement. The colored circle to the left of each channel indicates the sparkline color used to represent the latest readings from that channel.

8.7.3 Starting or Stopping a Deployment

The red button in the bottom right corner reads either START or STOP. If a deployment has been started the STOP button ends that deployment, and likewise, if a deployment has been stopped, the button reads START to begin a new deployment.


When a new deployment is started, the data on the instrument will be erased. Also, once a deployment has been stopped, it can not be resumed - a new deployment must be started, wiping the data on the instrument.

One dataset is created for each deployment. Deployments are typically long running, consisting of many sampling periods (by twisting the end cap to ON) and paused periods (by twisting the end cap to OFF).

While a deployment is stopped, the sampling rate can be adjusted as described earlier. A deployment can only have one sampling period, thus, once the deployment begins, the sampling rate picker in the top right corner of the Instrument tab can no longer be changed.

Whilst the deployment is stopped, twisting the instrument to either ON or OFF will activate the Wi-Fi, but the instrument will not buzz as the instrument is not sampling.


From Ruskin Desktop, when you start a deployment, you are given the option to do so in an "EasyParse (mobile) compatible" mode, or in a more complex mode where calibration data is segregated. If the existing deployment is not in the EasyParse (mobile) mode, the mobile app can still download the data, but the app will not display a sparkline, nor will users be able to view charts.

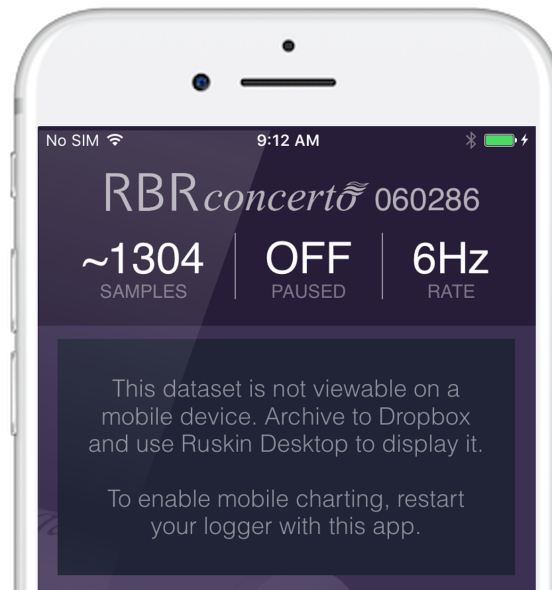


When starting a new deployment from the mobile app, the new deployment is always set to the EasyParse (mobile) mode, regardless of the previous deployment's mode.

Clock Sync

When you start a deployment, you can automatically set the instrument's time. The time is taken from your phone/tablet. As the instrument has a clock but no concept of time zones, you may choose to use **UTC** or **local** time, or you may choose to set no time at all. Note that should you leave the logger without batteries for more than a few seconds, the clock will reset (back to the epoch). Starting a new deployment with this setting enabled provides a convenient way to correct the clock.

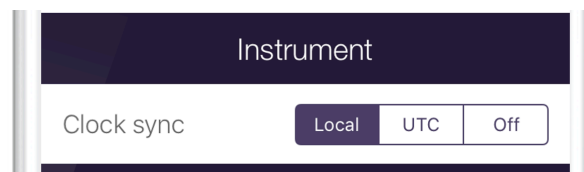


8.7.4 Accessing Datasets

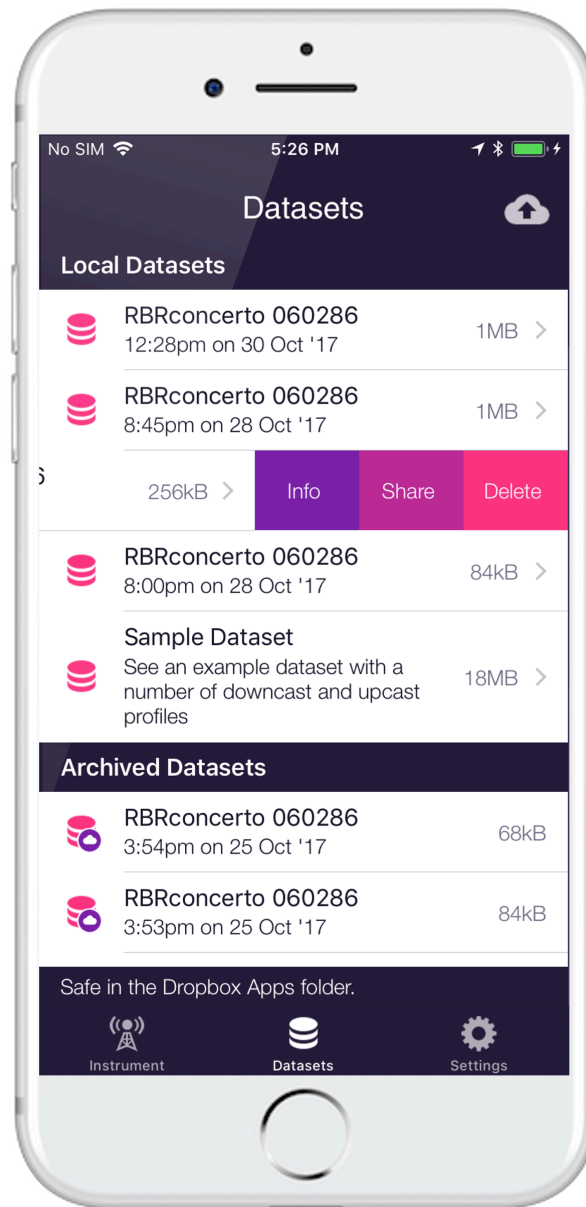

Datasets are separated into 2 lists - datasets that are locally stored on your device (from instrument downloads performed on this phone/tablet), and "Archived Datasets" that are stored on Dropbox. If you have not set-up Dropbox, the second list will not appear. Note that there are a number of ways datasets can be uploaded from your device - you do not necessarily need to use Dropbox. Setting-up Dropbox and using other means of sharing datasets are explained later.

A sample dataset, captured from a real deployment, is also available to demonstrate features of the app.


If an instrument deployment was started from Ruskin Desktop, and the user opted not to use the EasyParse (mobile) mode, the dataset icon will include an exclamation mark.

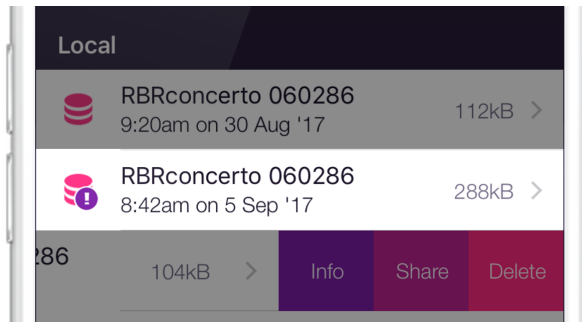

You can view charts for datasets stored locally on your device. You can NOT view charts for datasets that have been archived to Dropbox and removed from your device. For this reason, you may or may not choose to automatically remove local datasets once you have uploaded them (explained in the Dropbox section).

Uploading and Sharing Datasets

On iOS, swiping to the left on an item in the Datasets list will reveal some operations that can be performed on that dataset. On Android, long-pressing the item reveals the equivalent context menu.

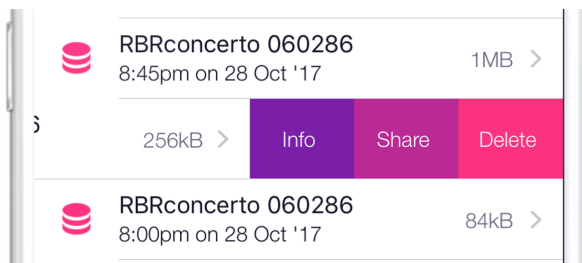






The "Share" option shows a context menu of the available share options for that dataset. These are only available for local datasets. What these are, depends on the apps you have installed on your phone, but a number of options come without additional apps. On iOS these include sharing by email, AirDrop, and save to Files (as of iOS 11). If you would like to see your cloud drive (Google Drive, Baidu, Box, Microsoft OneDrive, iCloud, Dropbox etc.), you need to install that app, after which it should be available as a share destination.

Dropbox

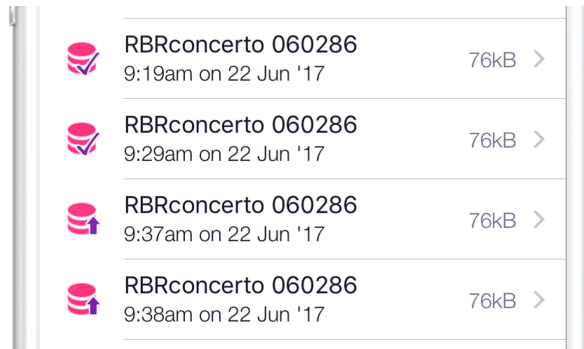
There are additional features available for Dropbox sharing, that incidentally don't require the Dropbox app to be installed. You can bulk upload your Datasets to Dropbox. To enable Dropbox integration, you must sign in to Dropbox. The option for this is at the top of the Settings tab.

Once signed in to Dropbox you can press the cloud button in the top right corner of the Datasets tab to bulk upload all your local datasets. As the datasets upload, the icon will transition from an upwards arrow to a check-mark.



	RBRconcerto 060286 9:19am on 22 Jun '17	76kB >
	RBRconcerto 060286 9:29am on 22 Jun '17	76kB >
	RBRconcerto 060286 9:37am on 22 Jun '17	76kB >
	RBRconcerto 060286 9:38am on 22 Jun '17	76kB >


You can choose to automatically delete the datasets from your device once they have been uploaded. The preference for this, which by default is set to delete the local copy, can be found in the Settings tab.

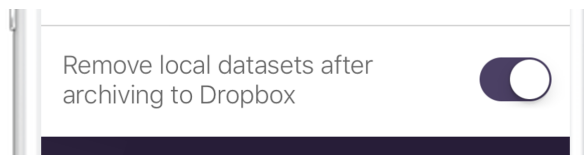

8.7.5 Charting

Selecting the blue "VIEW" button under the Sparkline will show charts for the connected instrument's existing deployment. Charts for any local datasets can also be viewed by tapping on that dataset in the Datasets list. The charts are separated into casts, that is, each time the instrument descends and ascends again is considered to be a cast, and one chart is created for each cast.

In the example below, there are 29 casts (pages). Swipe left and right to view the chart for each cast. Note that when testing the out-of-water samples, there will only be one chart as the instrument determines the start and end of casts by depth (pressure) readings.

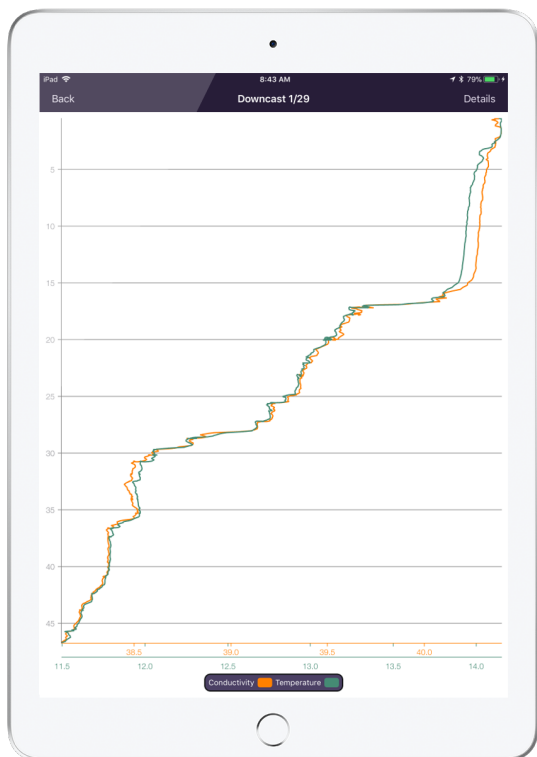

In portrait orientation, channel data is plotted by depth. Only downcast data is plotted - the upcast data is omitted. As the instrument sensors face downwards, the downcast provides the most accurate data - upcast data can be subtly impacted by the turbulence from the leading instrument housing on the ascent.

When viewing out of water samples, the downcast chart will appear like a random plot. Only once used in a real cast will the true usefulness of this plot become apparent, as illustrated above.

In landscape orientation, the channel data is plotted by time. Depth is inverted so the bottom reading on the chart intuitively represents the bottom of the cast.

Pinch-to-zoom in on data. The chart axes adjust relative to each other on zooming and panning around the chart so that all chart series occupy the full height or width of the chart and can be easily compared side-by-side.

The Details drawer, shown by tapping the top-right corner, reveals data about the displayed cast and the deployment. The deployment data is also available in the "Info" context menu of the Datasets list.




You can also tap on the legend at the bottom of the charts to plot or hide channels. In the Settings tab you can opt to have your charts plot temperature by Celsius (default) or Fahrenheit, and whether depth is plotted as metres (default), feet or fathoms. This is purely a viewing preference for your phone/tablet and in no way changes the units in which the data is captured in the dataset.

The figure shows a screenshot of the 'Charting' settings screen in the RBRconcerto app. It contains two sections: 'Plot temperature in' with buttons for °C and °F, and 'Plot depth in' with buttons for m, ft, and fthm.

8.7.6 Location & Tracking

As mentioned earlier, your logger does not have a GPS - location information for the logger is gathered using your phone/tablet's location capabilities. A waypoint is automatically added to the RSK's geodata table whenever the instrument connects and also whenever the user taps the TAG button in the Instrument tab.

New to iOS version 2.3, and coming soon to Android, is a Location tab that allows users to view Datasets on a map.

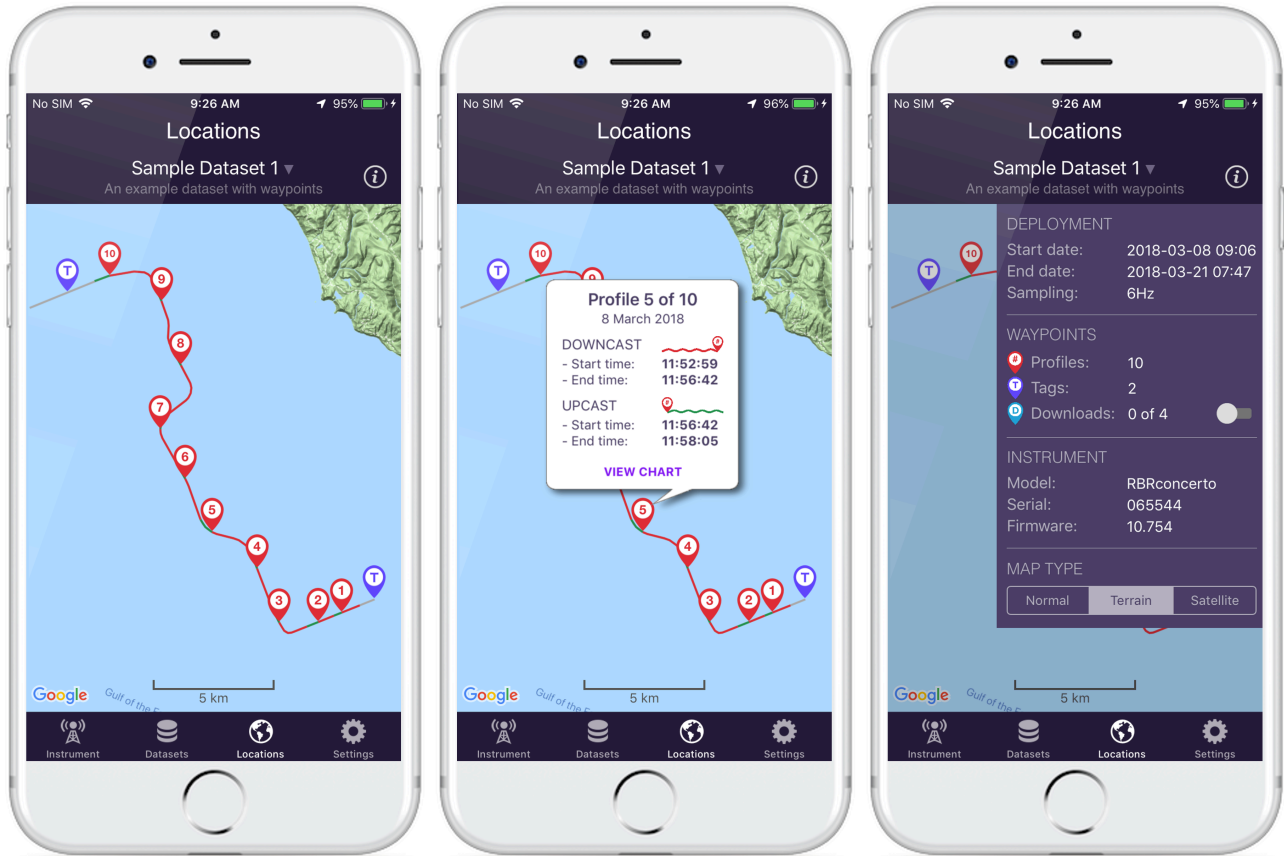

The above sample screens shows the path that the boat took and the locations of the profiles.

There are 3 types of pins...

1. Profiles are shown as numbered red pins.
2. Manual Tags are shown as purple pins with the letter "T".
3. Download tags (automatically added whenever the instrument downloads to your phone) are shown as blue pins with the letter "D". Note that these are hidden by default - to display the download pins, use the switch in the info drawer.

There are 3 colors used to draw the track...

1. The downcast segments of the track are drawn as a red line.
2. The upcast segments of the track are drawn as a green line.
3. The segments of the track that are not associated with a profile (e.g. the instrument was out of the water) are drawn with a light gray line.

Tapping on a map pin invokes an info window. In the case of Profile pins, this includes a link to view the chart for that profile.

8.7.7 Using the Tracking Feature

As Ruskin's tracking feature uses the location capabilities of your phone, your phone should be sufficiently close to your instrument during the deployment.

When you download your instrument to your phone, Ruskin Mobile will calculate the locations of profiles using the timestamps logged against the instrument samples and events.

- The clocks on the instrument and your phone do NOT need to be synchronized as Ruskin Mobile will factor in any clock offset into the calculations.
- Also, note that you can stop and start tracks during a deployment - Ruskin Mobile can stitch together data from multiple tracks into one RSK.

To start tracking your location...

1. Select the Locations tab.
2. Ensure "My Location (Not Tracking)" is selected in the drop-down.
3. Tap on the **"START"** button in the bottom right corner. The first time you use this feature on iOS, you will be prompted to *"Allow Ruskin to also access your location even when you are not using the app"*. Please select *"Always Allow"* otherwise when you leave the app, tracking will cease.

Tracking will continue for up to 24 hours, even with the app in the background, unless you come back to Ruskin and select "Stop Tracking". Force closing the app (double-tapping the home button and swiping upwards) will also interrupt GPS tracking. GPS tracking does increase battery drain, so you'll likely only want to use this feature during the deployment.

Track files can be seen in the drop-down at the top of the Locations tab, displayed next to a purple ship icon and also in the Datasets tab where they can be uploaded/shared/deleted etc. To view a previous track in the Locations tab, select it from the drop-down at which point you will notice the current location details disappear from the header along with the start/stop and recenter buttons. Viewing other tracks does NOT affect the recording of the current track but you will need to select the "Current Track" from the drop-down to stop/start tracking or to view current location stats.

You may wonder why viewing a track is NOT showing any profile, tag or download pins... when you have a track selected you are viewing just that track, independently of any instrument data. Selecting an RSK listed in the Locations drop-down will display all track and location data captured during that deployment along with the profile, download and tag pins.

- If no tracks coincide with the deployment, only download (and possibly tag) pins will be displayed. (Remember that download pins are hidden by default, so the map may appear empty.) Note however that in the absence of track data, Ruskin Mobile searches for any automatic waypoints (from instrument downloads) and will sometimes be able to position some profiles from these and thus display some profile pins.
- If track data is not available for the full deployment, some profile pins may be missing from the map. You can see how many profile locations could be determined from the info drawer.

8.7.8 GPX Files

One track creates one tracking file. Track files use the [GPX](#) format, augmented with a couple of minor extensions. A track file is independent of any RSK, but tracks are used to inject location data into the RSK whenever the RSK is downloaded. The RSK's geodata table will contain one row for every GPS entry captured during the deployment. In most cases, users don't need to be concerned with the GPX file as all the needed data will be contained within the RSK.

Note that the GPX/track files can also be uploaded from the app independently of RSKs. You may wish to use a track to illustrate your course on a map using various online tools, or you may wish to convert it to other formats such as [GeoJSON](#) or [KML](#).

9 Configure a logger

Before you enable a logger schedule, you can configure the logger to suit your requirements.

The instructions to configure a tide or wave logger are different than the standard loggers and can be found in [Tides and waves](#).

If your logger schedule is already enabled when you decide to change the configuration you must stop running the schedule, make your changes, and enable the schedule again. However, any data stored so far on the logger will be lost.

✔ You can preserve the data by downloading it to a file before you enable the schedule again.

Within the **Configuration** tab the **Enable**, **Revert settings**, and **Use last setup** buttons are found. When you click **Enable**, the logger setup parameters are stored to the logger and the schedule is enabled. When you click **Revert settings**, you set the logger configuration back to previous settings.

Use last setup is intended for configuring multiple loggers using the same schedule. For example, to set up three |tide loggers with exactly the same parameters, set one logger up and enable it; connect the second and third logger and when you click **Use last setup** button, these two loggers will be set up with the same parameters as the first logger. This includes the logger clock time, start and end logging times, sampling period (or rate), gating condition, and tide or wave sampling parameters for |tide or |wave loggers.

Overview of the Configuration tab

Group	Field	Explanation
Schedule		You can configure multiple settings that include when the logger starts and stops logging, what type of sampling regime takes place, and the type of measurements speed. For more information about scheduling a logger, see Schedule a logger .
	Status	Indicates the loggers current state (Not enabled, Logging in progress, Paused).
	Clock	Displays the current logger time in the set locale. This time can only be changed by syncing the time with the host computer clock. This can be done either in UTC or in the local timezone.

Group	Field	Explanation
Power	Internal	<p>Specifies the type of batteries installed in the logger. This parameter is used by the autonomy engine to estimate deployment life.</p> <p>The 'Fresh' option is used to indicate that fresh batteries will be installed in the logger for the next deployment. This parameter is used by the autonomy engine to reset usage statistics when estimating deployment life.</p>
	External	<p>Specifies the type of external power supply powering the logger for the deployment for use in the autonomy engine calculations.</p> <p>The 'Fresh' option is used to indicate that an unused external supply will be used for the next deployment. This parameter is used by the autonomy engine to reset usage statistics when estimating deployment life.</p>
	Extended battery endcap	<p>Specifies the inclusion of a powered endcap which will be accounted for in the autonomy engine.</p> <p>If a powered endcap was not purchased do not select this option as it will skew deployment life.</p>
Sampling	Mode	<p>Specifies the sampling regime to be used on the next deployment.</p> <p>Each sampling regime requires a specific set of controls. For more information on the controls refer to their control pages</p> <p>Sampling modes: Averaging, Bursting, Directional, Tide, and Wave.</p>

Group	Field	Explanation
	Gate	<p>Specifies the condition which must be fulfilled before regular sampling will occur. There are three (3) options:</p> <p>None: Disables the feature so that the scheduled start and end time gate sampling</p> <p>Twist activation: Starts the logging schedule when the end cap is twisted in the 'on' position. For information about enabling twist action, see Twist activation.</p> <p>Marine wet switch: Starts the logging schedule when the logger detects it has entered the water.</p>
Options	Realtime	<p>Specifies the connection to which live data will be streamed. There are three (3) options:</p> <p>None: Data will not be streamed to any external connection</p> <p>Serial: Data will be streamed over an external serial connection (RS-232 or RS-485).</p> <p>USB: Data will be streamed over an external USB connection.</p> <p>For more information about real time data configuration, see Fetching and streaming data.</p>
	Format	<p>You can configure settings for obtaining real time data from your logger (provided it is equipped with an external data port). You can select one of the four live data output formats.</p>
	Serial	<p>Specifies the baud rate of the external serial connection.</p>

Group	Field	Explanation
	Mode	Specifies the external serial connections communication protocol. (RS-232, RS-485 full duplex, UART (OEM))
	Storage	Specifies the format with which the logger will record data internally. The standard format is Desktop, however, to improve the download speed over Wi-Fi-enabled loggers, select Mobile.
	Wi-Fi	Specifies the use of the Wi-fi module for the deployment. Note: This parameter is not a toggle for the powered state of the Wi-Fi module, it only specifies if the logger should use the Wi-Fi module. The powered state is controlled by the logger itself.
Voltage sensors	Channel	Specifies the index of voltage channel
	Latency	Specifies the time (ms) required to wait after power up for the sensor to settle in order to take a reading
	Current	Specifies the amount of current (mA) the sensor requires to operate
Ranging sensors	Sensor	Specifies the name of the sensor and its channel index
	Range	Specified the gain level used on the specified sensor for the deployment. This parameter can be set to an auto-ranging setting or to a fixed gain setting. The fixed gain setting is specified by selecting one of the ranges specified.
Valve control	Status	The current position of the valve

Group	Field	Explanation
	Set position	Manually toggles the valve between the two possible positions
	Schedule movement	<p>Enables the ability to schedule the movement of the valve to the atmospheric position and define:</p> <ul style="list-style-type: none"> Interval - the time between movements Duration - the time spent in the atmospheric position If the first atmospheric duration should be skipped


9.1 Schedule a logger

You can schedule when your loggers start logging readings and specify the sampling rate. Ruskin indicates any unattainable conditions in the defined schedule at the bottom of the **Configuration** tab, and the **Enable** button is greyed out.

The screenshot displays the 'Configuration' tab of the Ruskin interface, which is divided into several sections:


- Schedule:** Shows the status as 'Not enabled' (yellow bar). It includes fields for Clock (2018-12-11 10:34:32 UTC-5:00), Start (2018-12-11 10:26 AM), and End (2018-12-20 9.3 days). There are buttons for 'UTC', 'Local', and 'Now'.
- Power:** Includes a 'Battery' dropdown set to 'Lithium iron' with a 'Fresh' checkbox, and an 'External' dropdown set to 'None' with a 'Fresh' checkbox. An 'Extended battery endcap' checkbox is also present.
- Sampling:** Features a 'Mode' dropdown set to 'Continuous', a 'Speed' dropdown set to 'Rate' with a '32Hz' value, and a 'Gate' dropdown set to 'None'.
- Options:** Includes 'Realtime' (None), 'Format' (Standard resolution), 'Serial' (115200), 'Mode' (RS232), 'Storage' (Desktop), and 'Wi-Fi' (off).
- Voltage sensors:** Includes 'Channel' (4), 'Latency (ms)' (300), and 'Current (mA)' (3.0).
- Ranging sensors:** Includes 'Sensor' (Turbidity (5)) and 'Range' (Auto).
- Valve control:** Shows 'Status' as 'In marine position'. It has radio buttons for 'atmospheric' and 'marine' (selected). A 'Schedule movement' checkbox is checked, showing a duration of '00 00:01:00'. Below it, a 'Skip first atmospheric duration' checkbox is unchecked. Further down, 'Duration (HH:mm)' is set to '00:01' and 'Interval (DD HH:mm)' is set to '0 01:00'.


Before enabling the logger, verify the available settings found in the groups: **Schedule, Sampling, Options, Voltage sensors, Ranging sensors, Valve control, and Power.**

 The display of the above groups are based on the logger capability. Not all groups are visible.


Steps

1. Highlight the instrument in the **Navigator** window, click the **Configuration** tab.
2. Adjust the time on the logger
 - a. Click **Local** to synchronize with the computer in the local time zone.
 - b. Click **UTC** to synchronize with the computer in the UTC time zone.
3. Specify the **Start** date and time you want to start running the schedule or select the **Now** checkbox to start logging when the **Enable** button is pressed.

 If you select and then clear the **Now** checkbox, you can then manually modify the current date and time instead of the original values.


 The **Start** date and time is only editable If the gating condition selected is **None** otherwise, the gating condition selection will be what controls the start of logging.

4. The estimated logging **End** date display is based on the configuration of the sampling schedule and regime. It is calculated by the autonomy engine and provides feedback on which parameter (power or memory) will be exhausted first.


 The estimated logging **End** date display is based on the configuration of the sampling schedule, mode, and power selections. It is calculated by the autonomy engine and provides feedback on which parameter (power or memory) will be exhausted first.


The parameter in the **green** bar indicates the limitation of the deployment and as such is what the deployment end date is based on.

The parameter in the **orange** bar indicates how much longer the deployment may last if the preceding parameter was not a factor.

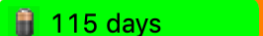End: 2019-09-23  115 days  +496 days

5. Select the required **Sampling mode** from the available options.

 Not all sampling regimes are available on all loggers.

 See [Average](#), [Burst](#), [Directional](#), [Tide](#), and [Wave](#) for information on how to configure these regimes

6. Specify the sampling **Speed**
 - a. To specify a rate (faster than 1s) click the **Rate** option and then choose the appropriate selection from the drop-down menu
 - b. To specify a period of 1s or slower ensure the **Rate** option is not selected and set the time in HH:mm:ss format
7. Specify a sampling **Gate** condition
 - a. **None**: Use the start and end time to gate sampling.
 - b. **Twist activation**: Starts the logging schedule when the end-cap is twisted in the 'on' position. For information about enabling twist-action, see [Twist Activation](#).

- c. **Marine wet switch:** Starts the logging schedule when the logger detects it has entered the water. For information about wet switch settings, see [Marine Wet Switch](#).
8. Click **Enable** to store the configuration into the logger and start the logging process.

✓ If the **End** logging date is power dependent and you know that the logger will be operating under very cold conditions, you may want to lower the demands on the battery by lengthening your sampling period or opting for different battery chemistry.

⚠ An error message appears at the bottom of the **Configuration** tab if the sampling period is too fast for your logger. This typically means that one of the sensors has a long latency.

⚠ If the **Enable** button is disabled, an error message appears.

If you enable the logger, and it is not your first schedule, you will see the warning *The contents of memory will be erased!* Before proceeding, you should download the data from the logger (see [Download](#)). If you are sure that the information is stored, then click **Erase and enable logging**.

⚠ When the **Enable** button is clicked the logger evaluates the current dataset in memory. If one exists a warning appears indicating that the contents of memory will be erased. If you want to save the existing data, you must download the data to a file before proceeding. You can do this from **Properties** view > **Configuration** tab and select **Download**. For more information about downloading a file, see [Download](#).

9.1.1 Autonomy engine

The estimated battery life for the selected deployment is shown in Ruskin's Autonomy Engine in the **Configuration** tab:

The screenshot shows the 'Configuration' tab of the Autonomy Engine interface. At the top, there are tabs for 'Configuration', 'Information', 'Download', 'Calibration', and 'Parameters'. The 'Configuration' tab is active. Below the tabs, the 'Status' is 'Not enabled'. The 'Clock' is set to '2019-01-25 14:25:30 (UTC-5:00)' with 'UTC' and 'Local' buttons. The 'Start' is 'Not available with twist activation'. The 'End' is 'Gated' with a green bar indicating '19.4 days' and a red bar indicating '+35.1 days'. Below this, there is a 'Power' section with a dropdown menu for 'Battery' showing options: 'None', 'Lithium thionyl chloride' (selected), 'Lithium iron', 'Alkaline', 'Li-ion', and 'NiMH'. There are also checkboxes for 'Fresh' and 'External'.

When to replace the batteries

Compared to the cost of deployment, the cost of a new set of batteries is close to negligible. We highly recommend that the batteries be replaced before every deployment unless there is no doubt that they have sufficient capacity.

Battery voltage does not decrease linearly and is therefore not an accurate indicator of battery capacity.

⚠ When in doubt, replace the batteries.

Predicting battery life

Battery life prediction is a complicated issue. In RBR loggers, battery life is a strong function of the type of logger, the type and number of sensors attached, the sampling scheme (sampling period and the use of: thresholding, real-time data collection and averaging), and the temperature of the water during the deployment. Manufacturers' data for the batteries do not provide information that can be directly related to way the batteries are used in RBR loggers.

The Ruskin software calculates the expected battery usage (in mA hours - mAh) for the logger during setup. The nominal capacity of each type of battery is described in the [batteries section](#) and is given in mAh at room temperature. The software will warn the user if the expected battery usage for a particular deployment scenario is approaching the theoretical potential mAh. The software will not prevent a logger from being started even if a warning is given. In tests at RBR Ltd. of multiple examples of various brands of batteries at 6°C, all examples were able to provide the threshold capacity defined in our [batteries section](#). The user should view these predictions and further de-rate the batteries if the expected deployment is in cold water.


RBR continues to characterize battery life in its loggers and will continue to improve the battery life calculator in future versions of Ruskin.

9.2 Stop logging

Logging stops on its own when one of the following occurs:

- The end logging time is reached.
- The gating condition is no longer met.
- The power is removed or depleted.
- The logger memory is filled.

To manually stop the logger, highlight the logger in the navigator, click the **Configuration** tab and select **Stop**.

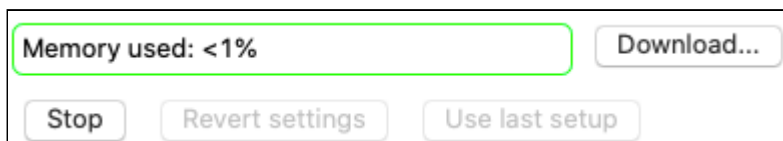

9.3 Averaging

Averaging is a sampling mode which collects data at a certain rate then averages those samples to produce a single value which is stored in the logger memory.

RBRquartz BPR|zero

The RBRquartz³ BPR|zero does not support this sampling mode, the instrument can only operate in continuous mode.

There are three main parameters required to be configured for averaging mode:


1. **Speed:** Specifies the rate at which samples will be collected.
2. **Duration:** Specifies the time range over which to average.
 - The **Duration** must always be longer than the sampling **Speed**.
3. **Interval:** The repetition period for performing the averaging.

- The **Interval** must always be longer than the **Duration**.

This sampling mode can be activated by selecting **Average** in the **Mode** drop-down menu in the **Sampling** section on the **Configuration** tab

There are two versions of the **Average Sampling** section that can be used, either simple or advanced. This option can be set in [Preferences](#).


Simple form:

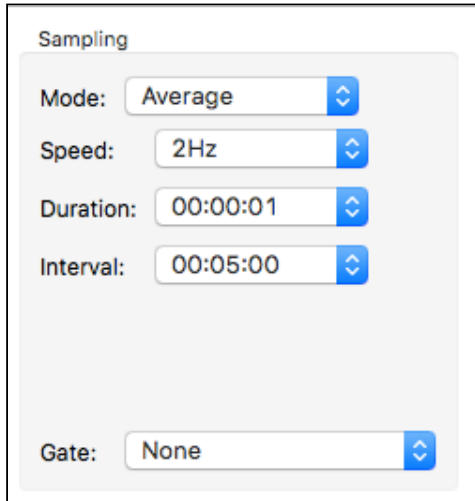

The 'Simple form' for the 'Sampling' section contains five dropdown menus. The 'Mode' is set to 'Average'. The 'Speed' is set to '2Hz'. The 'Duration' is set to '00:00:01'. The 'Interval' is set to '00:05:00'. The 'Gate' is set to 'None'.

In the simple form only pre-defined selections can be made. A more complex setup can be set by using the advanced version as follows.

Advanced mode:

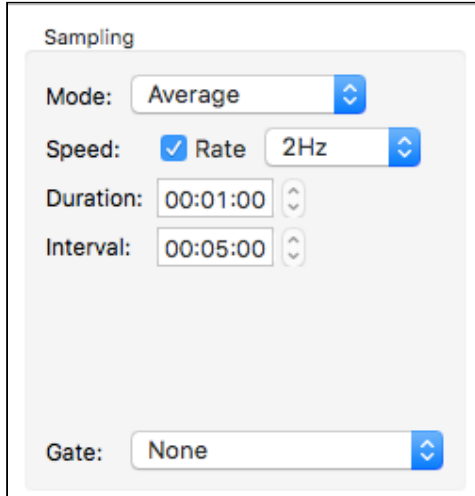

The 'Advanced mode' for the 'Sampling' section contains five dropdown menus and one checkbox. The 'Mode' is set to 'Average'. The 'Speed' section has a checked checkbox labeled 'Rate' followed by a dropdown menu set to '2Hz'. The 'Duration' is set to '00:01:00'. The 'Interval' is set to '00:05:00'. The 'Gate' is set to 'None'.

In the example above, 1 minute of 2 Hz (2 times a second) samples are taken and averaged. This cycle repeats every 5 minutes.

⚠ A single averaged sample is recorded at the **Interval** rate. All other samples used to perform the average operation are discarded.

9.4 Bursting

Bursting is a sampling mode which collects a specified number of samples at a specified rate and repeats this operation at a specified interval.

i Only loggers with the |fast sampling feature (|fast8, |fast16, or |fast32) support the ability to sample in a burst mode.

i **RBRquartz BPR|zero**

The RBRquartz³ BPR|zero does not support this sampling mode, the instrument can only operate in continuous mode.


There are three main parameters required to be configured for averaging mode:

1. **Speed:** Specifies the rate at which samples will be collected.
2. **Duration:** Specifies the number of samples to record.
3. **Interval:** The repetition period for performing the burst.
 - The **Interval** must always be longer than the time it takes to obtain the specified number of samples.

This sampling mode can be activated by selecting **Burst** in the **Mode** drop-down menu in the **Sampling** section on the **Configuration** tab

There are two versions of the **Burst Sampling** section that can be used, either simple or advanced. This option can be set in [Preferences](#).

Simple form:

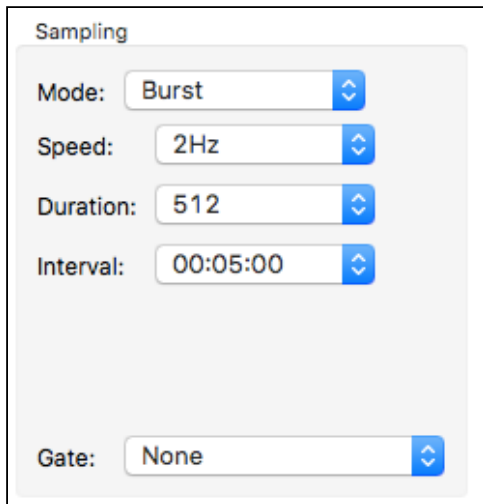

The screenshot shows a 'Sampling' configuration panel with the following settings:

- Mode:** Burst
- Speed:** 2Hz
- Duration:** 512
- Interval:** 00:05:00
- Gate:** None

In the simple form only predefined selections can be made.

In the example above, 512 samples will be recorded at a rate of 2Hz which will take 4 hours 16 minutes to complete. This cycle will be repeated every 5 minutes.

A more complex setup can be set by using the advanced version as follows.

Advanced mode:

Sampling

Mode: Burst

Speed: ☒ Rate 2Hz

Duration: 2

Interval: 00:00:01

Gate: None

In the example above, 2 samples will be recorded every 1 second.

9.5 Directional

Directional dependent sampling is a sampling mode which collects samples at specified rates depending on the direction of travel of the logger. It is intended for use when the instrument is integrated into a moving platform.

i Only loggers with the |fast sampling feature (|fast8, |fast16, or |fast32) support the ability to sample in a burst mode.

To set up a logger to sample based on the direction of movement through the water column, click **Configuration** tab > **Sampling** section, and then select **Directional** in the **Mode** drop-down menu.

Sampling

Mode: Directional

Threshold (dbar): 5.0

Fast sampling direction: Ascending

Fast sampling speed: ☒ Rate 16Hz

Slow sampling speed: ☐ Rate 00:00:01

Gate: None


- **Threshold:** sets the boundary, based on the previous profile, where the logger should switch to the opposite sampling speed
- **Fast sampling direction:** Indicates which direction the instrument should sample at the fast rate
 - **Ascending:** indicates that the instrument should sample at the **Fast sampling speed** during ascents.

- **Descending:** indicates that the instrument should sample at the **Fast sampling speed** during descents.
- **Fast sampling speed:** has the same meaning as the speed value in the [continuous sampling](#) interface, but applies only when the logger detects that it is moving in the preferred **direction**. This must be shorter than the provided **Slow sampling speed** parameter.
- **Slow sampling speed:** has the same meaning as the period value in the [continuous sampling](#) interface, but applies only when the logger detects that it is not moving in the preferred **direction**. This must be longer than the provided **Fast sampling speed** parameter.

The logger requires one complete profile to be recorded before evaluating the threshold to switch the sampling speed. Due to this requirement, the logger will sample the entire first profile using the **Fast sampling speed**. Once this has been completed it will perform the desired sampling functionality.


The following provides an overview of how the logger would sample when the current profile either descends to the same depth or further than the previous profile (picture gives a global overview of how the logger would behave with the previous example on a 20dbar profile setup after it has been started).

In this example, the **Fast sampling direction** is set to **Ascending**.

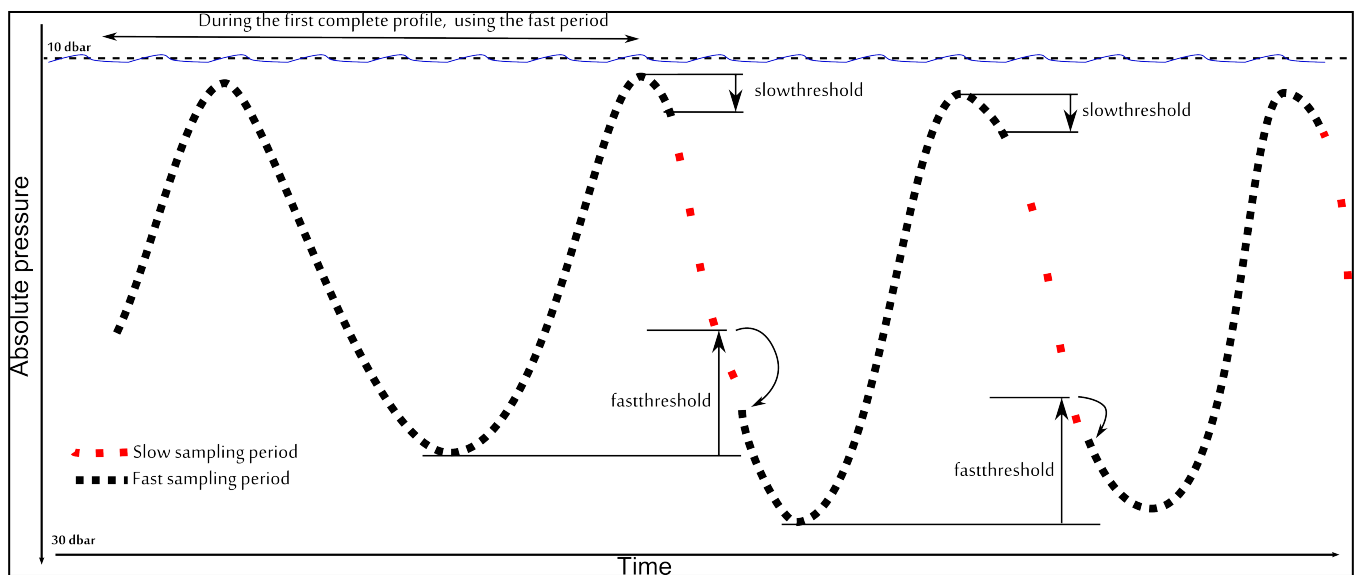

The following provides an overview of how the logger would sample when the current profile descends to a much shallower depth than the previous profile (shows how the directional dependent sampling would behave in the case of a profile much shorter than the previous one). In such a case the logger would detect an upcast while slow sampling and would then go back to the fast sampling mode.

In this example, the **Fast sampling direction** is set to **Ascending**.

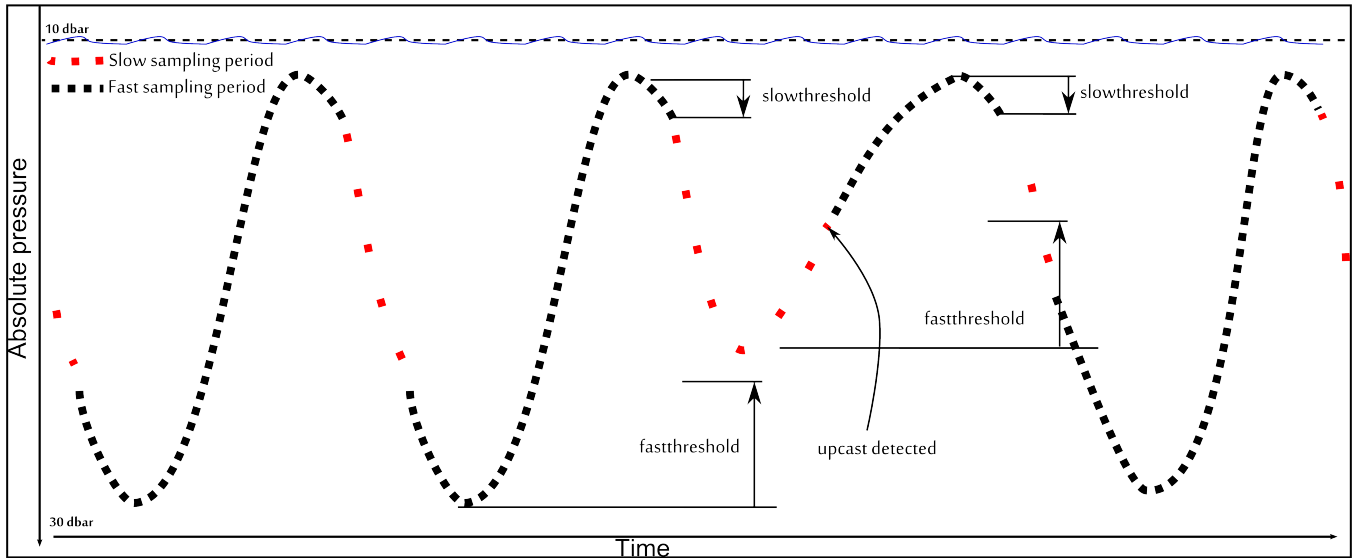

9.6 Tides and waves

9.6.1 Tides

⚠ This section applies to loggers with the |tide16 or |wave16 feature

Tide is a sampling mode which collects data at a certain rate then averages those samples to produce a single value which is stored in the logger memory. This mode uses averaging to remove wave data from the pressure measurements.

There are three main parameters required to be configured for averaging mode:

1. **Speed:** Specifies the rate at which samples will be collected.
2. **Duration:** Specifies the time range over which to average.
 - The **Duration** must always be longer than the sampling **Speed**.
3. **Interval:** The repetition period for performing the averaging.
 - The **Interval** must always be longer than the **Duration**.

This sampling mode can be activated by selecting **Tide** in the **Mode** drop down menu in the **Sampling** section on the **Configuration** tab

There are two versions of the **Tide Sampling** section that can be used, either simple or advanced. This option can be set in [Preferences](#).

Simple form:

Sampling

Mode: Tide

Speed: 4Hz

Duration: 00:00:01

Interval: 00:30:00

Advanced form:

Sampling

Mode: Tide

Speed: ☒ Rate 16Hz

Duration: 00:00:01

Interval: 00:00:05

In the example above, 1 minute of 8 Hz (8 times a second) samples are taken and averaged. This cycle repeats every 5 minutes.

A single averaged sample is recorded at the **Interval** rate. All other samples used to perform the average operation are discarded.

9.6.2 Waves

This section applies to loggers with the |wave16 feature

Wave is a sampling mode which collects a specified number of samples at a specified rate and repeats this operation at a specified interval. This mode records both wave and tide information. For additional information on planning a wave deployment, please refer to [|wave deployment planning](#).

All |wave loggers automatically calculate tide data by averaging the wave burst data. There is no setup required to determine tide information with the wave logger.

There are three main parameters required to be configured for averaging mode:

- **Speed:** Specifies the rate at which samples will be collected.

- **Duration:** Specifies the number of samples to record.
 - The range is between 512 and 32768 samples.
- **Interval:** The repetition period for performing the burst.
 - The **Interval** must always be longer than the time it takes to obtain the specified number of samples.

Wave bandwidth statistics can be generated by specifying two other parameters:

- **Instrument altitude:** Specifies the number of meters above the sea or river bed where the logger will be mounted.
- **Mean depth of water:** Specifies the total expected depth of the water in which the logger will be deployed.


⚠ The **Mean depth of water** parameter is not stored on the logger. It is only used to compute wave bandwidth statistics for pre-deployment analysis.

The **Instrument altitude** parameter is stored in the logger and is used to calculate wave statistics. This parameter can be adjusted post-deployment through the RSK file.

This sampling mode can be activated by selecting **Wave** in the **Mode** drop-down menu in the **Sampling** section on the **Configuration** tab

There are two versions of the **Wave Sampling** section that can be used, either simple or advanced. This option can be set in [Preferences](#).


Simple form:

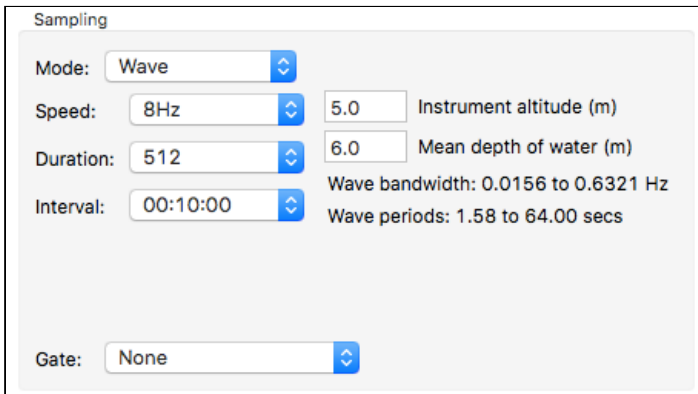

The Simple form for Wave Sampling configuration includes the following fields:

- Mode:** Wave (selected)
- Speed:** 8Hz
- Duration:** 512
- Interval:** 00:10:00
- Instrument altitude (m):** 5.0
- Mean depth of water (m):** 6.0
- Wave bandwidth:** 0.0156 to 0.6321 Hz
- Wave periods:** 1.58 to 64.00 secs
- Gate:** None

Advanced form - sampling at one second or slower:

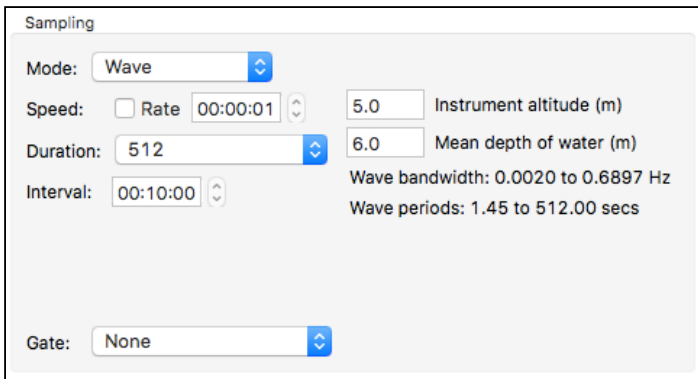

The Advanced form for Wave Sampling configuration includes the following fields:

- Mode:** Wave (selected)
- Speed:** ☐ Rate 00:00:01
- Duration:** 512
- Interval:** 00:10:00
- Instrument altitude (m):** 5.0
- Mean depth of water (m):** 6.0
- Wave bandwidth:** 0.0020 to 0.6897 Hz
- Wave periods:** 1.45 to 512.00 secs
- Gate:** None

Advanced form - sampling at 2, 4, 8, and 16 Hz

Sampling

Mode: Wave

Speed: ☒ Rate 8Hz

Duration: 512

Interval: 00:10:00

Instrument altitude (m): 5.0

Mean depth of water (m): 6.0

Wave bandwidth: 0.0156 to 0.6321 Hz

Wave periods: 1.58 to 64.00 secs

Gate: None

✓ The timestamp of the burst for both a Tide and Wave datasets is the beginning of the burst.

9.6.3 |wave deployment planning

The following provides a guideline to establish a coherent deployment for |wave loggers.

The |wave logger should be fixed to a suitable support below the surface of the water, such as a dock or other rigid mooring. The logger must not be able to move in the water. The figure below offers a view of the logger fixed to a dock with a definition of the different water heights.

- **Mean depth of water:** an estimate of the average water depth, used for the initial prediction of expected wave frequencies that can be detected. Ruskin will use the actual depth measured by the logger for its calculations.
- **Instrument altitude:** The actual height of the logger above the seabed. This is defined by the deployment, and the logger must be physically affixed at this height during the installation.

Given the height of the logger above seabed and the depth of logger as measured during the deployment, the total depth of water can be calculated.

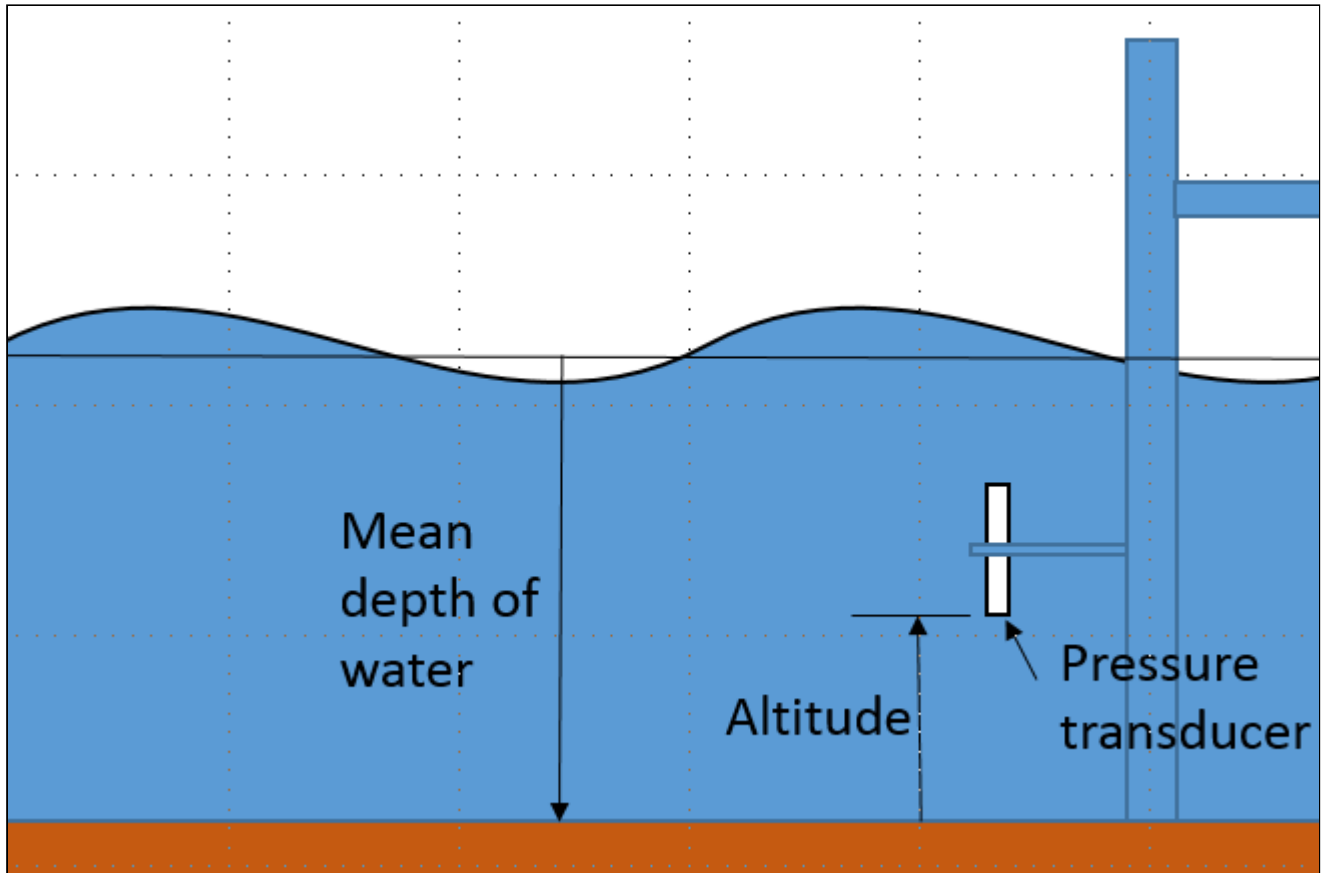


Figure 1. Logger positioning

Wave logger positioning

For deployment planning, refer to Figure 1. Ruskin needs to know the expected mean depth of water (in metres) and the expected altitude (height) of the logger above the seabed to provide an estimate of the frequencies and periods of the wave that the logger is able to measure. The logger measures water depth/pressure by means of a pressure transducer. The physics of what a pressure transducer can 'see' at depth depends on the height of water above the transducer as well as the amount of water below the transducer. High frequencies attenuate very quickly with depth. Figure 2 shows the attenuation with depth as a function of wave period in seconds ($period = 1/frequency$). This graph demonstrates that the placement of the logger is critical in determining frequencies/periods of the wave data to be captured by the logger. The pressure transducer may be placed in any orientation.

The basic rule is to place the logger as close to the surface of the water without the possibility that the logger will emerge from the water either because of large waves or low tides.

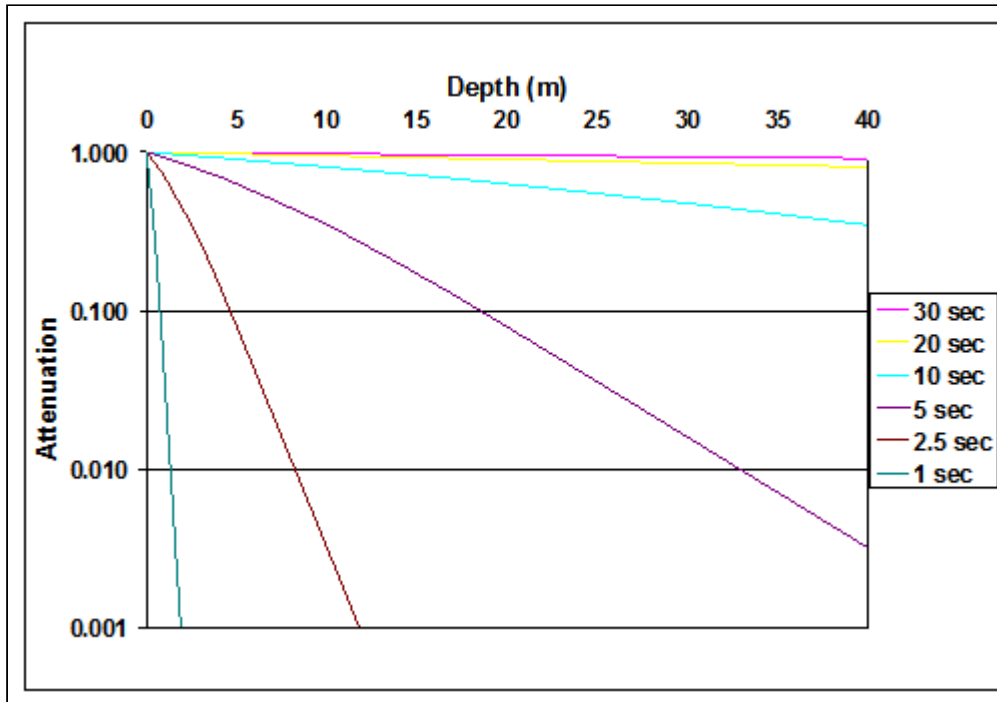


Figure 2. Wave attenuation as a function of depth for various wave periods.

This step in the deployment configuration requires that the 'expected mean depth of water', that is the total depth of water known from experience with the measurement site, and the 'expected altitude of the logger above seabed', a definition to be given to the diver, be entered. Note that on data retrieval the second value will be added to the measured depth of water above the logger when performing all wave calculations.

When waves are enabled, the logger takes multiple pressure readings in a burst which allows for the reconstruction of the surface wave time series. There are three parameters which define the wave data:

1. Measurement speed: this defines the sampling rate or period for individual pressure readings used.
 - a. The rate possibilities are 2, 4, 8, and 16Hz
 - b. The sampling rate defines several elements of the data capture:
 - i. The highest possible frequency visible in the data is limited to $\frac{1}{2}$ the sampling frequency. However, this mathematical limit can not usually be achieved because of the attenuation characteristics shown above.
 - ii. The sampling frequency defines the resolution of the frequency spectrum which can be calculated from the wave data.
 - iii. The sampling frequency, together with the burst length, define the lowest frequency which can be assessed in a wave burst.
2. Wave measurement period: this defines how often wave bursts are collected.
3. Burst Length: this defines the number of samples in a wave burst. It must be a power of 2 and is chosen from the list: 512, 1024, 2048, 4096, 8192, 16384, and 32768. The longest wave period to be assessed is defined by: burst length/sampling frequency

The wave parameters work together to define the range of wave information which can be calculated as well as the memory and battery usage.

9.7 Gate conditions


Gating is a method to enable the logger based on a condition that may not be time-based. The logger can be made to start and stop sampling based on either on the conductivity sensor measurement (Marine wet switch) or by a mechanical activation (Twist activation).

The Marine wet switch turns on the sensors to check the value of the conductivity sensor every 15 seconds. If the value exceeds 1mS/cm^2 logging will start until the conductivity values decrease below this threshold.

Marine wet switch

The threshold value for this setting may not be suitable for freshwater applications as many freshwater sources would not exceed 1mS/cm^2 .

For more information about how the twist activation works, see [Twist activation](#).

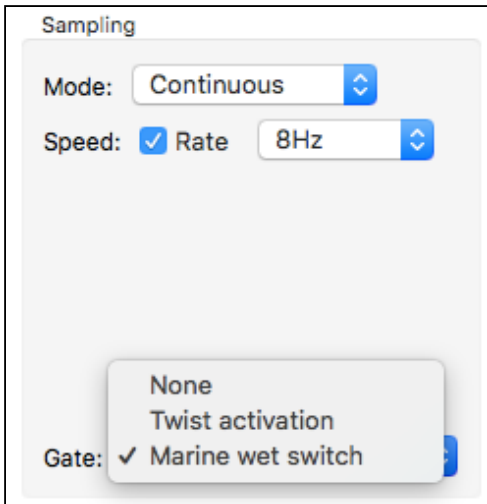

The screenshot shows a 'Sampling' configuration window. It has three main settings: 'Mode' is set to 'Continuous', 'Speed' is set to 'Rate' with a value of '8Hz', and 'Gate' is set to 'Marine wet switch'. A dropdown menu is open for the 'Gate' setting, showing three options: 'None', 'Twist activation', and 'Marine wet switch' (which is selected with a checkmark).

If the gating option is available on your logger select the appropriate option from the drop down menu. To enable the logger based on contact with water, select **Marine wet switch**. To enable the logger by twist activation select **Twist activation**. If the logger is to be enabled based on a specific start time, which is set in the **Configuration** tab, select **None**.

9.7.1 Twist activation

If this option is available and selected, the logger starts or stops sampling based on the action of closing or opening the battery end cap.

The screenshot shows the 'Configuration' tab with the following settings:

- Schedule:**
 - Status: Paused
 - Clock: 2018-01-19 14:20:52 (UTC-5:00)
 - Start: 2018-01-19 2:20 PM
 - End: Gated 27.4 days +10.9 days
- Power:**
 - Battery: Lithium iron
 - External: Other / unknown
- Sampling:**
 - Mode: Continuous
 - Speed: Rate 16Hz
 - Gate: Twist activation

When this option is selected, the logger starts to sample based on the Twist ON/OFF position rather than a schedule. To start sampling first click enable logging, the logger status will then become "paused" until the battery end cap is closed to the ON position. To pause the sampling, turn the battery end cap to the OFF position. The logger will vibrate to indicate if it is sampling or paused. A long vibration indicates that the logger is sampling and three short vibrations indicate that the logger is paused.

⚠ RBRquartz3 BPR|zero

The RBRquartz³ BPR|zero does not have this feature

9.8 Fetching and streaming data

The logger is capable of fetching measurements from the logger when connected over USB from the internal port or, if an external connector is available, over USB or RS-232/485.

The 'Options' section contains the following settings:

- Realtime: None
- Format: Standard resolution
- Serial: 115200
- Mode: RS232
- Storage: Desktop
- Wi-Fi: off

If you are still connected to the logger via USB, you can click **Fetching** (📶) in the **Plot** view toolbar. A graphical display appears of the samples fetched from the logger at the default speed for the logger type rather than of the samples that are scheduled and being stored on the logger.

⚠ If you have an underwater RS-232 interface, select **Serial** from the **Realtime** drop down menu and **RS232** from the **Mode** drop down menu.

Steps

1. Under the **Options** section of the **Configuration** tab, select **Serial** from the **Realtime** drop down menu.

2. If you have an RS-232 interface, select **RS232** from the **Mode** drop down menu. If you have an underwater USB interface or RS485, select **USB** or **RS485** from the **Realtime** drop down menu.
3. For an RS-232 or RS485 connection, select a connection speed from the **Serial** drop down list.

If you are interfacing to an external system that requires a control signal input, such as a modem with a DTR input, you will need to configure the parameters for the auxiliary output control signal from the datalogger.

After the logger setup is complete and the schedule is enabled, the logger will automatically output as sample reading at the set sampling rate.

9.9 Mobile settings

If you have a mobile device, you can use it to configure, download, and view data from a Wi-Fi-capable data logger. The Ruskin app is available on the Apple App Store and Google Play Store.

If you intend to use the Ruskin app, you are advised to enable **Mobile** data storage on the logger. Do not enable it for non-Wi-Fi capable loggers. For additional information about the Wi-Fi module, see the Wi-Fi section of the RBR instrument guide.

With **Mobile** data storage selected, the logger data is parsed differently so that the download is faster over WiFi and a feature called cast detection is activated. The cast detection feature separates each profile into groups of down and upcasts to make viewing of the profiles easier on the mobile device.

To enable compatible storage for mobile devices in Ruskin, connect the data logger to a computer running Ruskin (not a mobile device) and go to the **Options** section of the **Configuration** tab and select **Mobile** from the **Storage** drop-down menu.


9.10 Autoranging and fixed gain

Certain sensors, specifically turbidity and fluorometer sensors are capable of autoranging. The logger can change the gain setting on the front-end amplifiers in order to select the most appropriate range based on the environment being measured. The logger can also set the gain on the sensor to a fixed value selected by the user, rather than allowing the logger to select the gain as it measures.

Steps


1. Navigate to the **Ranging sensors** section of the **Configuration** tab.
2. Any sensors present capable of autoranging are shown in **Sensor**. Select the sensor you want to configure from the list provided.
3. Select the required gain value from the available selections in **Range**.
4. Repeat the above steps for the next available autoranging sensor.

Fixed gain:

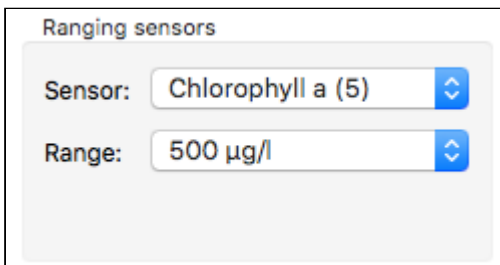

The screenshot shows a window titled "Ranging sensors". Inside, there are two rows, each with a label and a dropdown menu. The first row is labeled "Sensor:" and the dropdown menu is set to "Chlorophyll a (5)". The second row is labeled "Range:" and the dropdown menu is set to "500 µg/l". Both dropdown menus have a blue arrow icon on the right side.


Autoranging (Automatic gain setting):

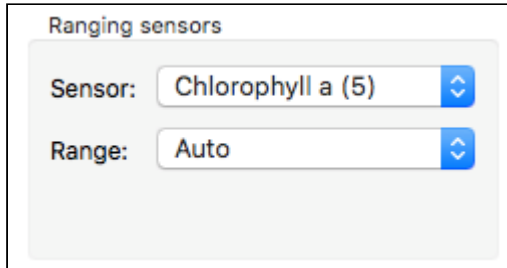

Ranging sensors

Sensor: Chlorophyll a (5)


Range: Auto

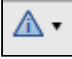Range change events are displayed in the **Plot** view when the **Display diagnostic** is selected from the **Events** button, , located in the **Plot** view toolbar. Range change events are displayed as RANGE XX Units where XX indicates the current range and units are the units of the sensor – typically NTU for turbidity sensors and µg/l for fluorometers. For fast sampling where the change may be occurring over a number of samples the event is displayed as RANGE CHG and is followed by the final range event.

9.11 Voltage channel parameters

In the **Voltage sensors** section of the **Configuration** tab, you can set the sensor parameters for the sensor attached to the voltage channel. Select the appropriate voltage channel and enter the sensor latency and the sampling current. These parameters are used in the deployment time calculation (battery use) and for determining minimal sampling intervals.

 You must enter these parameters for sensors not supplied by RBR.

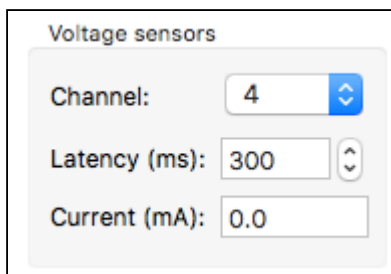

Voltage sensors

Channel: 4

Latency (ms): 300

Current (mA): 0.0

9.12 Valve control

In the **Valve control** section of the **Configuration** tab is specific to the RBR*quartz*³ BPR |zero. In this section you can see the current status of the valve position, manually set the position and schedule the movement of the sensor for the deployment.

Valve control

Status:

Set position: ☐ atmospheric ☒ marine

☒ Schedule movement (00 00:01:00)

☐ Skip first atmospheric duration

Duration (HH:mm):

Interval (DD HH:mm):

The **Status** shows the current position of the valve, this can be toggled manually using the **Set positions** options **atmospheric** or **marine** and will take effect immediately. The movement of the valve to the atmospheric position for the deployment can be set by selecting the **Schedule movement** checkbox. When the checkbox is selected, the controls to set the **Duration**, the time spent in the atmospheric position, the **Interval**, the time between valve movements to the atmospheric position, and whether or not the unit will **Skip first atmospheric duration** become available. See the **Valve** section of [Configure a logger](#) for more details.

Valve movement and external power

The valve will only move when the unit is powered externally. The 8xAA batteries (any chemistry, including LTC) installed in the instrument are intended **only** for purposes of sustaining the instrument during external power interruptions of a few minutes.

9.13 Derived channel parameters

When configuring your logger, you can change the default values of parameters that are used to calculate derived channels. These values are stored in the logger itself and are used in place of the values in **Options** menu > **Preferences** > **Derived channels**.

In the **Parameters** tab, you can configure the parameters which are used to calculate derived channels on a logger that supports derived channels.

Configuration	Information	Calibration	Parameters
Temperature (°C)			<input type="text" value="15.0"/>
Pressure (dbar)			<input type="text" value="10.1325"/>
Atmospheric pressure (dbar)			<input type="text" value="10.1325"/>
Density (g/cm³)			<input type="text" value="1.0281"/>
Specific conductivity coefficient			<input type="text" value="0.0191"/>
Average sound speed (m/s)			<input type="text" value="1550.744"/>
Salinity (PSU)			<input type="text" value="35.0"/>
*Parameters take effect immediately			

9.14 Deployment

Once you have ensured that the batteries are fresh, inspected the O-rings, and programmed the logger (see [Configure a logger](#)), the instrument is ready to be deployed.

There are three precautions you should take to avoid damaging the logger and maximize the deployment autonomy:

1. Pay attention to the maximum pressure rating. All loggers with pressure sensors are individually rated to a maximum depth/pressure. This is indicated by the label which is placed on the logger's sensor end cap. Loggers that do not have a pressure sensor do not have this label but are limited by the maximum depth/pressure rating of either the logger housing itself or of the sensors.
2. Avoid physical stress to the logger. Any type of clamp or bracket which concentrates the stress to the logger body is not recommended for use in logger mooring, mounting, and/or other deployments. Stress due to improper mounting may cause the logger to leak, resulting in the loss of valuable data or permanent damage to the electronics. RBR can provide proper mooring and mounting clamps suited to your specific application.
3. Use desiccant. If the logger is closed up in a warmer environment than the deployment environment, internal condensation can result. Since condensation may cause the circuitry to malfunction, the installation of desiccant prior to deployment is strongly advised.

9.15 Automatic tasks

When working with a large number of similar instruments, Ruskin offers various automatic tasks, which can be toggled on and off from the Instruments menu, or by right-clicking the "Instruments" group in the navigator view. Icons indicating the current state will be displayed on the "Instruments" group. Since these tasks can change the state of the logger, the on/off state defaults to off each time Ruskin is run.

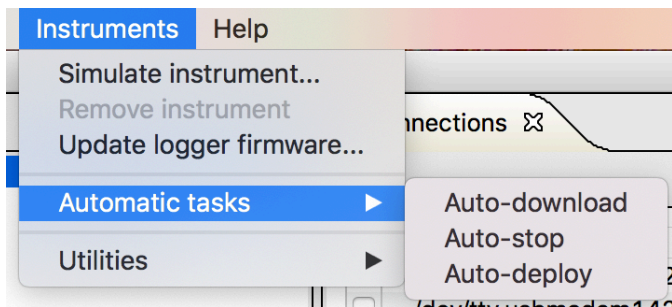


Figure 1. Instruments menu showing automatic tasks options. If a task is enabled, it will show a check mark.

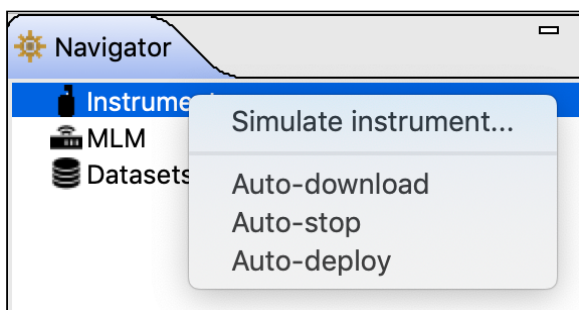


Figure 2. Right-clicking on the "Instruments" group of the navigator view will show the automatic tasks. If a task is enabled, it will show a check mark.

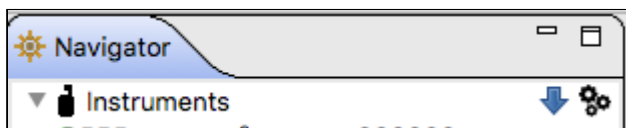


Figure 3. "Instruments" group of the navigator view with icons indicating that auto-download and auto-deploy are enabled.

9.15.1 Auto-download

When an instrument is detected, it will automatically start a download process and store the file using the common logger download naming scheme (serial number, date and time of download) in the last "save to" directory chosen. Other than possibly creating unwanted files, this option is safe since it does not alter the state of the logger.

9.15.2 Auto-stop

When an instrument is detected, it will automatically stop the instrument if the instrument was previously enabled. If auto-download is not also selected, a warning will be displayed about downloading the instrument data. It is not possible to re-enable the instrument without erasing the instrument's memory, so it is advised to also use the auto-download feature at the same time, or ensure that the data is downloaded prior to re-enabling the instrument.

9.15.3 Auto-deploy

When an instrument is detected, the instrument will be stopped and then reprogrammed with the last known configuration settings. It is highly recommended to also use auto-download with this setting since the instrument memory will be erased during the deployment set up. To use this feature, first connect an instrument that will act as the model and configure that instrument with the desired settings and then turn on auto-deploy. Each instrument connected, if it supports the same capabilities of the model instrument, will be configured to match the scheduling of the model instrument. Auto-deploy implies auto-stop since the instrument must be stopped to update it with the new schedule information.


10 Download

10.1 Download data from the logger

You can download data from a logger at any time. If you stop running a schedule, you must download the data before you restart the schedule to prevent the data stored so far from being lost. It is not possible to start logging without erasing the memory contents.

Steps

1. From the **Configuration** tab select **Download**.
The **Save as RSK** dialog box appears.
2. Specify a location and a name for the data file.
By default, the RSK file name uses the Ruskin file naming convention. For more information about the naming convention, see File naming convention below.
3. The name of the new dataset appears and is highlighted automatically in **Navigator** view > **Datasets**. The **Properties** view changes to the new dataset and contains the following tabs: **Analysis**, **Overview**, **Channels**, and **File Info**. All the data that was stored on the logger at the time of the download is automatically plotted in the **Plot** view.

 Downloading data again while the same schedule continues to run, picks up the same data plus any data stored since the last download.

You can add a comment after downloading a dataset.

10.2 File naming convention

In Ruskin, by default, the name of a data file is composed of the following information:

- The first six digits represent the logger serial number.
- The next eight digits represent the current year, month, and day.
- The next four digits represent the current time to the minute.
- The file extension indicates the file format and should not be changed. If you change it, the file extension that you specify becomes part of the name, and the required extension is appended.

For example, the file named 911936_20090522_1613.rsk contains data for a logger with a serial number of 911936 whose data was downloaded in 2009 on May 22 at 4:13 pm.

11 Calibration tab

The **Calibration** tab displays the calibration coefficients for each parameter (sensor) present and the date and time of the last calibration. Selecting the sensor from the dropdown menu **Parameter** toggles between the calibrations for the different sensors on the unit.

The screenshot shows the 'Calibration' tab of a software interface. At the top, there are four tabs: 'Configuration', 'Information', 'Calibration' (which is active), and 'Parameters'. Below the tabs, there is a 'Parameter' dropdown menu currently set to '2: Temperature'. Below the dropdown, the 'Calibration date' is displayed as '2018-01-19 15:34:54'. A table shows the calibration coefficients for the selected parameter:

Label	Value
C0	3.3664490E-03
C1	-25.594000E-06
C2	240.94050E-09
C3	-66.615476E-09

At the bottom of the tab, there are four buttons: 'Store calibration', 'Revert calibration', 'Check calibration expiry' (which has a checked checkbox), and 'Request calibration quote'.

You can request a calibration quote for your logger by selecting **Request calibration quote** and sending the information directly to RBR Ltd. In the **Calibration** tab, click **Request calibration quote**, and when the **Request calibration** dialog box appears, enter the appropriate information. Make sure to verify that all information is correct before sending the request. You can edit any of the coefficients and use **Store calibration** to save the new coefficients to the logger. Use **Revert calibration** to recover to the original coefficients if you have not already selected **Store calibration**.

Calibration coefficients are calculated for each sensor, and the coefficients are stored in the logger. Calibration certificates are provided for each sensor and contain both the calibration equation and the coefficients. Hard copies are provided with each shipment, and the documents are contained inside the shipping box. Please refer to the calibration certificates for the coefficients and residuals. RBR can replace lost or misplaced calibration certificates.

12 Update firmware

Instrument firmware upgrades can be performed from within Ruskin without having to return the instrument to the factory. Ruskin automatically checks to see if a newer version of firmware is available and displays a message in the **Information** tab.

Configuration

Information

Calibration

Parameters

Logger details

Model: RBRmaestro³
Generation: Late 2017
Serial: 200003
Firmware: 1.099
Link: USB

Power

Source: USB
Internal: 0.0V
External: 0.0V


Channels

#	Parameter	Units	Sensor	Ranging
1	Conductivity	mS/cm	Marine	None
2	Temperature	°C	Marine	None
3	Pressure	dbar	RBR	None
4	Sea pressure	dbar	derived	None
5	Depth	m	derived	None
6	Salinity	PSU	derived	None
7	Speed of sound	m/s	derived	None
8	Specific conductivity	µS/cm	derived	None

A newer firmware version is available. Please update to ensure full compatibility.

Update firmware

Click the **Update firmware** button to upgrade the logger firmware. The following screen will appear:

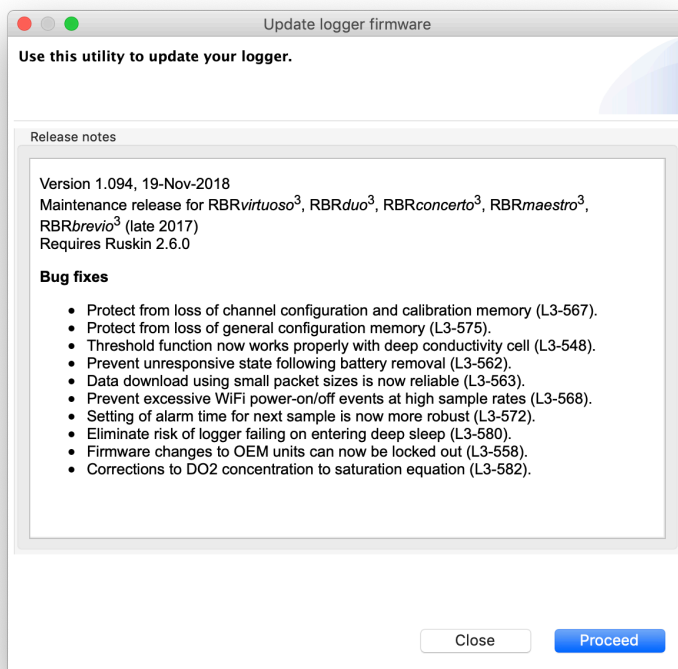


⚠ Do not disconnect the logger until the process is fully completed. Disconnecting the logger during this process may render the logger inoperable.

If for some reason RBR needs to supply a version of firmware, the following method is used to manually update the logger firmware.

⚠ Contact RBR for instructions before proceeding. This method of updating the firmware should only be attempted with the assistance of RBR.

Click the **Instruments** menu > **Update instrument firmware**.

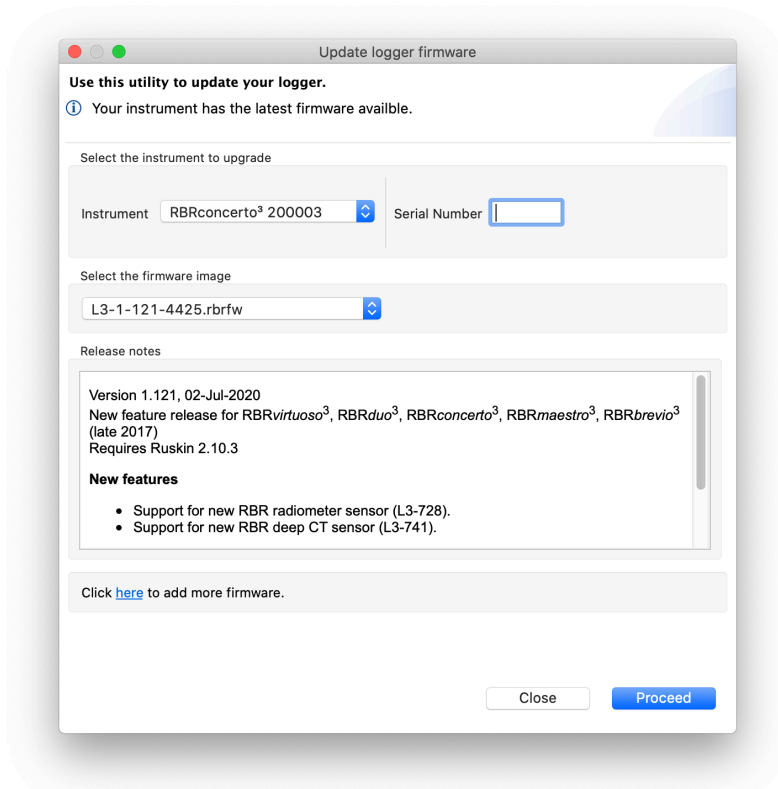


Steps

1. In the **Instruments** menu, click **Update instrument firmware**.
The Update logger firmware dialog box will appear.
2. Click the instrument drop down to select the instrument you wish to upgrade.
 - a. A default firmware image will be selected for your instrument.
 - b. If RBR supplied a firmware file see **Manually adding a firmware image to Ruskin**
3. Click **Proceed** to start the firmware upgrade.
A progress bar shows the status of the upgrade. Once the firmware upgrade is complete, the message *Update completed successfully* appears at the top of the dialog box.
4. If the upgrade doesn't complete successfully, click **Proceed** again to retry until successful.

⚠ Occasionally the logger will not reappear in the **Navigator** view following a successful upgrade. If this occurs, disconnect your logger from the USB port and then reconnect to re-establish communication.

5. Click **Close**.

12.1 Manually adding a firmware image to Ruskin

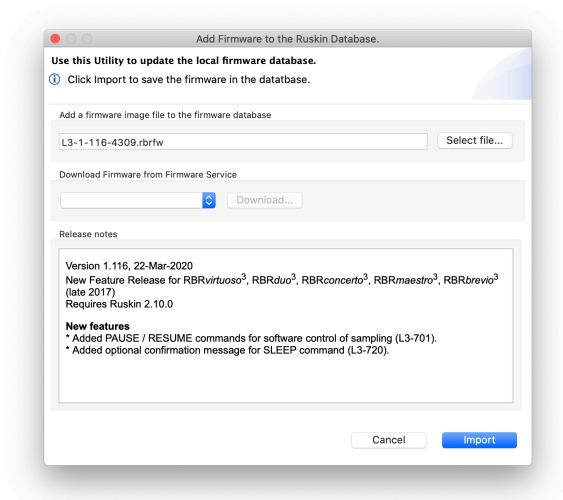

If for some reason RBR needs to supply a version of firmware, the following method is used to manually add that firmware image to Ruskin.

1. Click the link at the bottom of the **Update instrument firmware** dialog.

Click [here](#) to add more firmware.

2. Click the **Select file** button and browse to the location of the firmware update file provided. The file will have the extension `.rbrfw`.
3. Click **Import**.
4. Click **Close**.

13 Datasets

13.1 Open a stored dataset

You can open any stored dataset to explore its contents.

Steps

1. Click **File** menu > **Open dataset**.
2. Double-click the .rsk file that contains the data that you want to view.
3. The name of the dataset appears and is highlighted automatically in the **Navigator** view. The **Properties** view changes to the dataset. The data in the file is automatically plotted in the **Plot** view.

✓ To close a dataset, right-click its name in the **Navigator** view and click **Close dataset**. Or use **File > Close dataset**

⚠ **Ruskin performs an integrity check that is intended to make sure that older data files are compatible with newer versions of Ruskin software. This information is displayed in [File info](#). If the file requires updating the message indicates the issue with the file, and how long an update will take.**

RBR strongly recommends that all files that have issues be updated.

13.2 Analysis

13.2.1 Analysis tab

The **Analysis** tab contains information and settings for configuring the calibration information and to display statistical information. You must already have an open dataset to view and configure these settings. For information about how to open a dataset, see [Download](#).

Cursor tab

When a file is selected and plotted, the **Analysis** tab can be selected to display information about the dataset channels and their values.

Analysis
Overview
Channels
File info

Cursor
Calibration

Sample82304
Time2014-07-14 15:50:48.583 (UTC+0.00)

☐ Display statistics
Number of samples100

Channel	Value	Unit
Conductivity	35.9141208	mS/cm
Temperature	10.6171508	°C
Pressure	23.3886295	dbar
Sea pressure	13.2561285	dbar
Depth	13.1746762	m
Salinity	32.2235194	PSU
Specific conductivity	49517.0768046	µS/cm
Density anomaly	24.7407182	kg/m ³
Speed of sound	1488.8871038	m/s

Copy selection

This table reports the value at each sample number when selected in the plot referenced to the vertical black cursor.

The sample number and time of the sample are displayed.

Selecting **Display statistics** gives you the ability to determine the average value and standard deviation over a range of samples. Change the number of samples in the average by using the spin buttons. The grey bar that appears on the plot view is the range of the samples in the average.

Analysis
Overview
Channels
File info

Cursor
Calibration

Sample82204 - 82304
Time2014-07-14 15:50:40.250 - 2014-07-14 15:50:48.583 (UTC+0.00)

☒ Display statistics
Number of samples100

Channel	Value	Avg	Std	Unit
Conductivity	35.9141208	36.1150564	0.1241250	mS/cm
Temperature	10.6171508	10.9486153	0.1903274	°C
Pressure	23.3886295	23.1452399	0.4423966	dbar
Sea pressure	13.2561285	13.0127389	0.4423966	dbar
Depth	13.1746762	12.9327821	0.4396783	m
Salinity	32.2235194	32.1318196	0.0896454	PSU
Specific conductivity	49517.0768046	49363.7262802	134.4645312	µS/cm
Density anomaly	24.7407182	24.6105587	0.0969351	kg/m ³
Speed of sound	1488.8871038	1489.9469193	0.5965524	m/s

Copy selection

Calibration tab

When a file is selected and plotted for re-calibration the **Calibration** tab can be selected to assist with calculating calibration coefficients, see [User calibration](#).

13.3 Overview

When a file is selected and plotted the **Overview** tab can be selected to display general information about the dataset.

080294_20200318_1612_working normally.rsk

Analysis
Overview
Channels
File info

File name: /Users/tbanjo/Downloads/080294_20200318_1612_working normally.rsk

Logger

Model: RBRmaestro
Serial: 80294
Firmware: 1.410

Deployment

Time offset: UTC+2:00
Deployment start time: 2000-01-01 00:00:00
Time offset: 2020-03-16 08:10:51
Last sample time: 2020-03-18 16:12:15
First event time: 2020-03-16 08:11:03
Last event time: 2020-03-18 16:12:17

Continuous

Period: 00:00:03

Gate

Gate: thresholding
Channel: 3: Pressure
Condition: Above 1.0
Interval: 00:01:00

Dataset

of samples: 67225
of events: 1
of diagnostics: 36
of errors: 0

Comment

Save comment

RBR#0006105revH

- 68

This is also the form on which you can enter a comment for the dataset and then press **Save comment** to save it.

13.4 Channels

The **Channels** tab displays three additional tabs: **Information**, **Calibration**, and **Parameters**.

1. The **Information** tab displays the measured parameter, the sensor manufacturer and the range setting. The type of derived channels and how it is calculated is displayed in a separate table.
2. The **Calibration** tab displays the calibration coefficients for each sensor.
3. The **Parameters** tab displays the values of the parameters, default values if other required parameters are required and the method used to calculate the derived channels.

13.4.1 Information tab

The **Information** tab displays the measured parameters, the sensor manufacturer and the range setting (if applicable). It also shows any derived channels that are available and a description of the methodology used in the calculation of that derived parameter.

Analysis

Overview

Channels

File info

Information

Calibration

Parameters

Measured channels

#	Parameter	Sensor	Range
1	Conductivity (mS/cm)	Marine	None
2	Temperature (°C)	Marine	None
3	Pressure (dbar)	RBR	None
4	Dissolved O ₂ saturation (%)	Oxyguard	None
5	Oxidation/Reduction Potential (V)	Idronaut ORP	None
6	PAR (μMol/m ² /s)	Licor PAR	None
7	pH (pH_units)	Idronaut pH	None
8	Turbidity (NTU)	Seapoint Tu	Auto
12	Temperature (°C)	Pressure correction	None

Derived channels

#	Parameter	Notes
9	Sea pressure (dbar)	Removes atmospheric pressure
10	Depth (m)	Simplified, using density parameter
11	Salinity (PSU)	PSS-78
13	Specific conductivity (μS/cm)	
14	Speed of sound (m/s)	UNESCO algorithm
15	Density anomaly (kg/m ³)	
16	Dissolved O ₂ concentration (mL/L)	



T-string

Thermistor strings have channel 1 referring to the node at the end of the string and the last channel being the node closest to the connector.

13.4.2 Calibration tab

The **Calibration** tab displays the calibration coefficients and temperature correction coefficients (as applicable) for each channel (sensor) and the date and time of the last calibration.

960664_20200430_1226.rsk

Analysis Overview Channels File info

Information Calibration Parameters

Parameter 1: Conductivity

Calibration date: 2019-11-20 16:33:04Z

Label	Value
C0	54.8992570 E-3
C1	186.6233400

Label	Value
X0	842.5916300 E-6
X1	-16.5613530 E-6
X2	0.0000000
X3	0.0000000
X4	0.0000000
X5	0.0000000
X6	0.0000000
X7	15.0678240

Label	Value
X8	10.0000000

Store and recompute data Revert calibration ☒ Use deployment calibrations

You can edit any of the coefficients and use **Store and recompute data** to recalculate the dataset. Use **Revert calibration** to recover to the original coefficients if you have not already selected **Store and recompute data**. To recover the original calibration coefficients edit one of the values and click in another cell. The **Use deployment calibrations** checkbox then becomes active and unchecked. Check this checkbox to restore the coefficients used by the logger and then press **Store and recompute data** to save the coefficients.

13.4.3 Parameters tab

When a file is selected and plotted, the **Parameters** tab can be selected to display the parameters used to calculate any applicable derived channels.

The tab reports the relevant derived channel information for the sensors on the logger. The parameters can be edited to change the derived channel calculation. Once a parameter is modified, the **Update and recompute** and **Revert settings** buttons become active.

Revert settings rereads the RSK file and populates the form with the parameters from the file. **Update and recompute** writes the new parameters to RSK file and re-displays newly calculated data.

The following example is for a CTD and dissolved oxygen logger where you can change the calculation parameters to calculate the derived channels:

Analysis Overview Channels File info

Information Calibration Parameters

☒ Simplified depth derivation
☐ Seawater depth derivation

Atmospheric pressure (dbar) 10.132501

Density (g/cm³) 1.0260206

Latitude (degrees) 0.0

Speed of sound type UNESCO

Specific conductivity coefficient 0.0191

Oxygen concentration units mL/L

Salinity 35.0

Absolute pressure (dbar) 10.1325

Temperature (°C) 15.0

Average sound speed (m/s) 1506.8

Update and recompute Revert settings

Selecting the **Seawater derivation** in the **Parameters** tab results in a depth calculation based on UNESCO Technical paper 44.

The depth derivation equations can be found under the menu item **Options** menu > **Preferences** > **Derived Channels** > **Depth** tab.

For wave loggers, you can change the wave calculation by adjusting how the depth is calculated and by adjusting the instrument altitude. This function is available in the '**Configuration**' tab and under the '**Sampling**' tab.

Configuration Information Download Calibration Parameters

Schedule

Status: Not enabled

Clock: 2020-04-29 01:40:14-04:00 UTC Local

Start: 2020-04-29 1:00 AM Now

End: 2020-05-17 18.7 days +469 days

Power

Battery: Lithium iron Fresh

External: None Fresh

Extended battery endcap

Memory used: 0% Download...

Enable Revert settings Use last setup

Schedule is valid - First burst will start at 02:00:00

Sampling

Mode: Wave

Speed: Rate 4Hz 1.0 Instrument altitude (m)

Duration: 1024 0.0 Mean depth of water (m)

Interval: 00:30:00

Instrument altitude must be equal to or less than mean depth

Gating

Mode: None

Options

Realtime: None Format: Standard resolution

Serial: 115200 Mode: RS232

Storage: Desktop Wi-Fi: off


Ranging sensors

Sensor: Turbidity (7)

Range: Auto

13.5 File info

When a file is selected and plotted the **File info** tab can be selected to display information about the file.

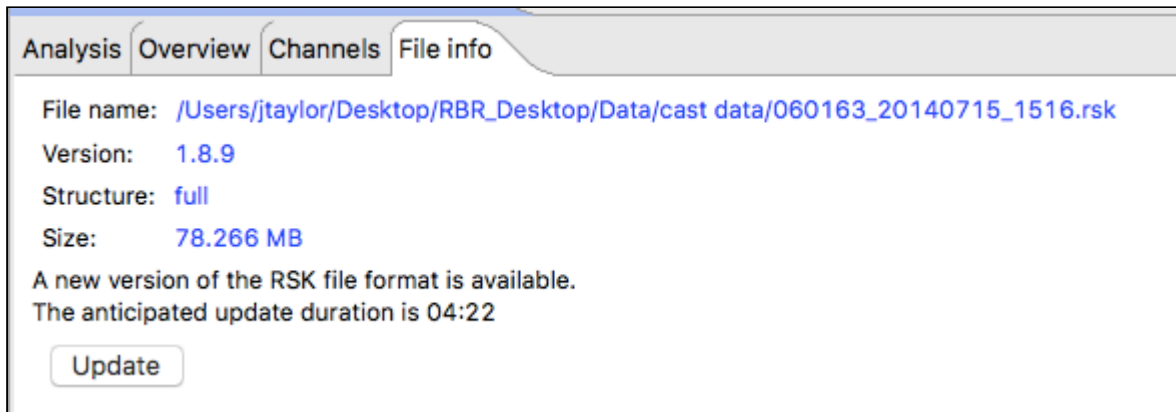

⚠ There are two formats of RSK file: full and EP. EP stands for Easy Parse (mobile compatible format that is typically used with Wi-Fi enabled loggers). Only EP format files can be displayed on a mobile device. EP format files have calibration coefficients that cannot be edited, hence you cannot recalculate EP format files.

❗ Files created by older versions of Ruskin must be updated to ensure compatibility. Failing to do so may result in odd graphical display and incorrect reporting of the sample values.

If the message *A new version of the RSK file format is available.* appears, click **Update**. The update process may take some time, however, Ruskin does estimate the time with the message *The anticipated update duration is <time period>.*

13.6 Plot view

You can use the **Plot** view to view a graphical display of data in datasets or live data. When viewing live data, the logger must still be attached.

A toolbar at the top of the **Plot** view contains various buttons to help you customize, explore, and export the graphical display.

Each channel appears as a different colour in the graphical display. These colours are specified for all graphical displays in **Options** menu > **Preferences** > **Plotting** and can be changed there only. You can also change other defaults affecting the **Plot** view in **Preferences**. For information, see [Specifying plotting preferences](#)

⚠ Scaling of the data is based on the minimum and maximum value sampled for each channel - sometimes there are erroneously high or low values that may make the real data appear incorrect. Use the vertical zoom



to increase the scale of the data displayed.

You can click a particular time (location) in the plot to view each channel value and related statistics at that time. A "double lollipop" vertical black line marks the place. The **Cursor** tab panel above (or on the side of the plot for live data) displays the channel values, units, the sample number, and the time that the data was measured.


For datasets only, you can select the **Display statistics** checkbox to view the average value and standard deviation for each channel based on the number of samples that you specify.

If you want to copy the data to the clipboard and then paste it into another application, select a row, a column, a cell or click on the word channel for the entire table and then click **Copy**.

The graphical display for each dataset appears on its own tab in the **Plot** view. The dataset file name appears at the top of the tab.

13.6.1 Thumbnail view

A downsampled representation of the dataset appears in a thumbnail view, along with an indicator of the current plotted time range. The indicator can be positioned on the thumbnail view by clicking on the thumbnail view or dragging the indicator. The indicator can be resized by dragging the edges, which will zoom the plot along the time domain to match the new indicator size. The thumbnail always shows time-domain data, even if the plot is switched to depth-domain mode.

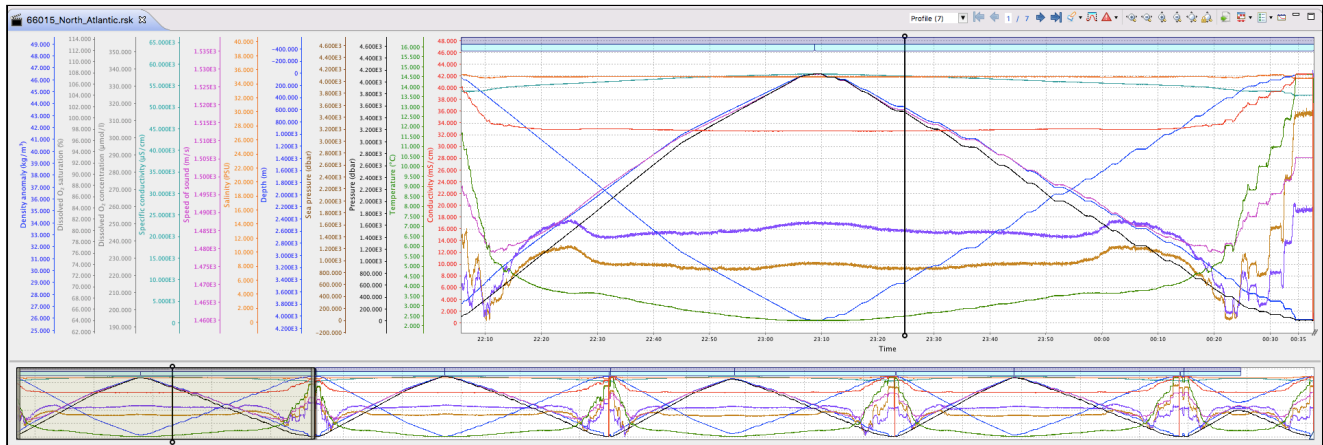

13.6.2 Live data


You can use the **Plot** view to view a graphical display of logger sampling. The data can come from one of two sources: fetching or streaming. Fetching can be used on a logger that is either not enabled or enabled without a streaming option. Streaming can be used on a logger that has been enabled. If fetching is used on a logger with streaming selected and the logger is enabled, the current file used for the fetching data will be closed and a new file started for the streaming data; fetching will be disabled.

The graphical display for live data for each logger appears on its own tab in the **Plot** view. The logger model and serial number appear at the top of the tab.

⚠ Live data collection support in Ruskin is intended for debugging, development, and schedule trial purposes only and is not intended as a robust data collection solution. The performance will degrade significantly if large (>50-100K samples, depending on hardware) data collections are performed, especially if there are a large number of events being reported.

13.6.3 Plot Tools

Dataset toolbar




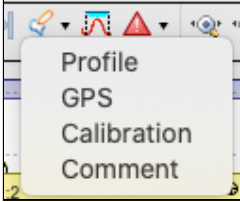





Live plot toolbar


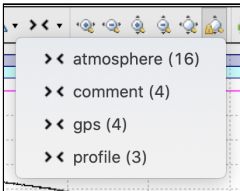




The live plot toolbar appears to the right of the dataset toolbar.






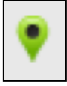


Tools for datasets and live data




Button	Purpose	Use
	Filter	<p>Changes the type of annotation for the navigation buttons</p> <ul style="list-style-type: none"> If an annotation is selected, switching filters zooms the view to the newly selected annotation. If no annotation is selected and switching filter from one profiling annotation type to another (profile, upcast, downcast), the view does not change. If no annotation is selected and switching filter between categories (profile, upcast, downcast to any other non-profiling annotation type, or any non-profiling annotation type to any other annotation type), the view moves to the first annotation of the new category. <ul style="list-style-type: none"> Comment → Profile moves to the first profile Profile → Comment moves to the first comment Comment → Downcast moves to first downcast Profile → Downcast does not move.
	Move to first, previous, next, and last	<p>Move to the first, previous, next, and last annotation of the filter type</p> <p>If the annotation is selected also moves the selection</p>
	Index	<p>The current annotation index, which can be edited.</p> <p>If the currently selected annotation matches the time domain extent the text will appear blue, otherwise the text will be red</p> <p>Click the middle of the index (the '/') to zoom to the annotation.</p>

Button	Purpose	Use
 	Create annotation	<p>Select the type of annotation to create.</p> <p>After selection, click and drag left/right on the main plot to create the annotation. When the click is released the annotation will be created as a temporary annotation, selected, and show its editable tooltip.</p> <p>Profiles or geodata cannot overlap the same type - new annotations will fill the available space between existing profiles.</p> <div>  The annotation must be edited (such as adding a title or description, or, in the case of profiles, by adding an up or downcast) and saved (press ENTER/Return, or click the green checkmark on the tooltip) before it will be saved in the RSK file. </div> <div>  Only available in the time domain </div>
	Cast detection	<p>Runs a cast detection algorithm based on depth and conductivity to automatically generate profiles and casts</p> <div>  Overwrites logger generated cast events and profiles </div>
	Event visibility	<p>Turn on and off the visibility of the various levels of events (error, warning, information, and diagnostic)</p>

Button	Purpose	Use
 	Annotation collapse	<p>Toggles the annotations collapse or expanded state for an entire category of annotation.</p> <p>In the expanded state all data within the time bounds of the annotation will be displayed.</p> <p>In the collapsed state all data within the time bounds of the annotation will be hidden and a time break marker will be visible on the time axis. The annotation marker will appear as a point annotation.</p> <p>Individual annotations can be collapsed or expanded from the toolbar in the annotation bubble.</p>
	Zoom control	<p>Zoom in/out horizontally, vertically, and reset the zoom to display the maximum extent of each axis</p> <p>Zooming the range will centre the data on the currently selected sample.</p>
	Auto-ranging	<p>Toggles the auto-ranging of the channel axes</p> <div data-bbox="678 1228 1442 1344"> <p> Disabling the auto-ranging of the axis can be useful for looking at trends in data</p> </div>
	Export plot	Exports the current view of the main plot to pdf or png

Button	Purpose	Use
	Data rendering type	<p>Choose lines, shapes, or lines and markers for the trace lines</p> <div>  If no data appears in the Plot view, try changing the rendering to "Display Markers". Time spans that are larger than expected will cause breaks between data points and lines will not be drawn connecting those points, whereas markers draw at each individual point. </div>
	Toggle channel visibility	<p>Turn on or off channels to be visible in the plot view</p> <p>Toggle on raw values removes the calibration equation from the sensor value</p>
	Plot by depth	<p>Toggles between plot by time and plot by depth</p> <div>  If there is no depth channel the plot would then use the next pressure or pressure derived channel starting from the bottom of the channel list </div>
	Show GPS map	<p>Launches a map which plots all the GPS location annotations in the dataset. The map will infer track lines based on the timestamps of the acquired locations.</p>

Tools for live data

Button	Purpose	How to use
	Toggle the side data panel	The side data panel appears beside the charts and shows the file location that will be used to capture samples, the number of samples collected, the values of the last received sample, and the currently selected sample. The side panel can be toggled on and off with this button.
	Live plot time range selection	Click the button to display a drop-down list of time span options to display the data by time period. For example, display 2 minutes of data. You can also choose to display all of the data collected.
	Start or pause fetching	The logger supports either streaming or fetching data. Fetching is the action of asking the logger to take a reading and report it. Ruskin displays the fetched data every 1-2 seconds. Fetching is disabled if the logger is enabled and has streaming turned on.

13.6.4 Shortcuts / Controls

- Data cursor:
 - Click on the main plot to set the data cursor (double lollipop indicator).
 - Move to the previous/next data sample: Left/Right Arrow Key
 - To move by hundreds of samples, use Shift - Arrow
 - To move by ten thousands of samples, use Alt - Arrow
 - To move by millions of samples, use Shift - Alt - Arrow
- Annotations
 - Double click on an annotation bar to zoom in to the range of the annotation.
 - Click and drag on the edge of an annotation bar to resize the annotation, if the annotation is resizable (CELL GPS annotations are not).
 - Click and drag on the annotation bar to move the annotation, if the annotation is moveable (CELL GPS annotations are not).
- Main Plot
 - Double click on the plot to reset to fully zoomed out.
 - Shift-click and drag on the plot to select a zoom region. The zoom region will be denoted by a rectangle. Make sure to press shift before clicking.
 - Control-click and drag on the plot to pan the plot. Make sure to press control before clicking.
 - The mouse wheel will zoom the plot in/out based on the current mouse position.
- Main Plot Axes
 - Double-click on an axis to set the axis to auto-range (show the full range of data).

- Click and drag an axis to pan the axis.
- Shift-click and drag an axis to zoom the axis in or out.
- The mouse wheel will zoom the axis in/out based on the current mouse position.
- Thumbnail
 - To resize the viewable range, click and drag on the handles (grey bars) on or use the mouse wheel within the viewable range indicator.
 - Click and drag the viewable range indicator to pan
 - Click on a region not covered by the viewable range indicator to centre the viewable range at that location.


13.7 Exporting datasets

You may want to share your data with others or analyse your data using other software. You can export data as a text file, which can then be imported into many applications, or export it in a particular format for analysis such as Microsoft Excel or OceanDataView.

You must already have downloaded the data to a dataset or opened an existing dataset.

Steps

1. Right-click the dataset whose data you want to export, and hover to **Export as** to open a submenu, or use **File** menu > **Export dataset**.

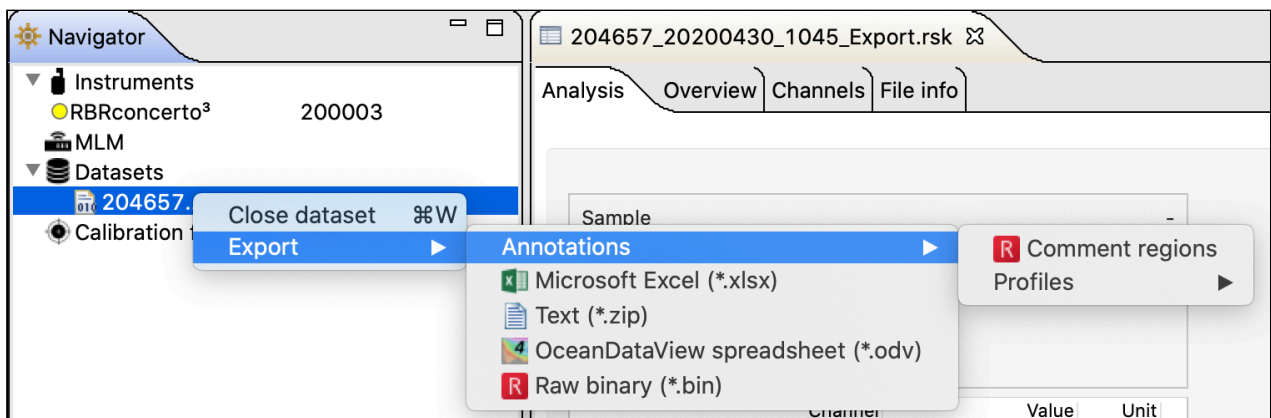

2. Select the appropriate export format (Excel, Text, OceanDataView or Bin).

i Annotations can be exported to individual files by selecting the annotation category you would like to export.

i RSK files can be imported directly into Matlab with our toolkit [RSKtools](https://www.rbr-global.com) that is available for download from our website at www.rbr-global.com. The RSK file is a single file database based on SQLite that allows us to have very large files with high-speed access to any part of the dataset.

3. Specify a location and a name for the data file.
4. Click **Save**.

14 User calibration

Calibration coefficients are calculated for each sensor and the coefficients are stored in the logger. Calibration certificates are provided for each sensor and contain both the calibration equation and the coefficients. Hard copies are provided with each shipment and the documents are contained inside the shipping box. Please refer to the calibration certificates for the coefficients and residuals. RBR can replace lost or misplaced calibration certificates.


Change calibration coefficients

Sensors such as dissolved oxygen, turbidity and pH that can be field calibrated will require you to update the calibration coefficients for these channels periodically. You may also need on occasion to manually enter new coefficients, although this is not recommended for factory calibrated sensors (for example C, T or D) unless instructed by RBR.

Steps

You can view static information about an instrument at any time as follows:


1. In the **Navigator** view, under the **Instruments** list, click the appropriate logger.
2. Click **Analysis** tab > **Calibration** tab to show the current calibration coefficients.
3. To manually change a coefficient, click on the appropriate entry in the table (C1, C2, C3, etc.). The current entry will be highlighted, and the new value can be typed.
4. If a two point calibration has been performed, and calculated coefficients have been copied, right click on either the **Time** or **Parameter** entry for the parameter you wish to modify. Select **Paste to selected row** from the drop down menu.
5. Click **Store calibration** to write the calibration coefficients to the logger.
6. If you need to revert to previous coefficients, click **Revert calibration**.

 If you do not click **Store calibration**, the coefficients will not be written to the instrument, and will be lost once your session is closed.

14.1 N-Point calibration

Sensors such as pH, Dissolved Oxygen (Oxyguard or Rinko) or turbidity generate a voltage output that is proportional to the value of the parameter being measured. To calibrate these sensors, Ruskin offers an N-point calibration method to generate calibration coefficients.

14.2 Oxyguard DO calibration

 The Oxyguard DO sensor has a true zero point and therefore it can be calibrated using the single-point calibration method using a reading at 100% oxygen concentration only. The 100% calibration should be performed at the expected temperature and salinity of the deployment environment.

If the logger has a pH/ORP sensor and Oxyguard DO sensor, it is advisable to ensure that the pH/ORP and Reference sensors are submerged in the water during measurement.

Equipment and Materials

1. Two Large mouth beakers.
2. Sodium sulphite Na_2SO_3
3. Aquarium air pump.
4. Magnetic stirrer.
5. Water

Preparing solutions

Reference Point 1 solution – Oxygen saturated solution at expected temperature and salinity of deployment environment


1. Fill the large beaker with 2 L of water and install magnetic stirrer.
2. Bubble air through the water using an air pump (an aquarium air pump would work).
3. Switch ON the air-pump and the magnetic stirrer.

Reference Point 2 solution – Dissolved oxygen concentration of zero

1. In a beaker, dissolve approximately 5 tsp of sodium sulfite (Na_2SO_3) into 500 mL tap water.
2. Mix the solution thoroughly with a magnetic stirrer. The solution will be oxygen-free after 15 minutes.

Steps

1. In Ruskin, configure the instrument to sample at a fast rate, between 6 Hz and 3 seconds.
2. Use **Sync to PC** to ensure the logger clock is synchronized to the PC clock, and ensure the end time is set so that the logger will keep sampling until calibration is complete.
3. Submerge the dissolved oxygen sensor in the Reference Point 1 solution for at least 15 minutes near the stirrer so that it is in the best mixed area of the bath.
4. Take sample readings for at least 15 minutes for the 100% calibration point, making note of the time that the sample is being measured.
5. Submerge the dissolved oxygen sensor in the Reference Point 2 solution for at least 15 minutes for the 0% calibration point, making note of the time that the sample is being measured.
6. Retrieve the data from the data logger as per the steps in [Download](#).
7. The calibration data should now be displayed in the **Plot** view. In the **Properties** view, go to **Analysis** tab > **Calibration** tab.
8. Select the dissolved oxygen sensor type from the drop down list.
9. The **Number of Samples** spinner box is automatically set to **100**.
This value is the number of sample points Ruskin will average the calibration coefficients for the sensor. Typically, this value should be in the range of 50 to 100 samples.
10. Click on a stable point in the **Plot** view corresponding to 100% oxygen. In the table in the first row, under **Real Avg**, enter 100 and press enter.
11. Select the check box in the second row in the table, then click on a stable point in the **Plot** view corresponding to 0% oxygen. In the table in the second row, under **Real Avg**, enter 0 and press enter.
12. Ruskin automatically calculates the calibration coefficients, and these values appear in **Calculated coefficients**. Clicking the **Copy** button saves the new calibration coefficients to the clipboard.
13. Follow the steps in [Change calibration coefficients](#) to update the coefficients for this sensor in the data logger.

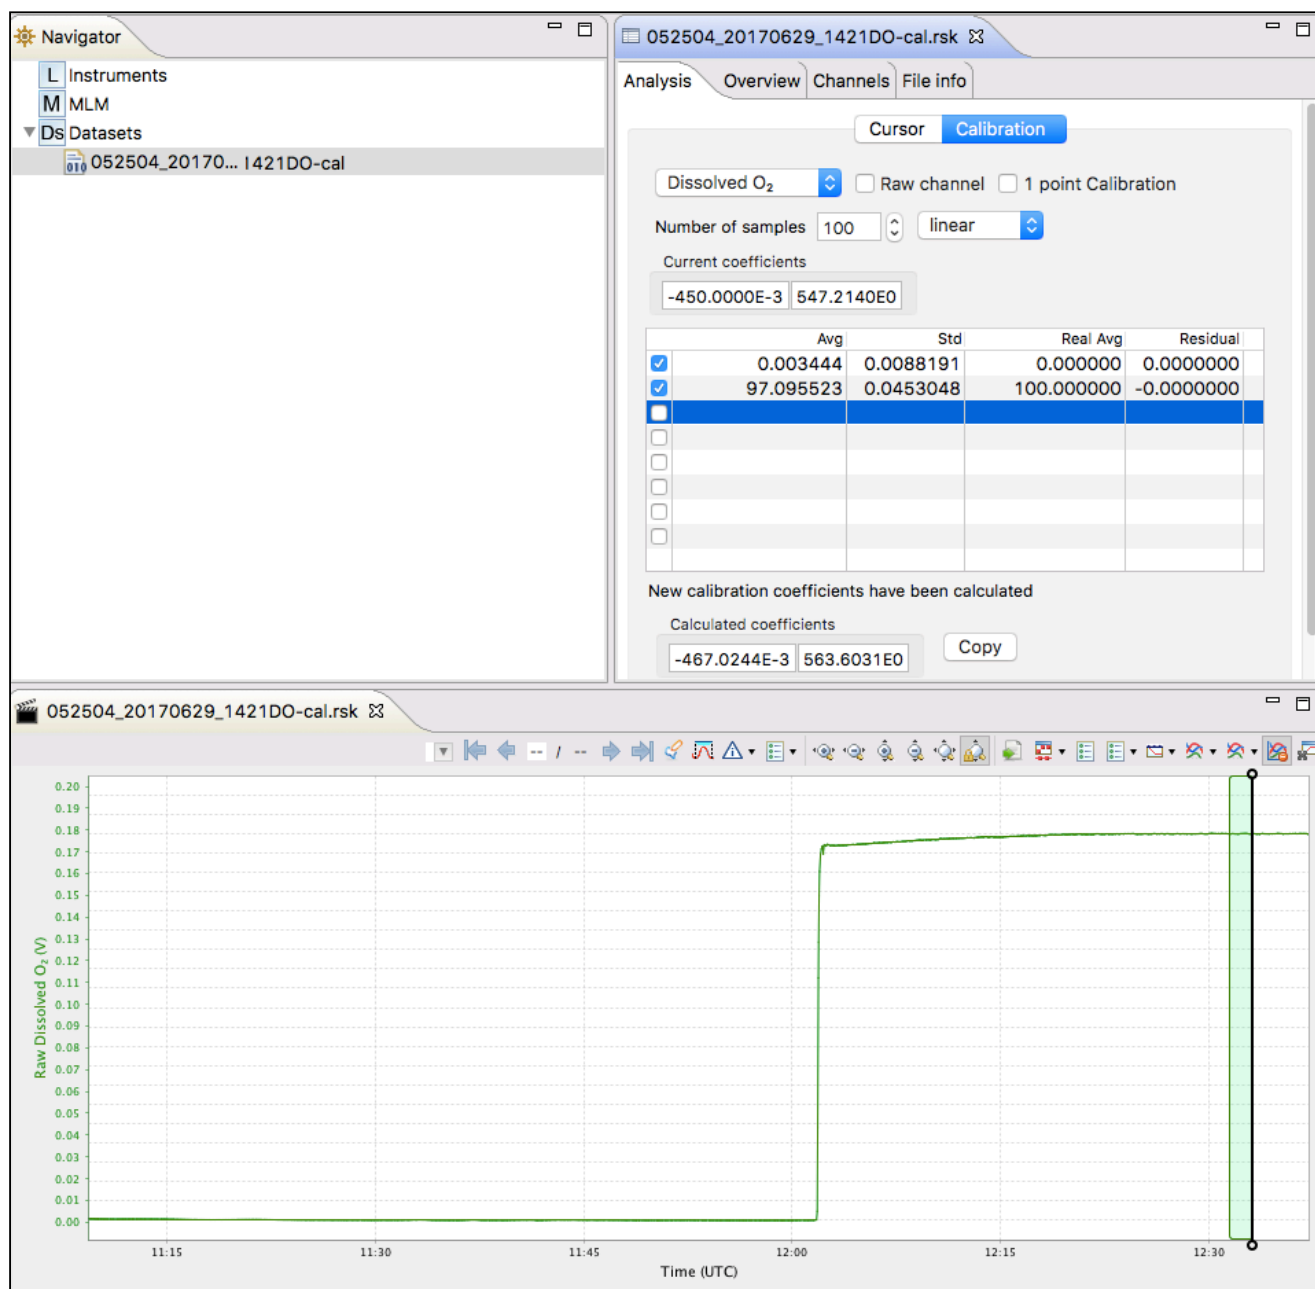

14.3 Rinko optode calibration

The Rinko optode can be calibrated using Ruskin N-point calibration.

Equipment

1. Two Large mouth beakers
2. Sodium sulphite Na_2SO_3
3. Aquarium air pump
4. Magnetic stirrer

Preparing solutions

Reference Point 1 solution – Oxygen saturated solution at expected temperature and salinity of deployment environment


1. Fill the large beaker with 2L of water, and install magnetic stirrer.
2. Bubble air through the water using an air pump (an aquarium air pump would work).
3. Switch ON the air-pump and the magnetic stirrer.

Reference Point 2 solution – Dissolved oxygen concentration of zero

- In a beaker, dissolve approximately 5 tsp of sodium sulphite (Na_2SO_3) into 500 mL tap water. Mix the solution thoroughly with a magnetic stirrer. The solution will be oxygen-free after 15 minutes.

Steps

1. In Ruskin, configure the logger to sample at a fast rate, between 6 Hz and 3 seconds.
2. Use **Sync to PC** to ensure the logger clock is synchronised to the PC clock, and ensure the end time is set so that the logger will keep sampling until calibration is complete.
3. Submerge the dissolved oxygen sensor in the Reference Point 1 solution for at least 15 minutes near the stirrer so that it is in the best mixed area of the bath.
4. Take sample readings for at least 15 minutes for the 100% calibration point, making note of the time that the sample is being measured.
5. Submerge the dissolved oxygen sensor in the Reference Point 2 solution for at least 15 minutes for the 0% calibration point, making note of the time that the sample is being measured.
6. Retrieve the data from the data logger as per the steps in [Download](#).
7. The calibration data should now be displayed in the **Plot** view. In the **Properties** view, go to **Analysis** tab > **Calibration** tab.
8. Select the dissolved oxygen sensor type from the drop down list.
9. The **Number of Samples** spinner box is automatically set to **100**.
This value is the number of sample points Ruskin will average the calculate the calibration coefficients for the sensor. Typically, this value should be in the range of 50 to 100 samples.
10. Click on a stable point in the **Plot** view corresponding to 100% oxygen. In the table in the first row, under **Real Avg**, enter 100 and press enter.
11. Select the check box in the second row in the table, then click on a stable point in the **Plot** view corresponding to 0% oxygen. In the table in the second row, under **Real Avg**, enter 0 and press enter.
12. Ruskin automatically calculates the calibration coefficients, and the values appear in **Calibration coefficients**. Clicking the **Copy** button saves the new calibration coefficients to the clipboard.
13. Follow the steps in [Change calibration coefficients](#) to update the coefficients for this sensor in the data logger.

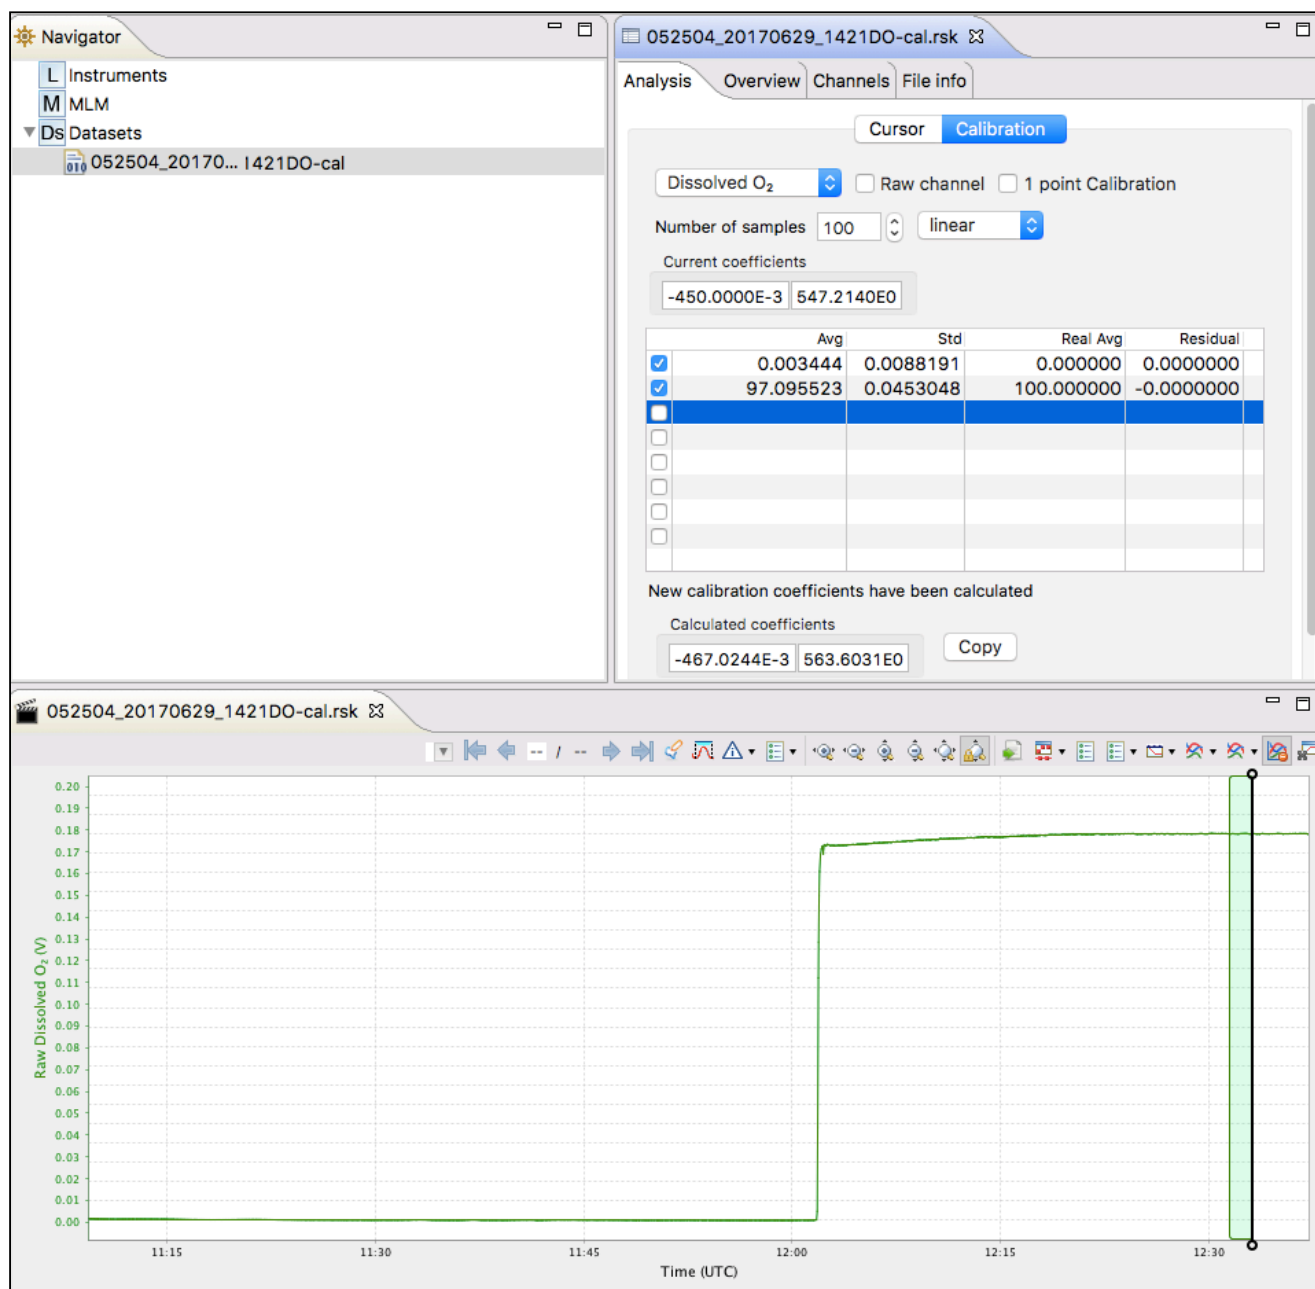

14.4 Turbidity calibration


The Seapoint turbidity sensor is calibrated by RBR with a two-point calibration technique. We recommend doing a two-point calibration performed under fluorescent lighting.

Alternatively, one can do a single point calibration. If doing a single "0" point calibration in distilled water the calibration will only correct the coefficients for an offset. If only a single non zero point is performed the calibration will recompute the slope coefficient. We recommend to only perform a "0" point calibration unless you are confident on your non zero standard.

14.4.1 Two-point calibration


Equipment (entire logger submerged)

- 4000-FTU Formazin standard – 500ml
- Distilled water – 5 L
- Black-walled, wide-mouth container (large enough to hold the logger)
- Volumetric flask 1000 ml, class A
- Volumetric flask 200 ml, class A
- Stir stick

 If you plan to submerge only the sensor, you can decide on the container volume and adjust the solution volumes appropriately.

Steps (preparing solutions)

1. In Ruskin, configure the data logger to sample using a 10-second sampling interval and set the sensor to autoranging - see [Autoranging and fixed gain](#).
2. Use **Sync to PC** to ensure the logger clock is synchronized to the PC clock, and ensure the end time is set so that the logger will keep sampling until calibration is complete.
3. Flush the sensor, container and glassware with distilled water and dry them.
4. Fill the black wall container with 5000 ml distilled water using the large volumetric flask.
5. Set the sensor in the container until the sensor is fully submerged in the distilled water.

 The distance from the sensor's windows to the container wall must be at least 20 cm. If possible, place a dark cover on the calibration container and avoid direct light on the container.

6. Record the data in distilled water for five minutes.
This is the zero-turbidity calibration point.
7. Fill the 500 ml volumetric flask with Formazin Standard. Remember to gently shake the bottle before opening the Formazin solution.
8. Add 500 ml Formazin Standard to the black wall container with distilled water, and gently mix the solution with a stirring stick.
9. Calculate the value of the standard turbidity solution at calibration point according to the following formula:

Calculating dilution

$$Tu_{STD} = Tu_{STK} * V_{TOT} / (V_{DW} + V_{TOT}) = 363.63 \text{ FTU}$$

Where:

Tu_{STD} = turbidity of the standard solution (FTU)


Tu_{STK} = 4000 FTU – turbidity of the stock solution


V_{TOT} = 500 ml volume of stock solution at calibration point (ml)

V_{DW} = 5000 ml - initial volume of distilled water

10. After five minutes, remove the logger from the calibration container and wash the sensor head under regular tap water.
11. Retrieve the data from the data logger as per the steps in [Download](#).
12. The calibration data should now be displayed in the **Plot** view. In the Properties view, go to the **Analysis** tab > **Calibration** tab.

13. Select the **Turbidity sensor** type from the drop-down list.
14. The **Number of Samples** field is automatically set to **100**.
This value is the number of sample points Ruskin will average to calculate the calibration coefficients for the sensor. Typically, this value should be in the range of 50 to 100 samples.
15. Click on a stable point in the **Plot** view corresponding to 0 NTU. In the table in the first row, under **Real Avg**, enter 0 and press enter.
16. Select the checkbox in the second row in the table, then click on a stable point in the **Plot** view corresponding to the reading of your turbidity solution. In the table in the second row, under **Real Avg**, enter the value of your turbidity solution and press enter.
17. Ruskin automatically calculates the calibration coefficients, and the values appear in **Calculated coefficients**. Clicking the **Copy** button saves the new calibration coefficients to the clipboard.
18. Follow the steps in [Change calibration coefficients](#) to update the coefficients for this sensor in the data logger.

 By using the above formula and changing the volume of distilled water and Formazin solution, you can prepare different calibration points or different volumes for checking the linearity of the turbidity sensor or getting close to real turbidity value of standard turbidity solution.

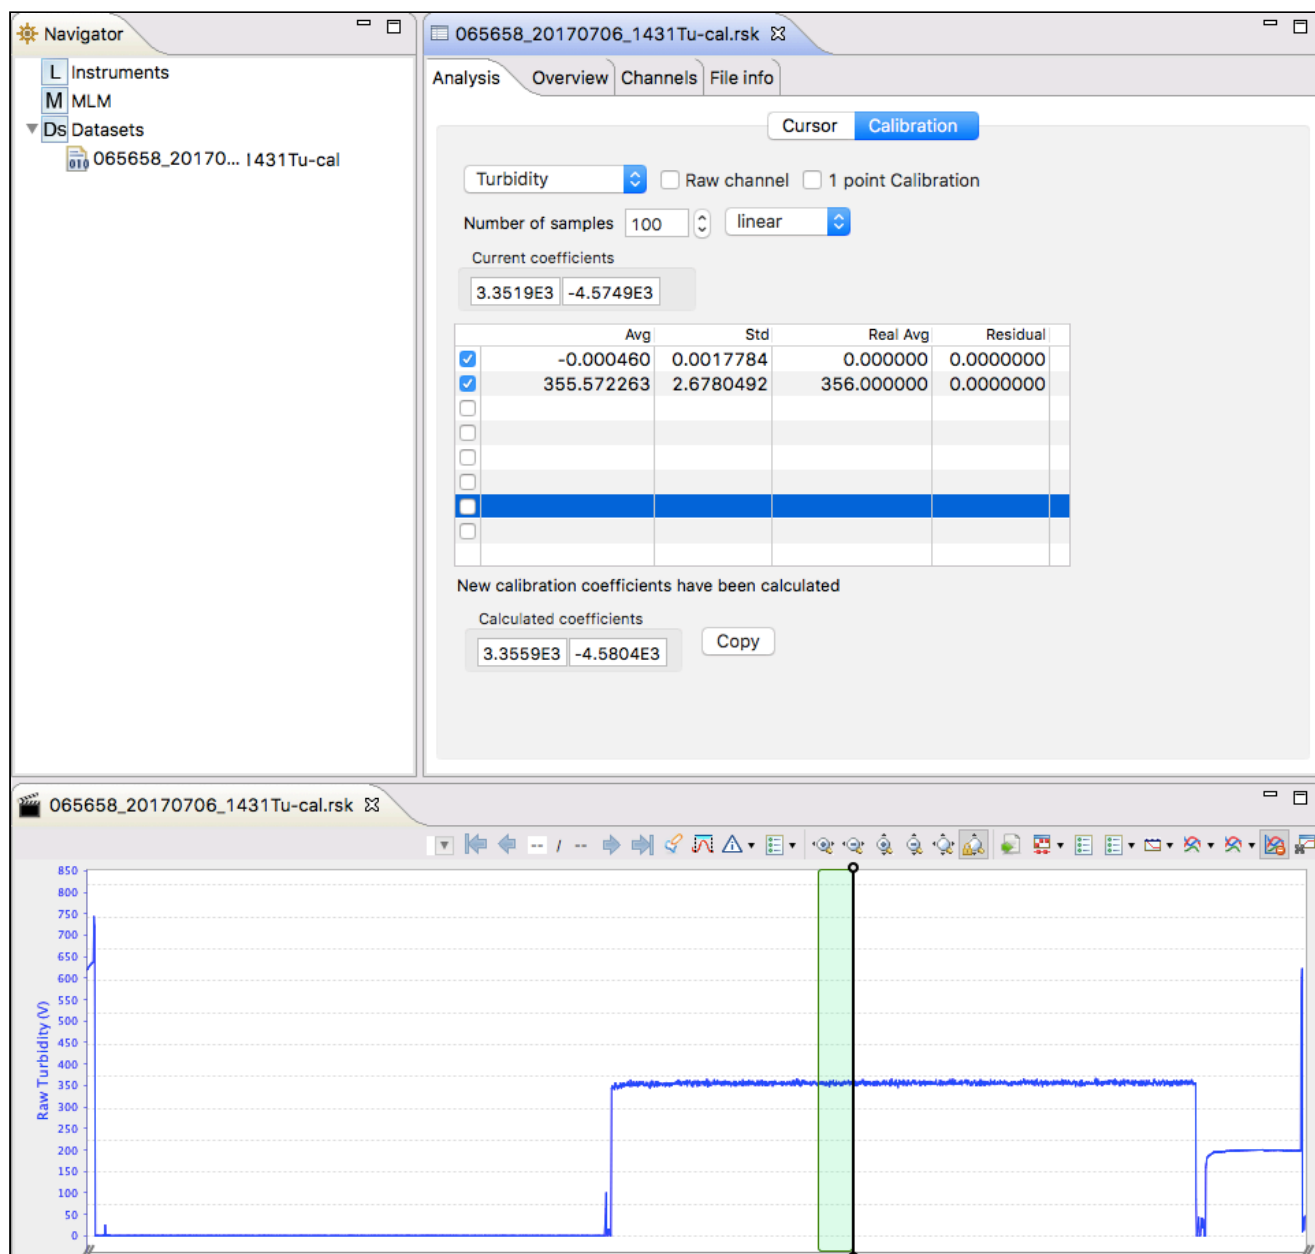

14.4.2 One-point calibration


Using the same procedure as in the 2-point calibration, one can use only the distilled water or formazin standard to generate new coefficients from a single point.

RBR suggests using the one-point calibration for establishing a new "0" value only, as unless one is very confident on their non zero point they may put the unit out of specification.

After you have generated a dataset of your single point as described in the procedure above follow the steps below:

1. Retrieve the data from the data logger as per the steps in [Download](#).

2. The calibration data should now be displayed in the **Plot** view. In the Properties view, go to **Analysis** tab > **Calibration** tab.
3. Select the **Tu sensor** type from the drop-down list.
4. The **Number of Samples** field is automatically set to **100**.
This value is the number of sample points Ruskin will average to calculate the calibration coefficients for the sensor. Typically, this value should be in the range of 50 to 100 samples.
5. Click on a stable point in the **Plot** view corresponding to 0 NTU. In the table in the first row, under **Real Avg**, enter 0 and press enter.
6. Ruskin automatically calculates the calibration coefficients, and the values appear in **Calculated coefficients**. Clicking the **Copy** button saves the new calibration coefficients to the clipboard.
7. Follow the steps in [Change calibration coefficients](#) to update the coefficients for this sensor in the data logger.

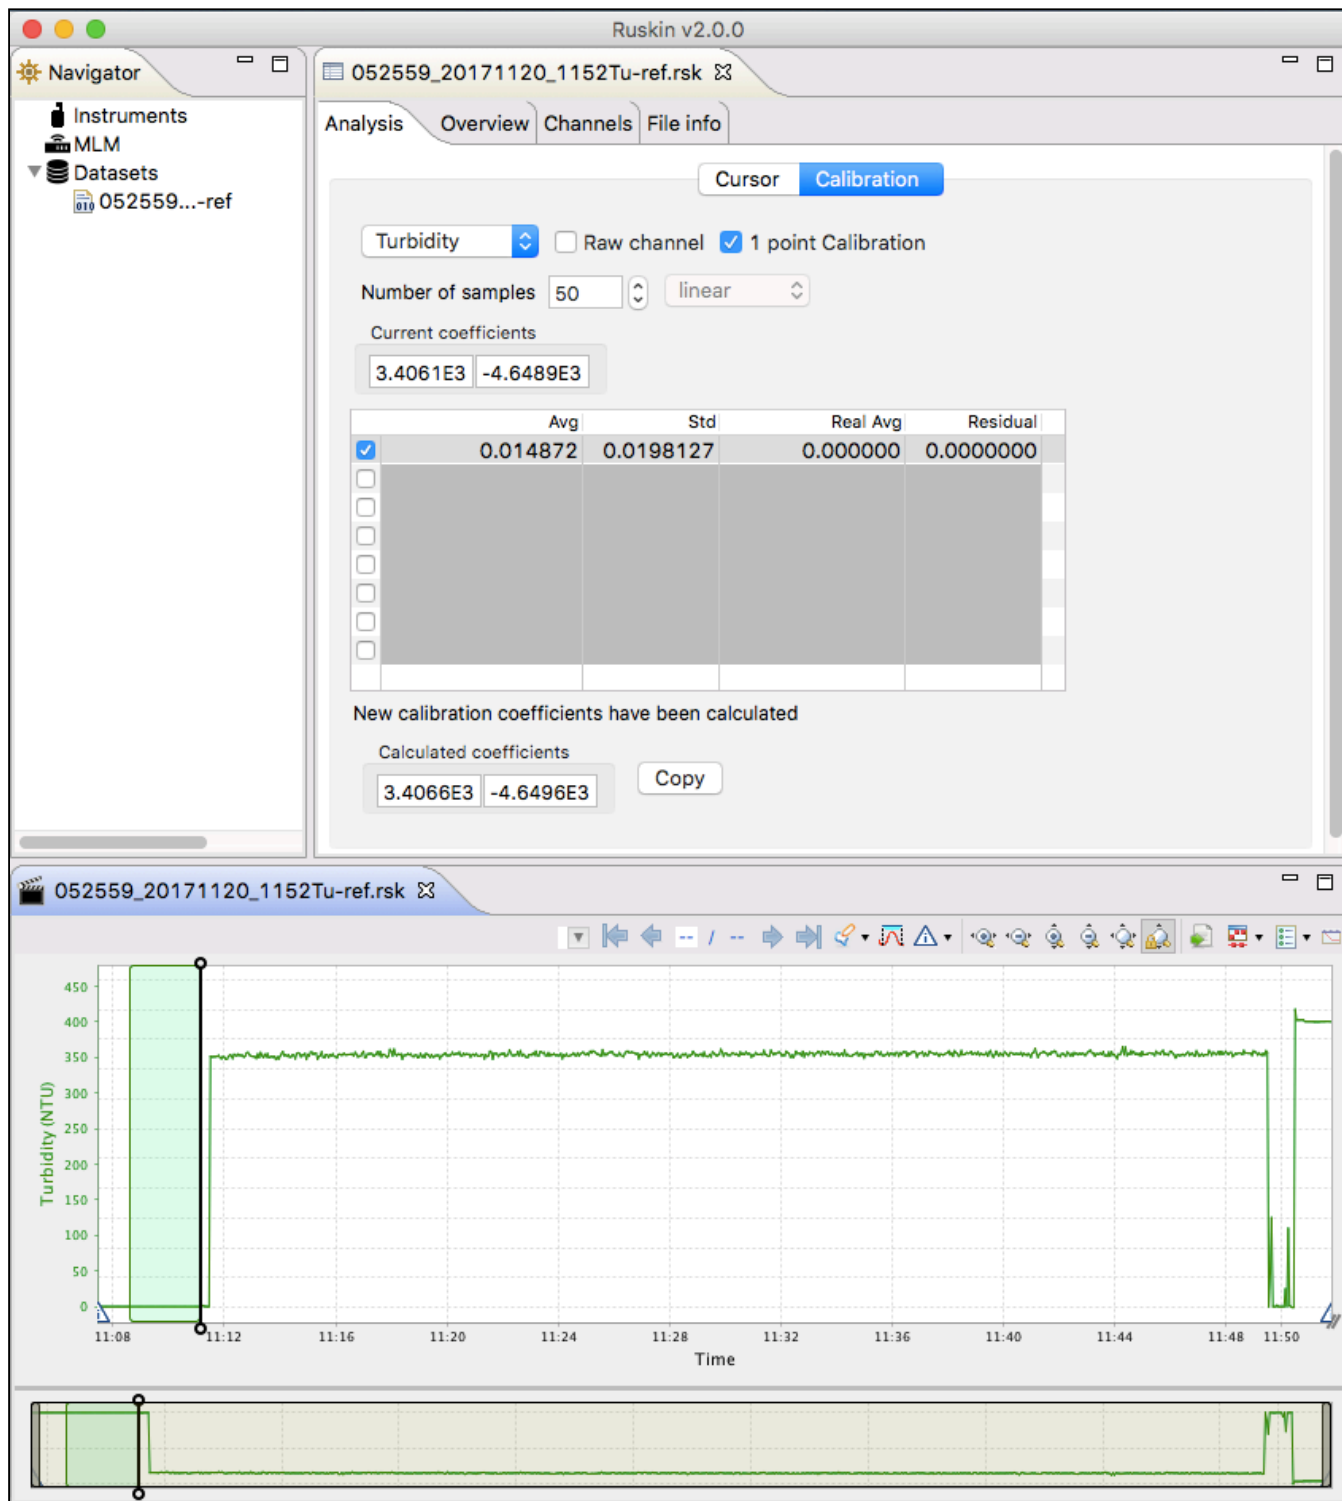

14.5 Idronaut pH calibration

Calibration of the pH sensor should use two or more pH buffers and should be carried out every day that the electrode is used for optimum accuracy. It is recommended that a pH 7 buffer be used to check the zero point and an acid and an alkaline buffer used to set the slope. RBR uses pH 4 and pH 10 to measure the slope.

Steps

1. In Ruskin, configure the logger to sample at a fast rate, between 6Hz and 3 seconds.
2. Use **Sync to PC** to ensure the logger clock is synchronized to the PC clock, and ensure the end time is set so that the logger will keep sampling until calibration is complete.
3. Submerge the pH sensor in the pH 4 buffer solution for at least 15 minutes near the stirrer so that it is in the best mixed area of the bath.




Ensure that the pH sensor is rinsed with clean water between each sample reading to avoid contamination between buffer values.

Ensure that both the pH and Reference electrode are submerged in the same solution.


If the logger has a pH/ORP sensor and an Oxyguard DO sensor, it is advisable to ensure that the DO sensor is submerged in the buffer during measurement.

4. Submerge the pH sensor in the pH 7 buffer solution for at least 15 minutes near the stirrer so that it is in the best mixed area of the bath.
5. Submerge the pH sensor in the pH 10 buffer solution for at least 15 minutes near the stirrer so that it is in the best mixed area of the bath.
6. Retrieve the data from the data logger as per the steps in [Download](#).
7. The calibration data should now be displayed in the **Plot** view. In the **Properties** view, go to the **Analysis** tab > **Calibration** tab.
8. Select the **pH sensor** type from the drop-down list.
9. The **Number of Samples** spinner box is automatically set to **100**.
This value is the number of sample points Ruskin will average the calibration coefficients for the sensor. Typically, this value should be in the range of 50 to 100 samples.
10. Click on a stable point in the **Plot** view corresponding to pH 4. In the table in the first row, under **Real Avg**, enter 4 and press enter.
11. Select the checkbox in the second row in the table, then click on a stable point in the **Plot** view corresponding to pH 7. In the table in the second row, under **Real Avg**, enter 7 and press enter.
12. Select the checkbox in the third row in the table, then click on a stable point in the **Plot** view corresponding to pH 10. In the table in the third row, under **Real Avg**, enter 10 and press enter.
13. Ruskin automatically calculates the calibration coefficients, and the values appear in **Calculated coefficients**. Clicking the **Copy** button saves the new calibration coefficients to the clipboard.
14. Follow the steps in [Change calibration coefficients](#) to update the coefficients for this sensor in the data logger.

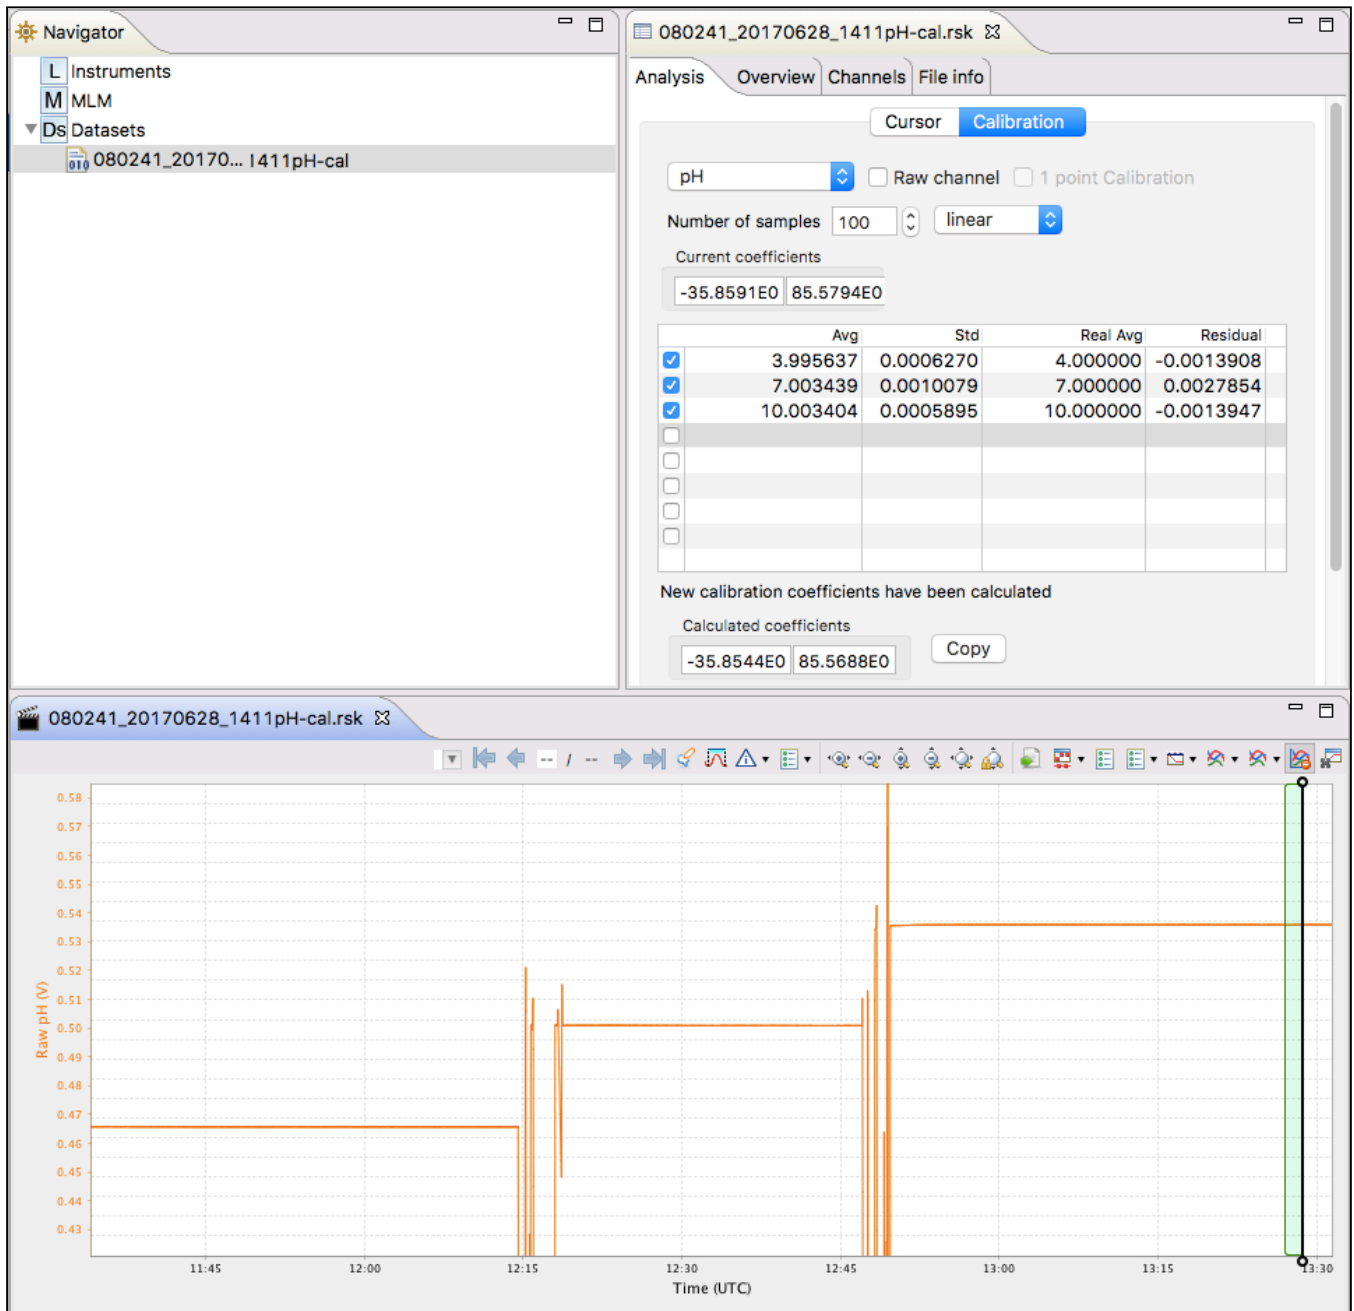

14.6 RBRcoda T.ODO - User calibration

Ruskin uses a different calibration method for the RBRcoda T.ODO User calibration than the other DO sensors. This document outlines the process to complete a calibration using the plot window method.

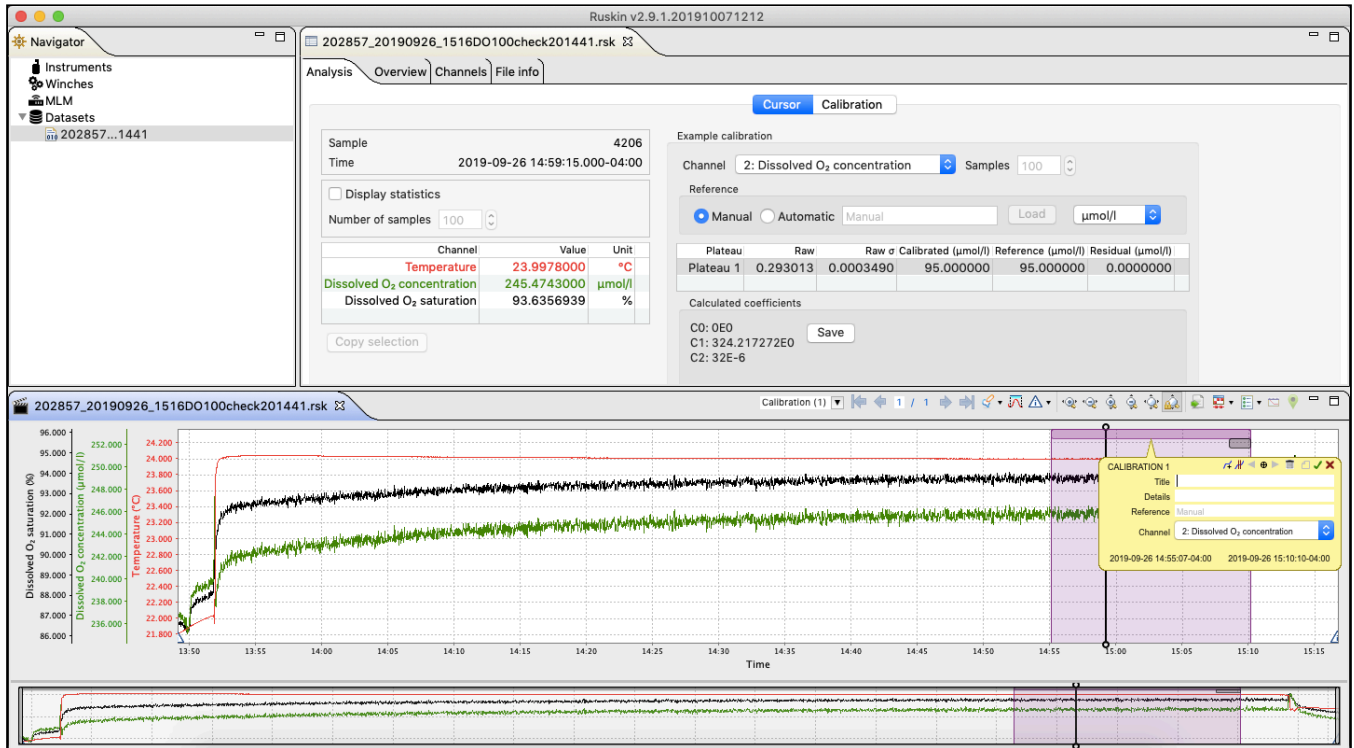

14.6.1 Collecting a calibration file

Please refer to the User Guide section 14 (http://files.rbr-global.com/upload/files/Ruskin_User_Guide_Standard_loggers_.pdf) for information on collecting data for the dissolved oxygen saturation of 0% and 100%. This method can be used to do a one-point or two-point calibration. The 100% point, or a reference value as close as possible to 100%, is our recommendation for the one-point calibration.


When doing a second point at 0% using sodium sulphite we recommend rinsing the sensor immediately after and then leaving it in a saturated bath until it reaches a plateau. This will reduce the possibility of residual being left under the foil and keep the solution from affecting the sensor's next samples.

14.6.2 Performing a calibration


Performing a calibration requires that a calibration region be defined which contains a set of plateau markers. See **Creating a calibration region** and **Plateau detection** sections for information on how to generate these items. Once this has been complete, reference data must be entered. See the **Reference data entry** section for details on how to enter in reference data. The data for the calibration is summarized on the **Cursor** tab on the **Analysis** page.

Ruskin will automatically calculate new coefficients each time data is altered whether it be an alteration of the plateau location or changes to reference data.

If there are residuals that are highlighted in **red** it may mean that a plateau marker is not seated correctly on the actual data of the plateau. Each plateau can be moved into the correct position by clicking on the marker and dragging the mouse left or right.

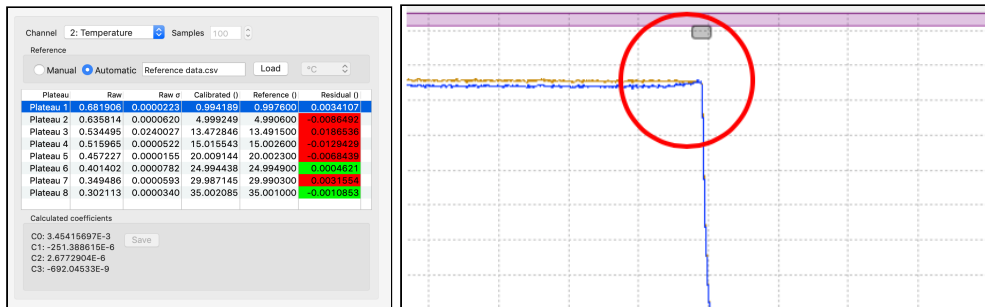


The **Save** button will be enabled, and the calibration will be completed once all of the plateau residuals are valid, indicated by being highlighted in green colour. Saving the calibration performs two operations; stores the newly generated coefficients into the RSK file and recalculates the data and stores the new coefficients into a connected instrument with the same serial number. The connected instrument must be stopped to update the coefficients.

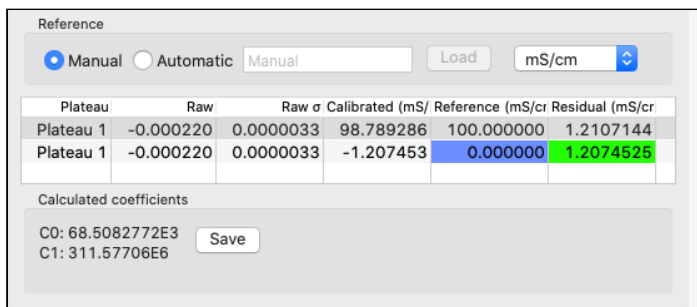


14.6.3 Creating a calibration region

1. Open a dataset containing the calibration data
2. From the plot toolbar select the annotation creation button. Select the **Calibration** option from the dropdown menu.

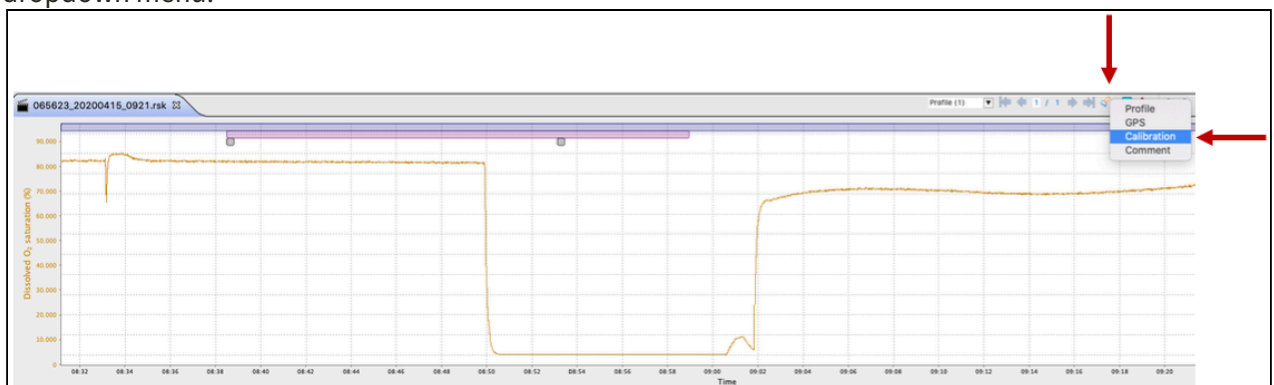

3. Move the mouse pointer to the first data point, hold down the left mouse button, and move the pointer to the last data point, then release the mouse button.


A calibration annotation will now be created and selected, displaying the information bubble.

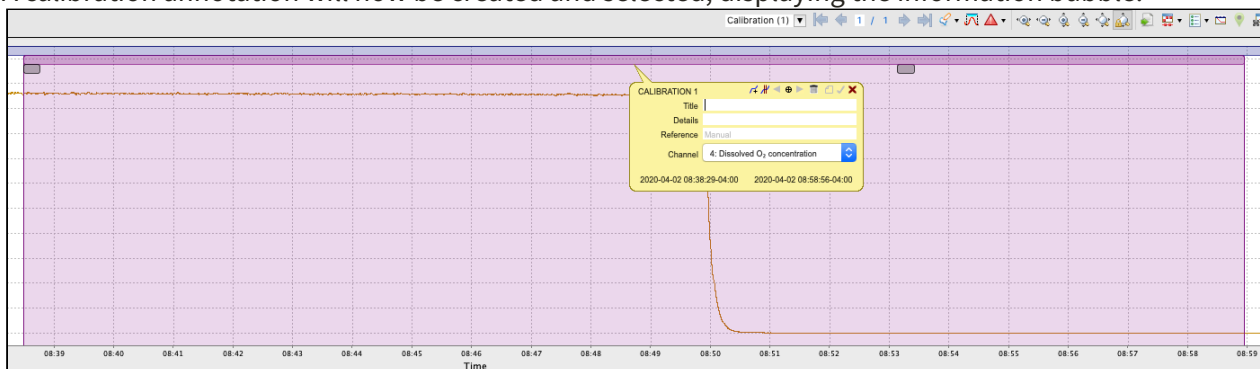

4. Filling in the title and details fields are not necessary; however, they may come in handy if there are multiple calibration regions in the same file.
5. From the Channel selection widget, select the channel for which you want to calibrate. Channels are labelled by both name and index.

Channel 4: Dissolved O₂ concentration


6. Click the checkmark in the top right of the bubble to save the changes.

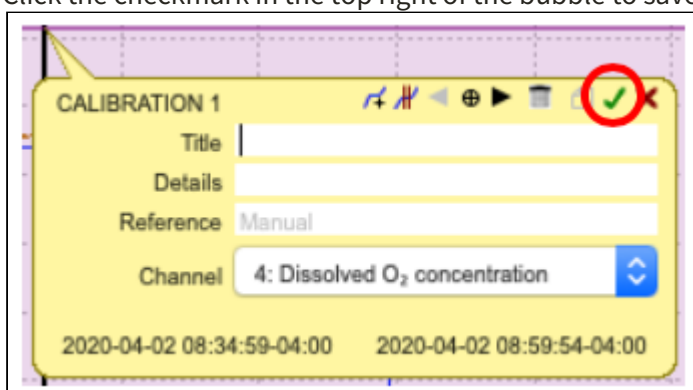


14.6.4 Plateau creation

Automatic


1. Click the **Detect plateaus** button in the annotation toolbar.

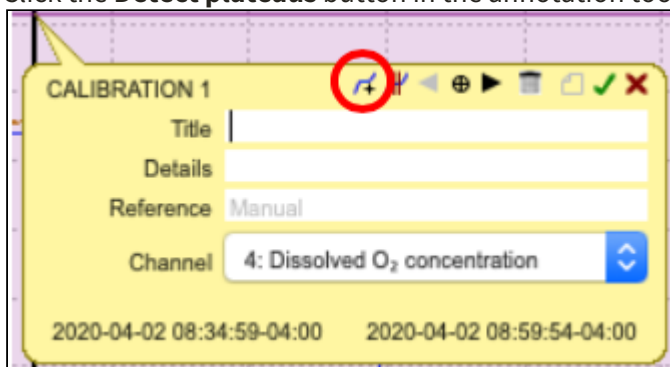

2. If there are existing plateaus, a warning dialogue will pop up, indicating that all existing plateau markers will be removed. Click 'Proceed' to continue.

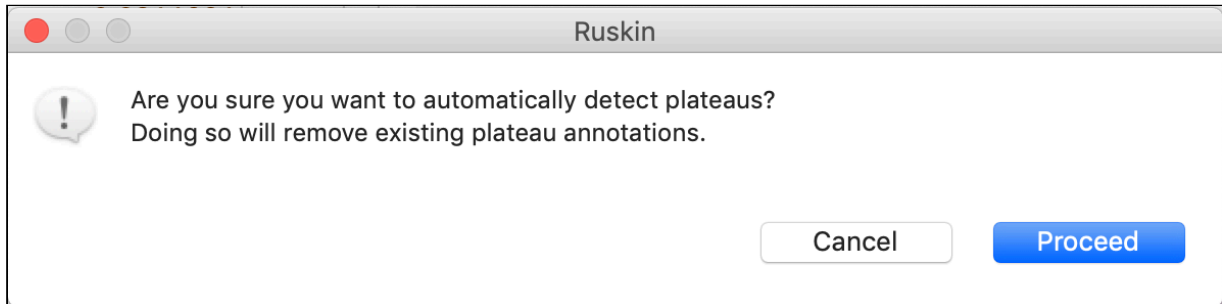


3. All detected plateaus will be visible as grey markers under the calibration region marker

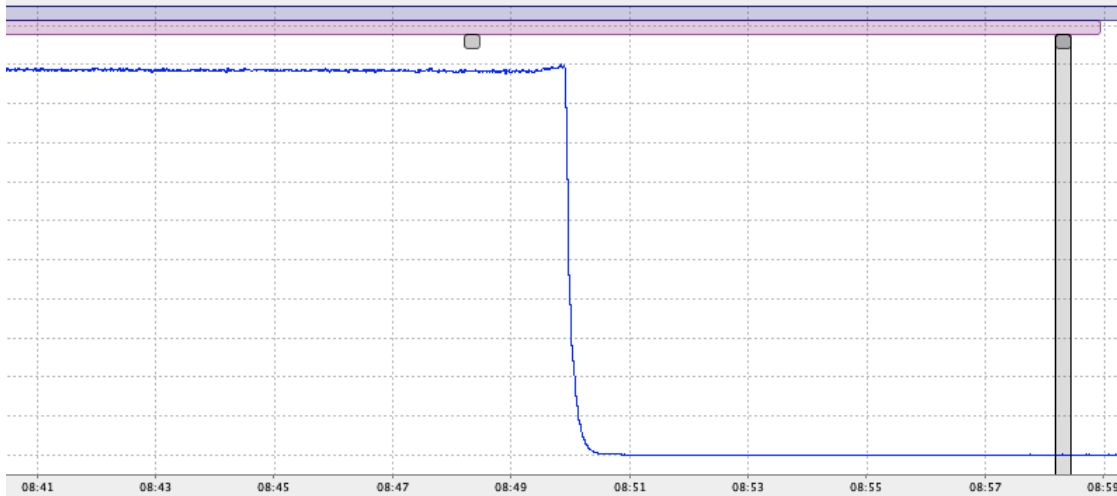


4. Plateaus that should not be used can be deleted. See **Plateau deletion**

Manual


1. Click the **Create a plateau** button in the annotation toolbar.

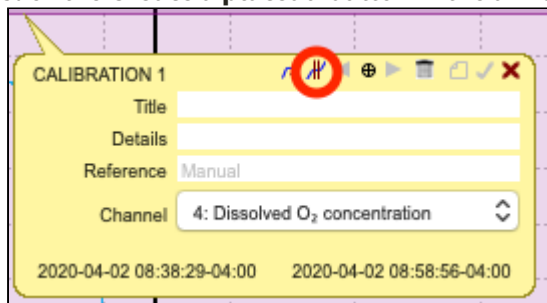

2. A single plateau marker will be added to the start of the calibration region.

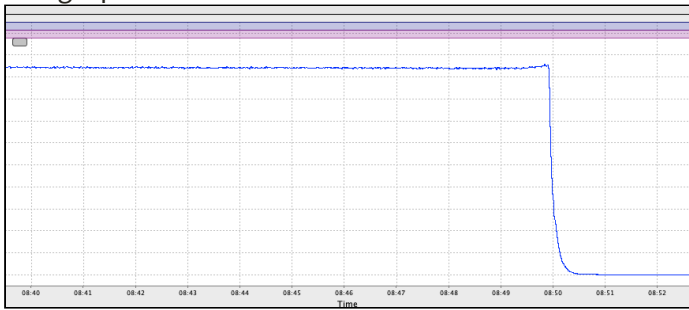


3. Clicking the **Create plateau** button a second time will create a new plateau marker to the right of any existing plateaus.

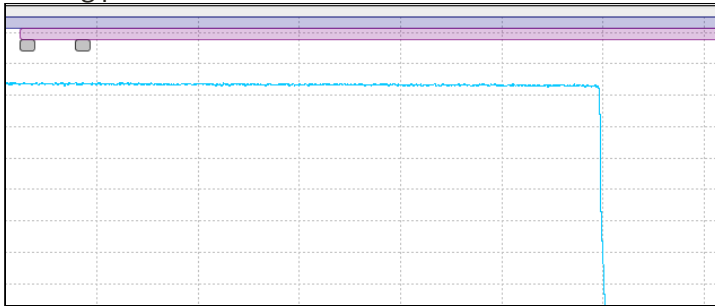


14.6.5 Plateau deletion


1. Click on a plateau. The information bubble will appear, and the marker will highlight.

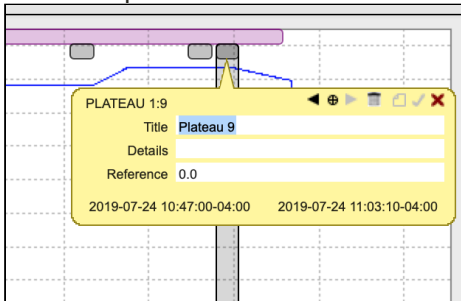

2. Click the trash can icon

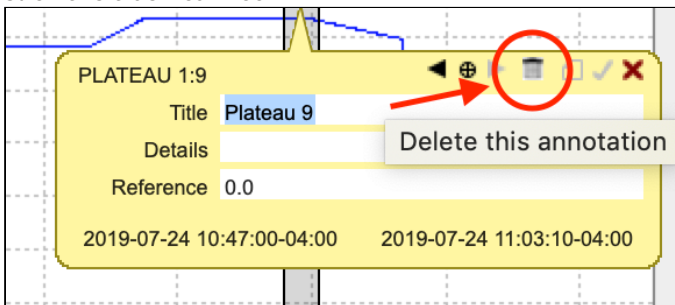

- Click **Delete** on the confirmation dialogue

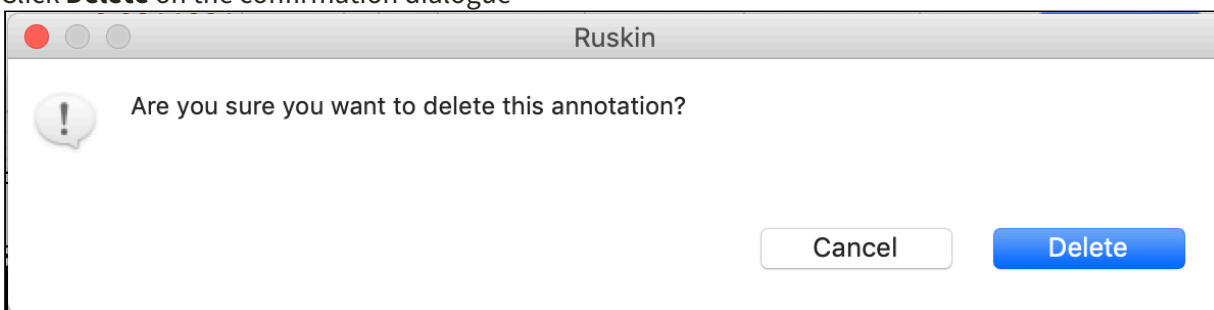

14.6.6 Reference data entry

Reference data can be entered either manually or automatically. The manual process requires that the operator enters a reference value for each plateau. The automatic functionality allows the operator to upload a CSV file containing the reference data. By default, the calibration is set to **Manual** entry mode.

Reference

☒ Manual
☐ Automatic
Manual
Load

The reference can be edited in units of % or $\mu\text{mol/l}$ by selecting the preferred unit in the drop-down menu.

Cursor
Calibration

Channel
4: Dissolved O₂ concentration
Samples
100

Reference

☒ Manual
☐ Automatic
Manual
Load
μmol/l

Plateau	Raw	Raw σ	Calibrated ($\mu\text{mol/l}$)	Reference ($\mu\text{mol/l}$)	Residual ($\mu\text{mol/l}$)
Plateau 1	0.291827	0.0006492	219.980092	220.000000	0.0199077
Plateau 2	0.014210	0.0000112	-0.000000	0.000000	0.0000000

Calculated coefficients


C0: -11.2604861E0
C1: 792.457953E0
C2: 32E-6
Save

Automatic

The CSV file for the automatic data entry must have two columns; time (in ISO 8601 format), and data (in float/double format). For example:

2020-04-02T08:39:26.667-4:00, 220.0
2020-04-02T08:58:16.333-4:00, 0.0

Once the file has been selected, a dialogue box will appear asking for you to define the column which contains the time and which one contains the reference data:

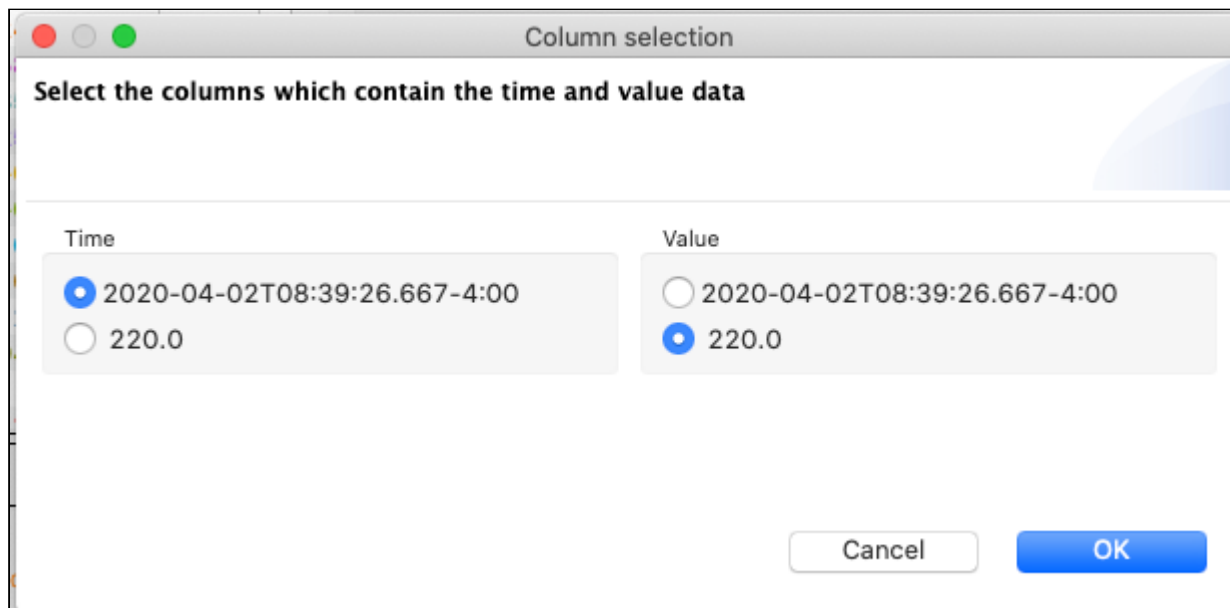


A dialog box titled "Column selection" with the instruction "Select the columns which contain the time and value data". It has two sections: "Time" and "Value". In the "Time" section, the first option "2020-04-02T08:39:26.667-4:00" is selected with a blue radio button, and the second option "220.0" is unselected. In the "Value" section, the first option "2020-04-02T08:39:26.667-4:00" is unselected, and the second option "220.0" is selected with a blue radio button. At the bottom right are "Cancel" and "OK" buttons.

Time

The time in the CSV file will need to be a value that falls within the region of the plateau, however, the CSV file can hold additional rows with times that are outside of the plateau region.

Manual

1. Click the **Manual** option.
2. Click the **Reference** cell on the plateau to be edited.
3. Enter in a value and click the Enter/Return key on the keyboard.

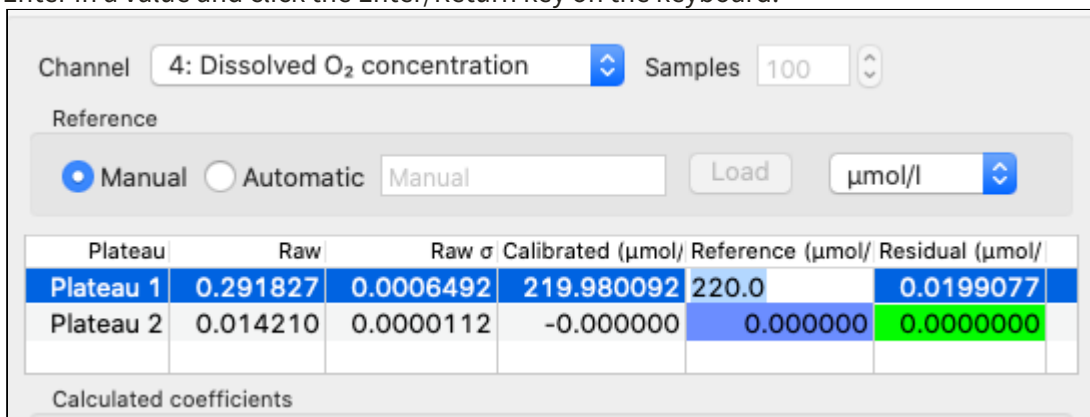

The interface shows a "Channel" dropdown set to "4: Dissolved O₂ concentration" and a "Samples" input set to "100". Below is a "Reference" section with "Manual" selected and "Automatic" unselected. A text input contains "Manual", a "Load" button is next to it, and a unit dropdown is set to "µmol/l". Below this is a table with 7 columns: Plateau, Raw, Raw σ, Calibrated (µmol/), Reference (µmol/), and Residual (µmol/). The table has two rows: "Plateau 1" and "Plateau 2".


Plateau	Raw	Raw σ	Calibrated (µmol/)	Reference (µmol/)	Residual (µmol/)
Plateau 1	0.291827	0.0006492	219.980092	220.0	0.0199077
Plateau 2	0.014210	0.0000112	-0.000000	0.000000	0.0000000

Below the table is a section labeled "Calculated coefficients".

4. Complete these previous steps for all points in the calibration


Annotation - Reference entry

Alternatively, the reference value can be entered on the annotation for the plateau:

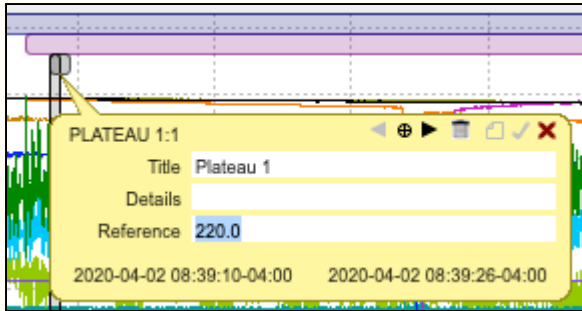


Saving coefficients

If the residuals are within an acceptable range (highlighted in green) the save button will appear in the **Calculated coefficients** section:

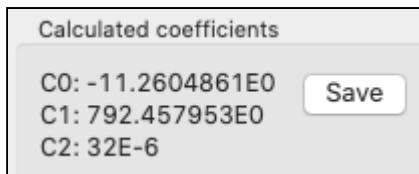


When the **Save** button is selected Ruskin will try to write the coefficients to the instrument if it is connected:

If it is successful it will display **Writing to instrument...Complete**

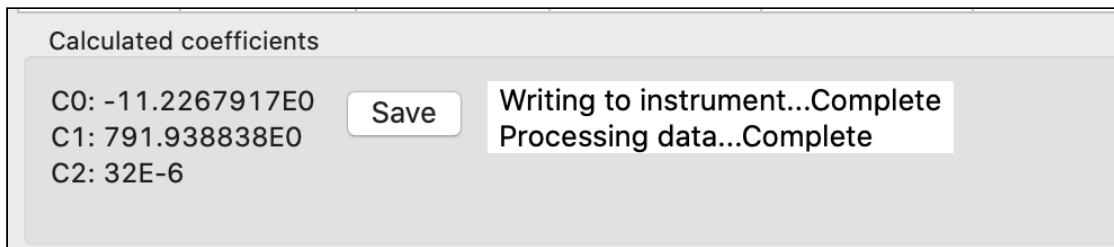

If it is not successful it will display **Warning: Unable to find Instrument RBRconcerto #####**

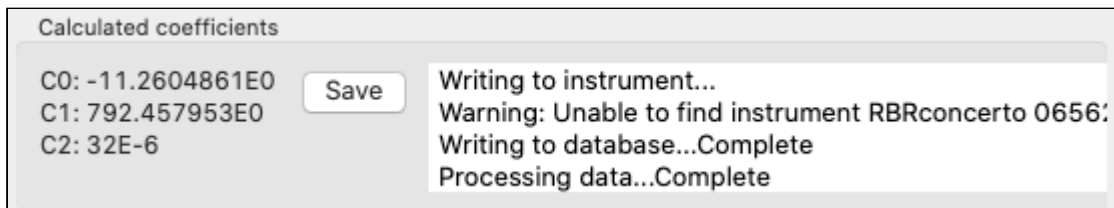

15 Preferences

Ruskin sets global preferences that require no changes in many situations. However, as you learn more about what Ruskin can do, you may want to change some of these defaults to better suit your requirements. The global preferences include:

- Where to store output files
- Plotting preferences
- Configuring derived channels
- Calculating derived channels when sensors are missing

You can change these preferences at any time.

15.1 Specify location for data files

You can control where data files are stored by default. Specify these locations before downloading any data.

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.
3. In **File location**, type a directory name in the **Directory for RSK files** text box, or click **Browse** to locate the directory where you want to store data files.
4. Click **Apply** or **OK**.

You can change where future data files are stored by default at any time. The change takes effect immediately.


15.2 Specify location for realtime data files

You can control where realtime files are stored by default. Specify these locations before connecting any instrument.

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.
3. In **File location**, type a directory name in the **Directory for realtime RSK files** text box, or click **Browse** to locate the directory where you want to store data files.
4. Click **Apply** or **OK**.

You can change where future data files are stored by default at any time. The change takes effect immediately.

 Realtime files are generated when a connected instrument is streaming or when the user enables fetching mode on the instrument.


15.3 Specify location for log files

You can control where log files are stored by default. Specify these locations before downloading any data.

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.

3. In **File location**, type a directory name in the **Directory for log files** text box, or click **Browse** to locate the directory where you want to store log files.

 Log files are used when you request RBR support.

4. Click **Apply** or **Close**.

You can change where future log files are stored by default at any time. The change takes effect immediately.

15.4 Specify Language selection


Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.
3. In **Language selection**, select a language from the list.
4. Click **Apply** or **OK**.

15.5 Using advanced sampling controls

Steps


1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.
3. In **Sampling control**, select **Enable advanced sampling controls** check box to change from the simple control.
4. Click **Apply** or **OK**.

 Simple control: provides a default list of fixed values.
Advanced control: provides the user the ability to enter any values.


15.6 Using advanced calibration controls

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **General**.
3. In **Calibration control**, select **Enable advanced calibration controls** check box to change from the simple control.
4. Click **Apply** or **OK**.

 Simple control: provides the user the ability to view and edit the main coefficients (C) for any channel.
Advanced control: provides the user the ability to view and edit all main and dependency calibration coefficients (C,X) for all channels.

The Preferences dialogue box is shown below:

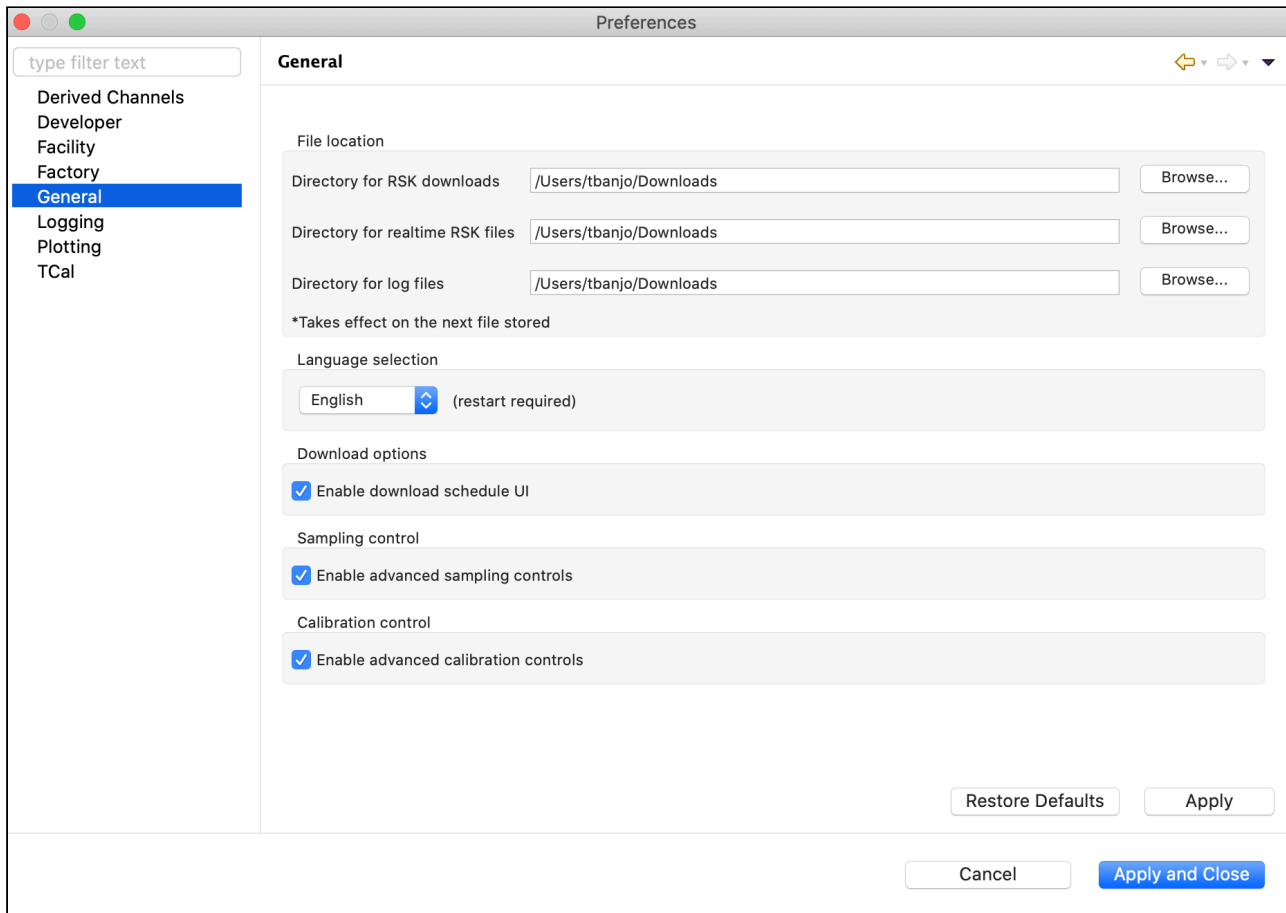

15.7 Derived channel preferences

⚠ The derived channels settings in **Preferences** was originally intended for XR(X),1060, 2050, and 1050 RBR data loggers. It does not apply to newer generations.

Newer generations calculate all the possible derived channels for that specific logger.

Use the [Parameters tab](#) to set up initial derived channel parameters.

For downloaded files, use the dataset [Parameters tab](#).

Derived channels contain calculated data based on data from measured channels. In the **Derived Channels** section of the **Preferences** dialog box, you can choose additional channels derived from measured channels. You can also set the salinity, pressure, and temperature values used to calculate the derived channels when a sensor is not available.

⚠ If you suspect that the derived channel value is incorrect, check to make sure that the **no sensor present** values are correct. For example, if a Dissolved Oxygen saturation measurement is made in a lake at 8 degrees but the **no sensor present** salinity value is 35 and the temperature is 15 degrees the concentration reported will be incorrect. Adjust the **no sensor present** values and re-compute.

Derived channels are included by default in the **Plot** view and in datasets.

15.7.1 Add depth as a derived channel

If your logger has a pressure channel, you can use its measurements to derive a depth channel. The data calculated for this derived channel appears along with measured channels in the **Plot** view and in datasets.

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side of the **Preferences** dialog box, click **Derived Channels**.
3. On the **Depth** tab, select the **Enable Depth Channel** checkbox.
For new loggers, all derived channels are calculated regardless of the checkbox status.
4. In the **Atmospheric Pressure** box, type a deciBar value for the atmospheric pressure on the logger or use the default value. This value corrects the pressure measurements during the depth calculation.
5. Click either the **Simplified calculation** or **Seawater calculation**, which is a calculation based on a UNESCO technical paper:
 - a. If you want to use the simplified calculation, type the actual water density, or use the default value. Note that for freshwater, the density should be set to 1.0.
 - b. If you want to use the UNESCO seawater calculation, specify the latitude of the data collection in degrees and minutes.

15.7.2 Add dissolved oxygen as a derived channel

You can derive a dissolved oxygen channel that measures oxygen saturation as a percentage. The data calculated for this derived channel appears along with measured channels in the **Plot** view and in datasets.

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side of the **Preferences** dialog box, click **Derived Channels**.
3. Click the **Dissolved O₂** tab and select the **Enable Dissolved Oxygen Channel** checkbox.
For new loggers, all derived channels are calculated regardless of the checkbox status.
4. If any of your loggers use the Oxyguard DO sensor to measure oxygen saturation and you want to use the Weiss equation, select the **Calculate concentration using the Weiss equation** checkbox and select the output unit, one of $\mu\text{Mol/L}$, mg/L or mL/L .
The Weiss equation requires values for temperature and salinity. If your logger does not measure these things, you can specify standard values on the **No sensor values** tab.
5. If any of your loggers use the Aanderaa Optode DO sensor to measure oxygen concentration, select the **Calculate concentration** checkbox and select the output unit, either mg/l or mL/l .
6. If any of your loggers use the Aanderaa Optode DO sensor to measure oxygen saturation, select the **Calculate saturation using the Garcia and Gordon equation** checkbox.
The Garcia and Gordon equation requires values for temperature and salinity. If your logger does not measure these things, you can specify standard values on the No sensor values tab.

15.7.3 Calculate derived channels when sensors are missing

When your sensors do not provide the salinity, pressure, or temperature values needed to calculate derived channels, you can specify actual values to use instead.

Steps

1. From the **Options** menu, click **Preferences**.

2. In the list on the left side of the **Preferences** dialog box, click **Derived Channels**.
3. Click the **No sensor values** tab.
4. In the boxes provided, specify the values that you want to use when actual values are not provided by your sensors.

15.8 Specifying plotting preferences

You can specify how you want the graphical display in the **Plot** view to behave by default. With the exception of choosing colours for each channel, these preferences can be overridden for a particular graphical display in the **Plot** view.

✔ You can click **Apply** to save your changes without closing the dialogue box.

15.8.1 Channel visibility tab

The **Channel visibility** tab displays many options to hide or show specific information in the **Plot** view. These settings are applied when displaying a dataset in the **Plot** view. Some information in this tab is enabled by default. When you select any of the checkboxes in this tab, the action is immediate.

Channel visibility tab with default settings

The screenshot shows the 'Plotting' dialog box with the 'Channel visibility' tab selected. The 'Channel colours' tab is also visible. The 'Channel visibility' tab contains the following options:

- ☒ By default, hide any measured channel underlying a simple derived channel
- ☐ Show dataset events by default
- ☒ Show dataset errors by default
- ☐ Automatically save live data to a file
- ☐ By default, hide all measured channels
 - ☐ Hide temperature channels
 - ☐ Hide pressure channels
 - ☐ Hide dissolved O2 channels
 - ☐ Hide pH channels
 - ☐ Hide ORP channels
 - ☐ Hide transmittance channels
 - ☐ Hide voltage channels
 - ☐ Hide conductivity channels
 - ☐ Hide distance channels
 - ☐ Hide fluorometry channels
 - ☐ Hide PAR channels
 - ☐ Hide BPR channels
 - ☐ Hide turbidity channels
- ☐ By default, hide all derived channels
 - ☐ Hide salinity channels
 - ☐ Hide distance channels
 - ☐ Hide density anomaly channels
 - ☐ Hide speed of sound channels
 - ☐ Hide depth channels
 - ☐ Hide specific conductivity channels
 - ☐ Hide pressure channels
 - ☐ Hide dissolved O2 channels


Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **Plotting**.
3. On the **Channel visibility** tab, select the checkbox for the information you want hidden.
Events appear at the x-axis as a vertical grey line with a brief text to indicate the type of event, such as STP for a stop event in a dataset.
4. To hide all measured channels, select **By default, hide all measured channels** checkbox.
5. To hide all derived channels, select **By default, hide all derived channels** checkbox.
6. To show information, clear the checkbox beside the information you want to be shown.

15.8.2 Channel colours tab

The **Channel colours** tab allows you to choose a different colour for each channel that is shown for information currently running in **Plot** view, or from an opened dataset. If there is no colour available that you like, you can create your own colour. When you select a colour, the new colour is immediately updated by Ruskin.

Channel colours tab with the **Colour** dialogue box to customize a colour for a channel

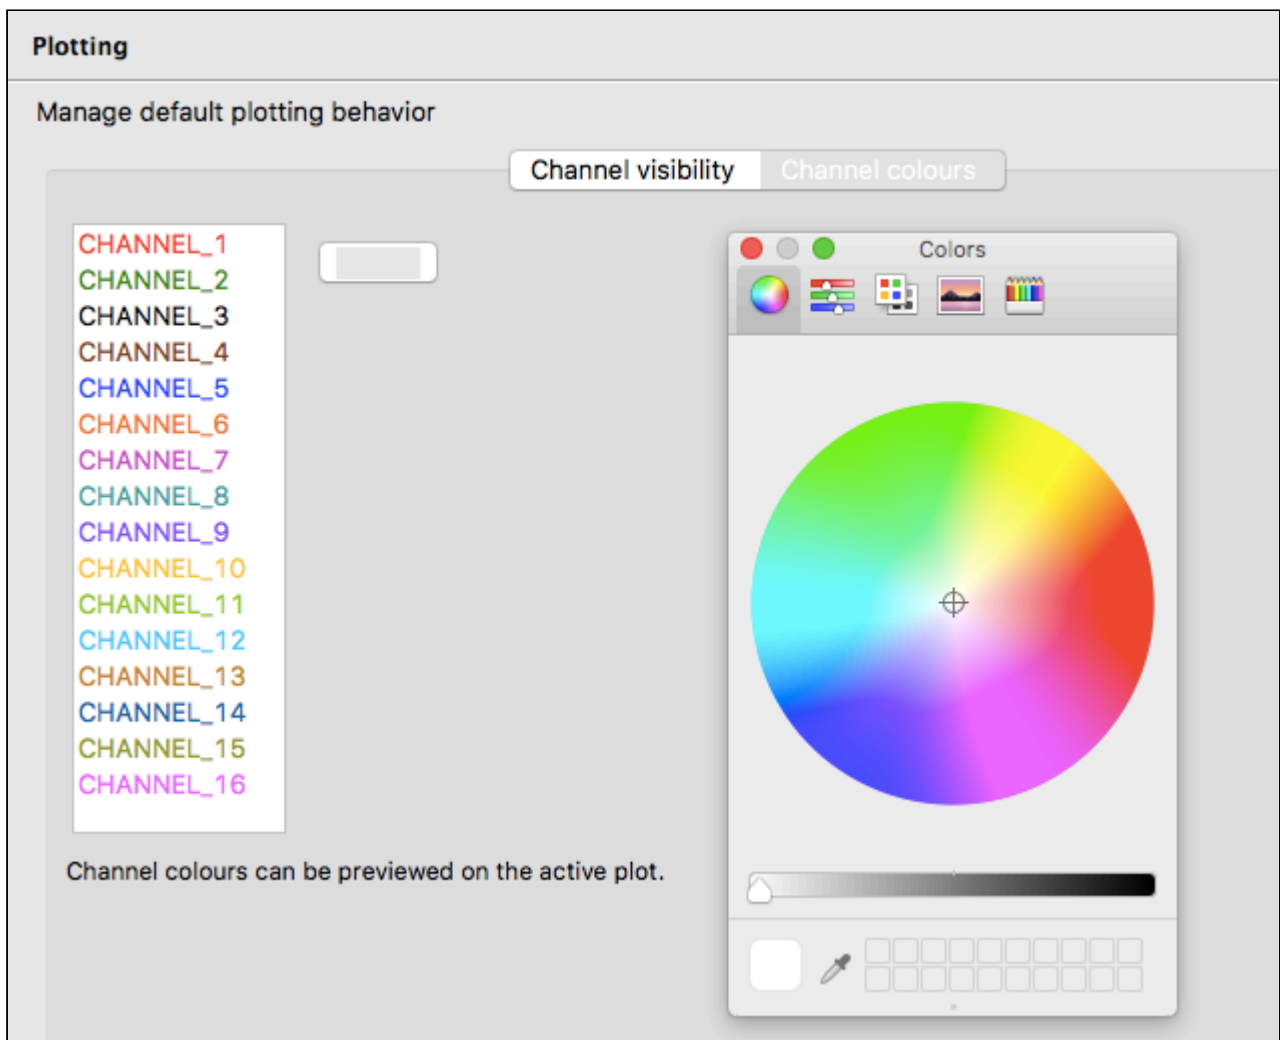

Steps

1. From the **Options** menu, click **Preferences**.
2. In the list on the left side, click **Plotting**.
3. Click the **Channel colours** tab.
4. In the channels listed, click the channel you want to change the colour for.
5. Click the colour box that appears beside the channel list.
6. With the colour dialogue box open, select a colour from the **Basic colour** area.
7. Select **OK** to apply the colour to the channel.
8. To create a custom colour:
 - a. Repeat steps 4 and 5.
 - b. Click **Define Custom Colours** and then choose a colour.
 - c. Click **Add to Custom Colours** to add the new colour to **Custom colours**.
 - d. Click **OK** to apply the new custom colour to the channel.